Pressure Switch/Reed Switch Type

IS10 Series




Overall height: 52 mm *Previous type 58.5 mm Compared with IS1000

■100 V AC/DC specifications

Set pressure range 0.1 to 0.4 MPa

Service life: 5 million cycles

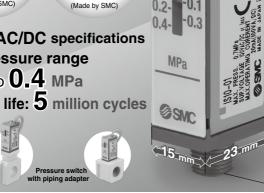

Can be connected to Modular type F.R.L. units. Pressure switch Lubricator Air filter

ZSE30 ISE30

> ZSE40 ISE40 ZSE10 ISE10

ISE70 ZSE80

ISE80 PS

ISA3 ISA2

ISE35

PSE IS

ISG

ZSM1

Specifications

with spacer

Pressure switch

Model	IS10-01			
Fluid	Air/Inert gas			
Proof pressure	1.0 MPa			
Max. operating pressure	0.7 MPa			
Set pressure range	0.1 to 0.4 MPa Option: 0.1 to 0.6 MPa			
Ambient and fluid temperature	-5 to 60°C (No freezing)			
Contacts	1a			
Error of scale	±0.05 MPa or less			
Hysteresis	Fixed 0.08 MPa or less			
Repeatability	±0.05 MPa or less			
Wiring specifications	Grommet, Lead wire length: 0.5 m Option: 3 m, 5 m			
Enclosure	Equivalent to IP40			
Port size	1/8			
Weight	62 g			

Switch Characteristics

Max. contact capacity	AC 2 VA, DC 2 W				
Voltage AC/DC	24 V or less	48 V	100 V		
Max. operating current and range	50 mA	40 mA	20 mA		

 
Electrical Circuit



Symbol



How to Order




				Nil	В	
U		Thr	ead type	nd type		
				+		
9		Seal Nil			None	
0			Seai	S	With seal	
				+		
		а	Set pressure	Nil	0.1 to 0.4 MPa	
73		a	range	6 Note1)	0.1 to 0.6 MPa	
	au			+		
_ p		Lead wire	Nil	0.5 m		
8	i-standard	b	length	Ĺ	3 m	
	<u> </u>		iengui	7	E m	

Scale plate

pressure unit P Note

Set Pressure Range

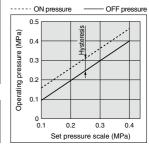

Semi-standard: Select one option each in a through c. Place them in alphanumerical

Example) IS10-N01-6PZ

Note 1) Set pressure range of 6P(L, Z) is 0.2 to 0.6 MPa (30 to 90 psi).


Note 2) This product is for overseas use only according to the new Measurement Law. (The SI unit type is provided for use in Japan.)

MPa

Both MPa and psi

Nil

Dimensions/Construction

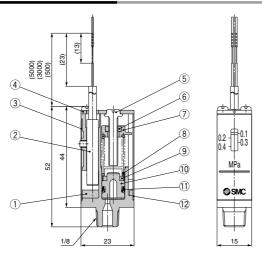

Component Parts

1 Body ZDC 2 Switch assembly — 3 Shield plate Steel sheet 4 Cover Steel sheet 5 Adjusting screw Brass 6 Hexagon nut Brass 7 Indicator PBT 8 Spring Stainless steel
3 Shield plate Steel sheet 4 Cover Steel sheet 5 Adjusting screw Brass 6 Hexagon nut Brass 7 Indicator PBT 8 Spring Stainless stee
4 Cover Steel sheet 5 Adjusting screw Brass 6 Hexagon nut Brass 7 Indicator PBT 8 Spring Stainless steet
5 Adjusting screw Brass 6 Hexagon nut Brass 7 Indicator PBT 8 Spring Stainless stee
6 Hexagon nut Brass 7 Indicator PBT 8 Spring Stainless stee
7 Indicator PBT 8 Spring Stainless stee
8 Spring Stainless stee

9 Magnet —
10 Piston POM
11 Seal piston NBR
12 Scale plate PC

Wiring

∕ Marning

Connect load before connecting with power source.


The switch will break instantly if no load is connected.

Make the wiring length as short as possible. When the load which is operated by the pressure switch is an inductive load, or the lead wire is 5 m or longer, use the contact protection box shown in the table below.

Otherwise, damage to the switch can result.

Part no. Voltage		Lead wire length		
CD-P11		Switch side: 0.5 m		
CD-P12	24 VDC	Load side: 0.5 m		

 · Internal circuit of contact protection box



 How to connect contact protection box Connect the lead wires from the body and the contact protective box side indicated "SWITCH." Make the lead wire as short as possible, within 1 m.

3. Dimensions of lead wire

Enclosure: ø 3.4 Insulator: ø 1.1 Conductor: ø 0.64

For details, refer to the operation manual.

Mounting

⚠ Warning

- When handling the product, hold the body and do not apply tensile stress to the power supply cable.
 Otherwise, damage may occur to the product.
- Avoid repeatedly bending or stretching the lead wire. Wiring which applies repeated bending and tensile stress to the lead wire can break the circuit. If the lead wire is damaged, causing operation failure, replace the product with a new one.
- 3. Do not drop or bump the product when handling the product.
- 4. Apply a wrench to the bottom of the product when screwing.

Turning it by applying a wrench on the top of the main body may cause damage to the product. Recommended tightening torque: 7 to 9 N·m





Mounting direction is available in either horizontal or perpendicular.

Operating Environment

▲Warning

- Avoid using a switch in a magnetic environment.
 It may cause a malfunction.
- 2. Do not use in such an environment, where water or oil is splashed

Since it is the open type construction, if water or oil make an ingress into the internal parts, the electric circuit will be corroded and may result in a malfunction or damage.

3. Avoid vibration.

Vibration may cause a malfunction or may cause setting to be incorrect.

Pressure Source

⚠ Warning

Operating fluids are either air or inert gas exclusively.

Never use other fluids. Never use in an environment where flammable fluid or gas is used. Since this is not an explosion-proof construction, it may lead to an explosive disaster.

- Not applicable to corrosive gas and liquid. Otherwise, damage to the body or liquid leakage can result.
- 3. Avoid use in vacuum applications. Switch may be imploded.
- 4. This product (IS10 series) uses a reed switch. If the chattering of the output signal is a problem, choose a solid state type pressure switch or adjust by PLC.

Pressure Setting

. Warning

 Set within the display pressure range of the scale plate.

⚠ Caution

- The pressure can be adjusted by rotating the adjustment screw. The red indicator goes up and down according to the adjustment.
 - Rotate the screw clockwise for high pressure.
- Use a screwdriver of a size suitable for the groove of the adjustment screw.
- Scale of switching set display is the set value at the pressure drop.
- The ON signal is output through the pressure set on the scale plate, to which the hysteresis is added for detecting the ON-pressure signal.
- The pressure displayed on the scale plate is a guideline only.

Measure the accurate pressure with the pressure gauge.



ZSE20 ISE20 ZSE30 ISE30

ZSE40

ISE40

ZSE10 ISE10

ISE70

ZSE80

ISE80

PS

ISA3

ISA2

ISE35

PSE


IS

ISG


ZSM1

Pressure Switch for Connecting to Modular/F.R.L. Units

 
Pressure Switch with Spacer



 Semi-standard: Select one option each in **a** through **c**. Place them in alphanumerical order. Example) IS10M-6LP-A




Note 1) Set pressure range of 6P(L, Z) is 0.2 to 0.6 MPa (30 to 90 psi).
Note 2) This product is for overseas use only according to the new Measurement Law. (The SI unit type is provided for use in Japan.)

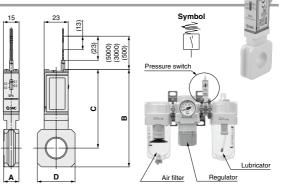

Model	Α	В	С	D	Applicable model
IS10M-20-A	11	74	64	28	AC20□-A
IS10M-30-A	13	85	71	30	AC25□-A, AC30□-A
IS10M-40-A	15	93	75	36	AC40□-A
IS10M-50-A	17	97	77	44	AC40□-06-A
IS10M-60-A	22	Q1	67	53	ACSOUR ACSSUR ACSOUR

Note) Prepare a spacer separately for modular connection.

 Pressure Switch with Piping Adapter



Semi-standard: Select one option each in **a** through **d** Place them in alphanumerical order.

Example) IS10E-30N03-6PRZ-A

			_	Symbol	Body size			
						20	30	40
				Nil	Rc	•	•	•
2	2 Thread type			N	NPT	•	•	•
				F	G	•	•	•
	+							
				01	1/8	•	_	
				02	1/4	•	•	•
8		Po	rt size	03 04	3/8	•	•	•
_					1/2	_	•	•
				06	3/4	_	_	
				+				
		а	Set pressure	Nil	0.1 to 0.4 MPa	•	•	•
		u	range	6 Note 1)	0.1 to 0.6 MPa	•	•	
		_		+				
	2		Lead wire	Nil	0.5 m	•	•	•
	Semi-standard	ဋ္ဌ b	length	<u>L</u>	3 m	•	•	•
A			13.1.3.1.	Z	5 m	•	•	•
•	-2-			+			-	
	e	С	Scale plate	Nil	MPa		•	•
	w		pressure unit	P Note 2)	Both MPa and psi			


Note 1) Set pressure range of 6P(L, R, Z) is 0.2 to 0.6 MPa (30 to 90 psi). Note 2) For thread type: NPT only.

d

position

This product is for overseas use only according to the new Measurement Law. (The SI unit type is provided for use in Japan.)

Left

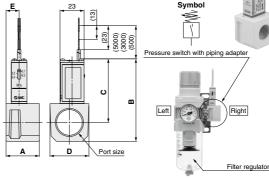

Model Note 1)	Port size	Α	В	С	D	Е	Applicable model	
IS10E-20□01-A	1/8							
IS10E-20□02-A	1/4	30	66	55	28	16	AC20□-A	
IS10E-20□03-A	3/8							
IS10E-30□02-A	1/4							
IS10E-30□03-A	3/8	32	73	59	30	13	AC25□-A, AC30□-A	
IS10E-30□04-A	1/2							
IS10E-40□02-A	1/4							
IS10E-40□03-A	3/8	32	79	61	37	13	Note 2) AC40 □-A	
IS10E-40□04-A	1/2							
IS10E-40□06-A	3/4							

Note 1) ☐ in the model numbers indicates a thread type. No indication is necessary for Rc; however, indicate N for NPT, and F for G.

Note 2) Cannot be mounted to the AC40□-06-A.

* Prepare a spacer separately for modular connection.

* The pressure switch can be mounted on the AC40\(\tilde{\to}\)-06-A by screwing the IS10-01S into the piping adapter E500\(\tilde{\to}\)-06-A/S501 (Rc1/8 threaded on top surface). Products with a premounted switch are available as a special order. Please contact SMC beforehand.

For details, refer to "Modular/F.R.L. Units, AC series" in Best Pneumatics No.6.

