Air Suction Filter

ZF Series

Prevent from occurring vacuum equipment trouble due to solid foreign objects.

	The state of the s		Port	Port size Air flow Not				
Series	Features	Model	Screw-in	Applicable tubing O.D. for One-touch fittings	[L/min(ANR)]	Filtration (µm)	Page	
ZFA	 Solid foreign objects are collected in the element and do not remain in the case. Large filter element surface 	ZFA10	1/8		50	30	P.276	
10	Adaptable for a manifold application Cartridge type allows element replacement	ZFA20	1/4		200	30	P.276	
ZFB	Unrestricted 360° piping tube			ø4	10			
Universal joint type	mounting on the IN side Easy installation and removal	· ·	ZFB10		ø6, ø3/16", ø1/4"	20		
22	with One-touch fittings			ø6, ø1/4"	30		D 0=0	
	 Light and compact molded resin parts 	ZFB20		ø8	50	30	P.279	
	 Cartridge type allows element replacement 	ZFB30		ø8, ø10, ø3/8"	75			
	Easily replaced filter element	ZFB40		ø1/2"	100			
ZFC	 IN/OUT straight piping 			ø4, ø5/32"	10			
In-line type	Easy installation and	ZFC5			20			
	removal with One-touch fittings			ø6, ø1/4"	30	_		
	 Light and compact molded resin parts 			ø8, ø5/16"	70	5	P.281	
	 Easily replaced filter 	ZFC7		ø10, ø3/8"	80			
	element			ø12	100			

ZFB **ZFC**

ZFA



Vacuum Filter AFJ Series


> P.779



Suction Filter

P.272

Application Example

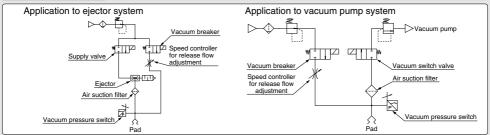

SMC

Air Suction Filter ZFA Series



Prevents vacuum equipment trouble due to solid foreign objects

Solid foreign objects are collected in the element and do not remain in the case.

Max. 10 station manifold is possible.

Large filter element surface Mountable in any direction

Cartridge type allows element replacement

Model

Model	Port size	Recommended air flow (L/min (ANR)) Notes	Weight (kg)	Internal capacity (cm3)
ZFA100	1/8	50	0.14	30
ZFA200	1/4	200	0.19	49

Note) Flow rate when initial pressure drop is 3 kPa or less.

Specifications

Fluid Note 1)	Air, Nitrogen				
Operating pressure range	-100 to 0 kPa				
Vacuum release pressure	Max. 0.5 MPa (Unable to hold when pressurized)				
Operating and ambient temperature range	5 to 60°C				
Filtration accuracy	30 μm (Filtration efficiency 95%)				
Element replacement differential pressure	20 kPa				

Note 1) Do not use the product in an atmosphere and place where there is direct contact with chemicals. It may cause damage to the body. (Alcohol, acetone, etc. also cause damage, so be sure for the product not to be close to them.)

Note 2) Do not use it in a line that is kept pressurized because it could cause the body to break.

Bracket Set Part No.

Application		ZFA100	ZFA200	Note	
For single unit	One side	BP-1H-1A	BP-1H-2A		
For single unit	Both sides	ZZFA1-01	ZZFA1-01 ZZFA2-01 Wit	With Bolt, Nut,	
For manifold (2 (Both sides)	2 to 10 stations)	ZZFA1-Stations Note 1)	ZZFA2-Stations Note 1)	Washer	

Note 1) Enter a 2-digit number in the stations portion while referring to the example below. (Example) For 6 stations → 06







How to Order (Single unit)

ZFA 100 01 Bracket Air suction filter Symbol

Symbol Filtration area (mm2) 2110 4210

Body type

Tilleau type v						
Symbol	Thread type					
Nil	Rc					
T	NPTF					
F	G					
F	u u					

Bracket None Т 1 pc. on the left 1 pc. on the right

LR With both the left and right sides L or R shows the left or right of the filter IN when viewed from front.

Symbol	Port size	Applicable model
01	1/8 ^B	ZFA100
02	1/4B	ZFA200

Symbol




How to Order Manifold (2 to 10 stations)


Indicate both the symbols for air suction filter and bracket part no. Example: In case of 6 stations of air suction filter ZFA100-01 ZZFA1-06 - 1 pc. (Brackets for 6 stations)

*ZFA100-01 ····· 6 pcs. (Air suction filter)

Flow Rate Characteristics

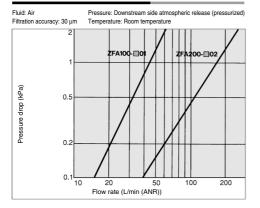

Construction

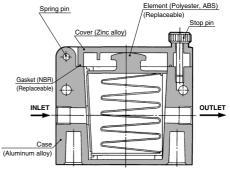


Replacement Element/Gasket Part No.

Decemention	Part no.						
Description	ZFA100	ZFA200					
Gasket	AL-204H	AL-205H					
Element	EJ001H-030N	EJ101H-030N					
Element size							
Element size (mm)	43 x 42 x 12	43 x 40 x 22					

Element Replacement

- Stop operation and reduce the filter's internal pressure to atmosphere.
- 2) Loosen the stop pin and open the cover.
- 3) Hold the knob on the top of the element and take it out.
- Check the gasket for damage, deformation, or swelling. If any fault is found, replace the gasket with a new one.
- 5) Replace the element with a new one in the reverse order. Note that the cover cannot be closed if the element is inserted into the case in incorrect orientation.
- 6) Close the cover and tighten the stop pin firmly.
- 7) After checking that no leakage is found from each part, start the actual operation.

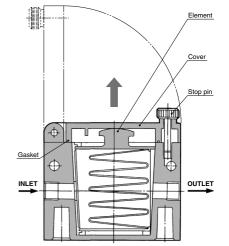

ZFA ZFB

 
ZFC


ZFA Series



Dimensions: ZFA 200 -□□□

Single unit



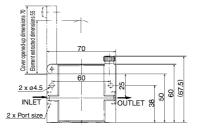





Note) The above diagram is for ZFA200.

THE DIACKEL IOCALIOTI SHOWS L SIDE.								
Model Symbol	Port size	Α	В					
ZFA100	1/8	_	18					
ZFA200	1/4	20	28					

 Manifold

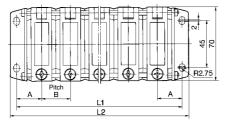





(The above diagram is for ZFA200)

Model Symbol	Port size	Α	В	
ZFA100	1/8	19	18	
ZFA200	1/4	24	28	

Model	0	Single	Single Number of manifold stations								
iviodei	Symbol	unit Note)	2	3	4	5	6	7	8	9	10
ZFA100 L	L1	38	56	74	92	110	128	148	164	182	200
ZFA 100	L2	50	68	86	104	122	140	158	176	194	212
ZFA200	L1	48	76	104	132	160	188	216	244	272	300
ZFAZUU	L2	60	88	116	144	172	200	228	256	284	312

Note) The left and right brackets are mounted on the air suction filter single unit.