

# 5 Port Air Operated Valve Series VFRA3000



## How to Order

VFRA3 **2** 11 - **02**

**Function**

1	2 position single
2	2 position double
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center

**Thread type (Including pilot port)**

Nil	Rc
F	G
N	NPT
T	NPTF

**Port size**

Nil	W/o sub-plate (Pilot port: Rc)
00	W/o sub-plate (Pilot port: Other than Rc)
02	1/4
03	3/8

## How to Order Manifold Base

VV5FRA3 - 10 -  <sup>1</sup>/<sub>2</sub> -

**n Port size Thread type**

Indicate the same part number as VFR3000 manifold.  
<Example> VV5FR3-10-1-, VV5FR3-10-2-

\* To order valves and blanking plate assembly mounted onto the manifold, list valves and blanking plate assembly with manifold base part number.


<Example> **VV5FRA3-10-061-03**..... 1 pc.  
\*VFRA3111..... 5 pcs.  
\*VFS3000-10A..... 1 pc.

↳ To order valves and options mounted onto the manifold at the factory, list the valve/option with an asterisk (\*) in front of each part number.


# 5 Port Air Operated Valve *Series VFRA3000*

## JIS symbol


2 position single

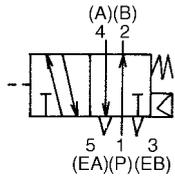


3 position closed center

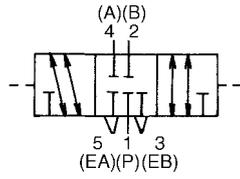


2 position double

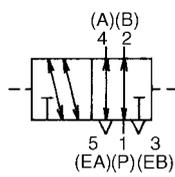

3 position exhaust center

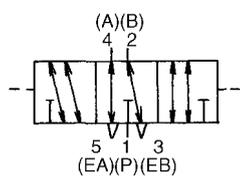

3 position pressure center

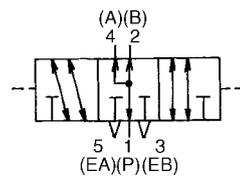

## Specifications

Fluid	Air	
Operating pressure range <sup>(1)</sup> (MPa)	2 position single	0.2 to 0.9
	2 position double	0 to 0.9
	3 position	0 to 0.9
Pilot pressure range (MPa)	2 position single	(0.6 x P+0.1) to 0.9, P: Operating pressure
	2 position double	0.1 to 0.9
	3 position	0.2 to 0.9
Ambient and fluid temperature (°C)	-10 to 60 (No freezing. Refer to page 5.)	
Lubrication <sup>(2)</sup>	Not required	
Mounting orientation	Free	
Impact/Vibration resistance (m/s <sup>2</sup> ) <sup>(3)</sup>	300/50	

**Note 1)** In case of single type, be certain that supply pressure within operating pressure range be supplied to supply port, because return pressure is introduced from supply port 1(P) for activation.

**Note 2)** Use turbine oil Class 1 (ISO VG32) if lubricating.


**Note 3)** Impact resistance: No malfunction from test using drop impact tester, to axis and right angle directions of main valve, each one time when pilot signal is ON and OFF. (Value in the initial stage)

Vibration resistance: No malfunction from test with 45 to 2000 Hz one sweep, to axis and right angle direction of main valve, each one time when pilot signal ON and OFF. (Value in the initial stage)

## ⚠ Caution

Be sure to read this before handling. Refer to front matters 58 and 59 for Safety Instructions and pages 3 to 7 for 3/4/5 Port Solenoid Valve Precautions.

## Pilot Pressure Range (Single Pilot)

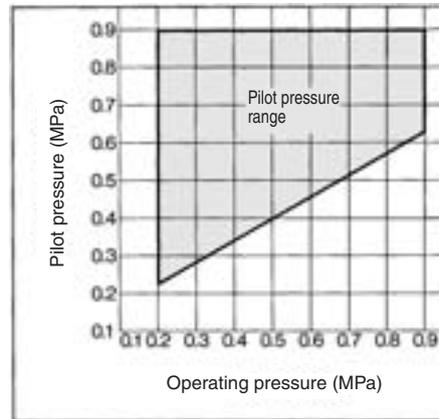

## Flow Characteristics/Mass

Valve model	Function	Port size	Flow characteristics						Pilot port size	Mass (kg)	
			1→4/2(P→A/B)			4/2→5/3(A/B→EA/EB)					
			C [dm <sup>3</sup> /(s·bar)]	b	Cv	C [dm <sup>3</sup> /(s·bar)]	b	Cv			
VFRA3111-02	2 position	Single	1/4	7.5	0.38	1.9	7.5	0.34	1.9	1/8	0.61
VFRA3111-03			3/8	8.4	0.39	2.2	8.7	0.38	2.2		
VFRA3211-02	2 position	Double	1/4	7.1	0.41	1.9	7.4	0.40	1.9	1/8	0.71
VFRA3211-03			3/8	7.9	0.36	2.0	8.6	0.37	2.2		
VFRA3311-02	3 position	Closed center	1/4	6.8	0.40	1.8	6.3	0.38	1.6	1/8	0.72
VFRA3311-03			3/8	7.2	0.39	1.9	6.5	0.40	1.7		
VFRA3411-02		Exhaust center	1/4	6.5	0.42	1.7	7.9 (3.4)	0.41 (0.47)	2.0 (0.96)		
VFRA3411-03			3/8	6.9	0.42	1.8	9.5 (3.4)	0.39 (0.46)	2.4 (0.96)		
VFRA3511-02		Pressure center	1/4	7.6 (2.4)	0.33 (0.48)	1.9 (0.69)	6.1	0.36	1.5		
VFRA3511-03			3/8	9.3 (2.4)	0.34 (0.47)	2.2 (0.69)	6.5	0.41	1.7		

**Note)** ( ): Normal position

SYA

SYJA

VZA

VFA


VFRA

V□A

# Series VFRA3000


## Dimensions

### 2 position single: VFRA3111-02 03

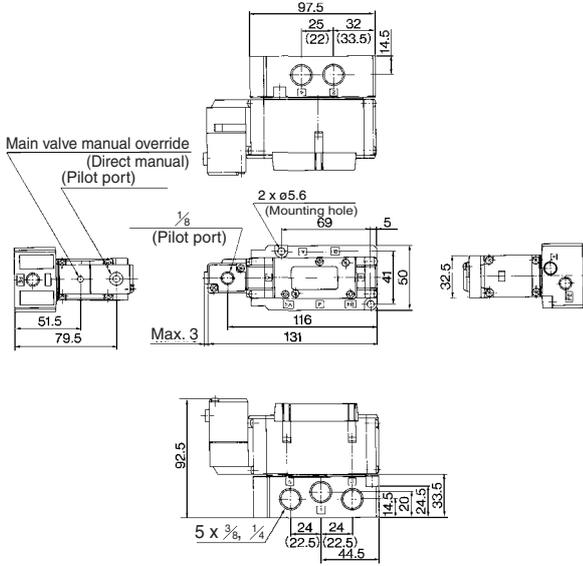

( ): In the case of Rc 1/4

### 2 position double: VFRA3211-02 03

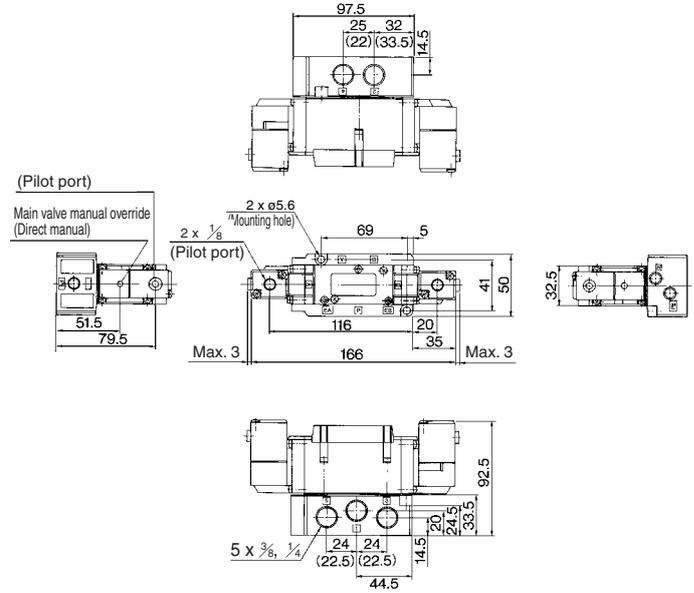


( ): In the case of Rc 1/4

### 3 position closed center: VFRA3311-02 03

### 3 position exhaust center: VFRA3411-02 03

### 3 position pressure center: VFRA3511-02 03

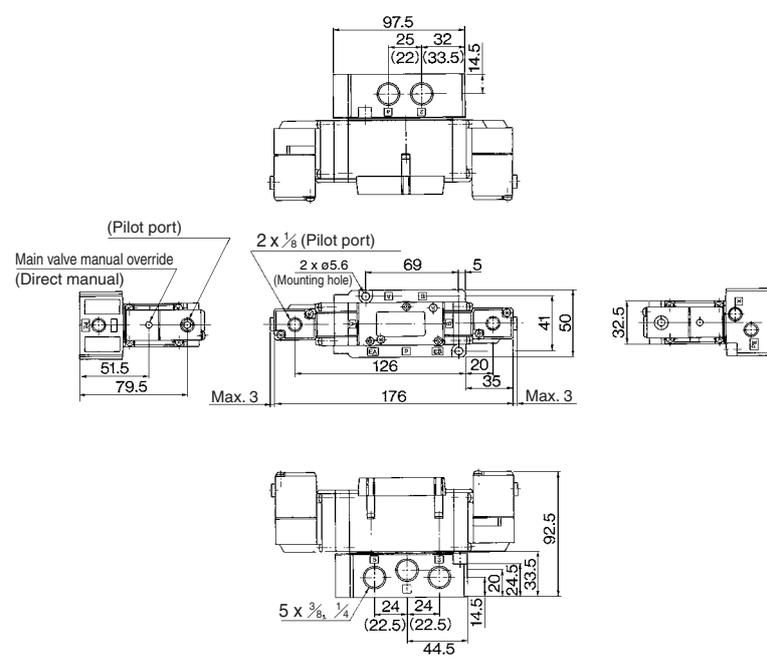

( ): In the case of Rc 1/4

# 5 Port Air Operated Valve

## Series VFRA4000



### How to Order

VFRA4 **2** 11 - **03**

#### Function

1	2 position single
2	2 position double
3	3 position closed center
4	3 position exhaust center
5	3 position pressure center

#### Thread type (Including pilot port)

Nil	Rc
F	G
N	NPT
T	NPTF

#### Port size

Nil	W/o sub-plate (Pilot port: Rc)
00	W/o sub-plate (Pilot port: Other than Rc)
03	3/8
04	1/2

### How to Order Manifold Base

VV5FRA4 - 10 -  <sup>1</sup>/<sub>2</sub> -

Indicate the same part number as VFR4000 manifold.  
<Example> VV5FR4-10-1-, VV5FR4-10-2-

<Example>

VV5FRA4-10-061-03.....1 pc.

\*VFRA4111.....5 pcs.

\*VVFS4000-10A.....1 pc.

↳ To order valves and options mounted onto the manifold at the factory, list the valve/option with an asterisk (\*) in front of each part number.

SYA

SYJA

VZA

VFA


VFRA

VA


# Series VFRA4000

## JIS symbol


2 position single

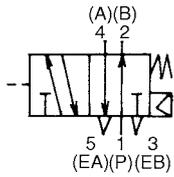


3 position closed center

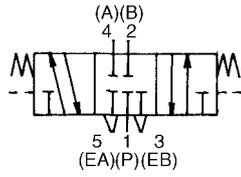


2 position double

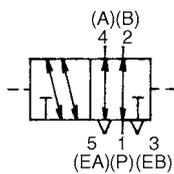

3 position exhaust center

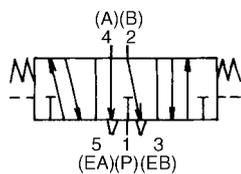

3 position pressure center

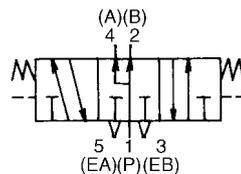

## Specifications

Fluid	Air	
Operating pressure range (MPa)	2 position single	0.2 to 0.9
	2 position double	0 to 0.9
	3 position	0.2 to 0.9
Pilot pressure range (MPa)	2 position single	(0.6 x P + 0.1) to 0.9, P: Operating pressure
	2 position double	0.1 to 0.9
	3 position	(0.6 x P + 0.1) to 0.9 P: Operating pressure
Ambient and fluid temperature (°C)	-10 to 60 (No freezing. Refer to page 5.)	
Lubrication <sup>(2)</sup>	Not required	
Mounting orientation	Free	
Impact/Vibration resistance (m/s <sup>2</sup> ) <sup>(3)</sup>	300/50	


Note 1) In case of single type, be certain that supply pressure within operating pressure range be supplied to supply port, because return pressure is introduced from supply port 1(P) for activation.

Note 2) Use turbine oil Class 1 (ISO VG32), if lubricating.

Note 3) Impact resistance: No malfunction from test using drop impact tester, to axis and right angle directions of main valve, each one time when pilot signal is ON and OFF. (Value in the initial stage)

Vibration resistance: No malfunction from test with 45 to 2000 Hz one sweep, to axis and right angle direction of main valve, each one time when pilot signal ON and OFF. (Value in the initial stage)

## Pilot Pressure Range (Single pilot or 3 position)

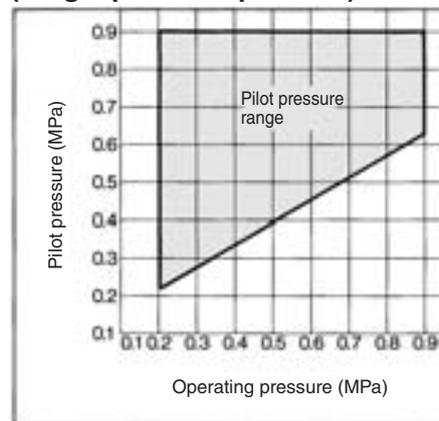

## Caution

Be sure to read this before handling. Refer to front matters 58 and 59 for Safety Instructions and pages 3 to 7 for 3/4/5 Port Solenoid Valve Precautions.

## Flow Characteristics/Mass


Valve model	Function	Port size	Flow characteristics						Pilot port size	Mass (kg)	
			1→4/2(P→A/B)			4/2→5/3(A/B→EA/EB)					
			C [dm <sup>3</sup> /(s·bar)]	b	Cv	C [dm <sup>3</sup> /(s·bar)]	b	Cv			
VFRA4111-03	2 position	Single	3/8	13	0.30	3.2	14	0.28	3.4	1/8	1.1
VFRA4111-04			1/2	15	0.30	3.8	14	0.30	3.8		
VFRA4211-03		Double	3/8	14	0.31	3.4	14	0.26	3.4		
VFRA4211-04			1/2	15	0.30	4.0	14	0.30	3.7		
VFRA4311-03	3 position	Closed center	3/8	13	0.32	3.2	13	0.25	3.0	1/8	1.2
VFRA4311-04			1/2	14	0.28	3.5	13	0.29	3.4		
VFRA4411-03		Exhaust center	3/8	13	0.31	3.2	14(13)	0.32(0.3)	3.6(3.2)		
VFRA4411-04			1/2	14	0.30	3.7	14(13)	0.32(0.3)	3.6(3.2)		
VFRA4511-03		Pressure center	3/8	13(5.0)	0.27(0.42)	3.2(1.3)	13	0.28	3.1		
VFRA4511-04			1/2	15(5.3)	0.22(0.42)	3.7(1.5)	13	0.28	3.3		




Note) ( ): Normal position

## Dimensions

### 2 position single: VFRA4111-<sup>03</sup>/<sub>04</sub>

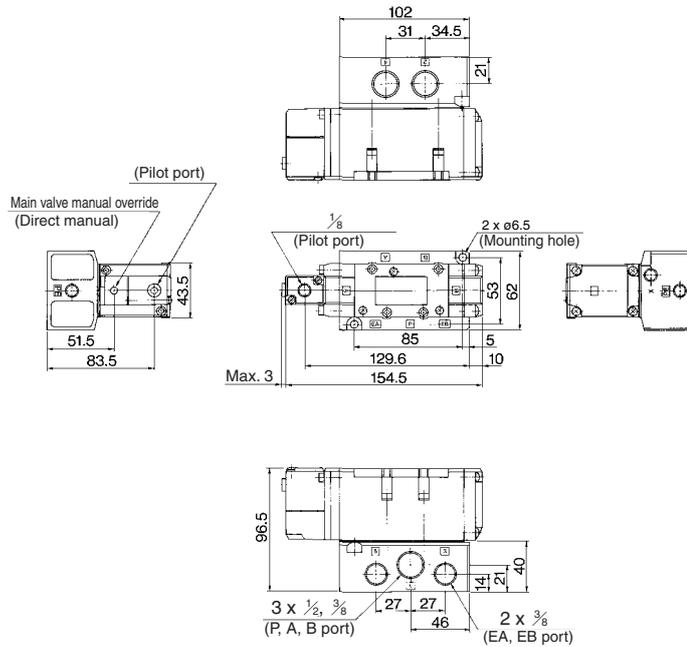


### 2 position double: VFRA4211-<sup>03</sup>/<sub>04</sub>

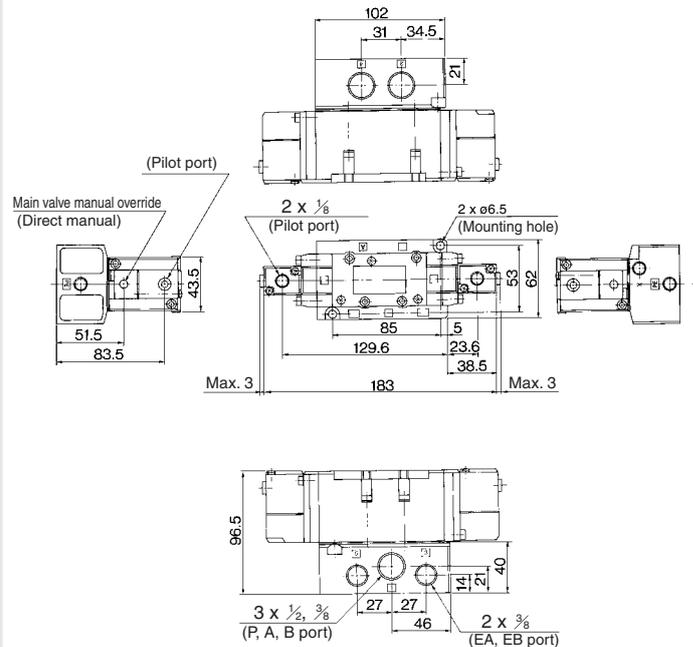

### 3 position closed center: VFRA4311-<sup>03</sup>/<sub>04</sub>

### 3 position exhaust center: VFRA4411-<sup>03</sup>/<sub>04</sub>

### 3 position pressure center: VFRA4511-<sup>03</sup>/<sub>04</sub>

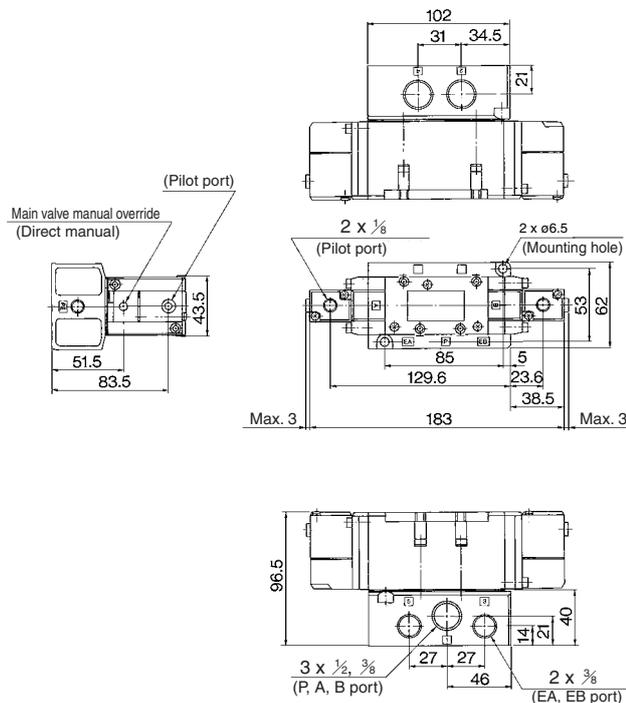

SYA

SYJA

VZA

VFA

VFRA

V□A