

CATALOG 2019

Arc Guard System[™] – TVOC-2



— Arc Guard System[™] – TVOC-2

Courtesy of Steven Engineering, Inc - (800) 258-9200 - sales@steveneng.com - www.stevenengineering.com

Arc Guard System™ – TVOC-2 Table of contents

3	Arc Guard System™ with communication module
5	Introduction
6	System description
7	Functionality
8	Ordering details
10	Technical data
12 13	Applications Basic installation tips Diagrams
14 15	Configuration Trip condition configuration – Manual/auto reset configuration Current condition configuration
16	Dimensions
17	Circuit diagrams

Courtesy of Steven Engineering, Inc - (800) 258-9200 - sales@steveneng.com - www.stevenengineering.com

Arc Guard System[™] with communication module Monitor your installation, anytime and anywhere

ABB is a leader in electrical safety with the TVOC-2 Arc Guard System[™] providing an unrivaled optical arc mitigation device with SIL-2 safety certification.

The plug-in communication module provides operators real time status updates and instant information regarding the location of any arcs.





Safety and protection

Saving lives and minimizing damage to equipment

With a market-leading reaction time of under 1 ms, TVOC-2 is already the fastest, most reliable arc guard solution available on the market. By adding the communication module, information regarding any trip travels faster, reaching the right people sooner.



Continuous operation

Keeping the business running

An arc flash accident can have a catastrophic effect on equipment and lead to outages. The TVOC-2 detects the light from an arc flash and, together with the installed breaker, cutting the current feeding the arc extremely quickly, minimizing disruption of the system.



Easy to install

Factory calibrated sensors

Configuration of the TVOC-2 is done in minutes and with the HMI verifying every setting done, it is extremely unlikely that mistakes will happen during the configuration. With the possibility to accommodate up to 30 sensors, the system is highly flexible and can grow with any system. Marine and ships



Steel industry

Paper machine





Courtesy of Steven Engineering, Inc - (800) 258-9200 - sales@steveneng.com - www.stevenengineering.com

Introduction

TVOC-2, ABB's Arc Guard System[™], builds on the well known TVOC design. Its functions and features improve an already great product, putting even more focus on reliability, flexibility and simplicity.

Arc Guard System[™] increases the protection of people and equipment, and minimizes unnecessary production stops. TVOC-2 is ABB's state-of-the-art solution for arc fault protection in all applications, providing functional safety.

With over 40 years of experience, Arc Guard System[™] has become an industry standard in several key markets, helping to protect personnel and businesses around the world.

Typical applications include all low- and medium-voltage switchgears.

Reliability

- Certified according to functional safety (SIL-2) standard
- Over 40 years experience in Arc Guard Systems[™]
- Pre-calibrated optical sensors

Flexibility

- With IP54 high protection degree, HMI (Human Machine Interface) can be mounted on the panel door
- COM Module operates in the same way as HMI. With added ability to communicate with a remote station using Modbus RTU
- Expandable with up to 30 optical sensors
- Configure the system according to various needs

Simplicity

- User-friendly start-up menu
- DIN-rail or wall-mounted
- Easy to expand as the switchgear functions are added



System description

Short-circuit faults in LV and MV switchgears are often accompanied by an electric arc. An arc fault can leads to considerable damage to equipment and injury to personnel unless it is detected very quickly. To avoid serious damage and give the person involved a good chance of surviving the accident without severe injury, the fault should be disconnected as fast as possible, typically in less than 50 ms.

The Arc Guard System[™] quickly detects an arc fault and trips the incoming circuit-breaker. Using light as the main trip criteria, it trips almost instantaneously. Thanks to this key functional advantage, it overrides all other protections and delays, which is crucial when reaction times need to be measured in milliseconds.

How it works

The system acts in three phases:

1 Detection

The TVOC-2 detects the light from an arc flash




2 Recognition

The system determines the intensity of light





The diagram below shows how the exponential increase in energy over time affects different switchgear materials.

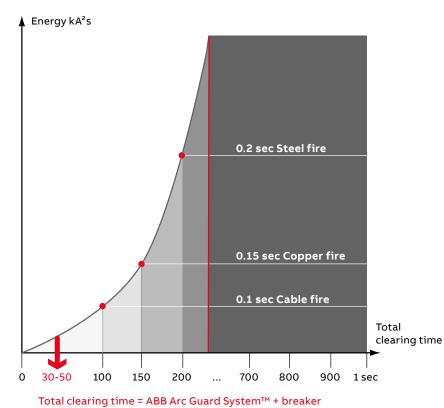

3 Action

The system sends signal to trip breaker(s)



Functionality

Arc monitor

With its modular concept, the Arc monitor is designed to fit all types and sizes of low- and medium-voltage switchgears.

It is designed according to functional safety, and is SIL 2-certified according to IEC 61508 and IEC 62061 which puts full focus on reliability. This corresponds to performance level d according to EN ISO 13849-1. Safety functions are exclusively handled by hardware. In addition, the system, trip logs and user-interface are all microprocessor-monitored.

The system can be configured to trip selected breakers, depending on which sensor that detects the light. The DIPswitches that take care of this function also handle settings like auto-reset and Current Sensing Units (see pages 12-13 for more details).

Energy is stored in the unit for operation up to 0.2 s if the supply voltage fails. This is sufficient to close the tripping circuit even if voltage disappears at a short-circuit fault.

Note: The circuit breaker still needs a back-up energy source for its tripping circuit.

Connections

All connections can be accessed from the front of the Arc Guard System[™]. Pluggable terminal blocks allow electrical wiring before mounting TVOC-2 into the cabinet. The solid state tripping contacts are type IGBT, which guarantees fast and reliable tripping.

More details can be found on page 8, technical data.

HMI (Human Machine Interface)

- Handles settings with key-pad and full text display
- Holds error log and trip information after power loss
- Error log and trip log include time/date stamp from a real-time clock
- TVOC-2 can handle two separate HMIs (cabinet door and on product)
- Three-meter cable included
- COM Module available using Modbus RTU

Sensor & sensor modules

- Fiber-optic sensors not affected by electrical noise
- Pre-calibrated sensors remove need for manual configuration
- Up to 30 detectors can be connected

Current Sensing Unit (optional)

The Current Sensing Unit (CSU) is an accessory needed only in those few specific applications where strong light is expected on a regular basis.

CSUs are connected with an optical fiber using light as signal for normal current. If this was removed by accident, the system would treat it as an over-current and trip if an arc flash is seen of reliability reasons.

Adding a CSU will result in an additional operating time depending on the size of the over-current and the number of phases measured.

Arc monitor

3 IGBT solid state tripping contacts
2 change-over trip signal relays
1 change-over self supervision alarm relay (IRF)
2 current sensing unit inputs
1 current sensing unit output

Mounting alternatives DIN-rail Wall mounting

Optical detector inputs

1-10 Main unit X1 1-10 Extension module X2 1-10 Extension module X3

HMI

Can be mounted on door IP54 Additional HMI possible User-friendly start up menu COM Module version available



Ordering details



Arc monitor with HMI



Arc monitor with COM Module

1SFC170 012F00 01

1SFC170013F0001

1SFC1700 02V0001

1SFC170011F0001



Extension unit







COM Module



Detector cable

Description	Rated supp Uc	ly voltage	Туре	Order code	Weight (1 pce)
	V 50/60 Hz	V DC			kg
Arc monitor					
including one HMI and door mounting accessories	-	2448	TVOC-2-48	1SFA664001R1002	0.95
	100240	100250	TVOC-2-240	1SFA664001R1001	
including one COM Module and door mounting accessories	-	2448	TVOC-2-48-C	1SFA664001R1004	0.95
	100240	100250	TVOC-2-240-C	1SFA664001R1003	

Accessories

Description		Туре	Order code	Weigh (1 pce) kg
Extension				,
10 optical inputs		TVOC-2-E1	1SFA664002R1001	0.15
10 optical inputs for cable T	VOC-2-DP60 only	TVOC-2-E3	1SFA664002R3001	0.15
HMI (Human Mach	ine Interface)			
additional		TVOC-2-H1	1SFA664002R1005	0.15
COM Module			·	
	ce (Modbus BTH)	TVOC-2-COM	1SFA664002R4001	0.15
	. ,			
with communication interfa and door mounting accesso Detectors	. ,			
and door mounting accesso	. ,	TVOC-2-DP1	1SFA664003R1010	0.02
and door mounting accesso Detectors	ries		1SFA664003R1010 1SFA664003R1020	0.02
and door mounting accesso Detectors	ries 1 m	TVOC-2-DP1		
and door mounting accesso Detectors	1 m 2 m	TVOC-2-DP1 TVOC-2-DP2	1SFA664003R1020	0.02
and door mounting accesso Detectors	ries 1 m 2 m 4 m	TVOC-2-DP1 TVOC-2-DP2 TVOC-2-DP4	1SFA664003R1020 1SFA664003R1040	0.02
and door mounting accesso Detectors	ries 1 m 2 m 4 m 6 m	TVOC-2-DP1 TVOC-2-DP2 TVOC-2-DP4 TVOC-2-DP6	1SFA664003R1020 1SFA664003R1040 1SFA664003R1060	0.02 0.04 0.60
and door mounting accesso Detectors	ries 1 m 2 m 4 m 6 m 8 m	TVOC-2-DP1 TVOC-2-DP2 TVOC-2-DP4 TVOC-2-DP6 TVOC-2-DP8	1SFA664003R1020 1SFA664003R1040 1SFA664003R1060 1SFA664003R1080	0.02 0.04 0.60 0.80
and door mounting accesso Detectors	ries 1 m 2 m 4 m 6 m 8 m 10 m	TVOC-2-DP1 TVOC-2-DP2 TVOC-2-DP4 TVOC-2-DP6 TVOC-2-DP8 TVOC-2-DP10	1SFA664003R1020 1SFA664003R1040 1SFA664003R1060 1SFA664003R1080 1SFA664003R1080 1SFA664003R1100	0.02 0.04 0.60 0.80 0.10
and door mounting accesso Detectors	ries	TVOC-2-DP1 TVOC-2-DP2 TVOC-2-DP4 TVOC-2-DP6 TVOC-2-DP8 TVOC-2-DP10 TVOC-2-DP15	1SFA664003R1020 1SFA664003R1040 1SFA664003R1060 1SFA664003R1080 1SFA664003R1100 1SFA664003R1150	0.02 0.04 0.60 0.80 0.10 0.15
and door mounting accesso Detectors	ries	TVOC-2-DP1 TVOC-2-DP2 TVOC-2-DP4 TVOC-2-DP6 TVOC-2-DP8 TVOC-2-DP10 TVOC-2-DP15 TVOC-2-DP20	1SFA664003R1020 1SFA664003R1040 1SFA664003R1060 1SFA664003R1080 1SFA664003R1100 1SFA664003R1150 1SFA664003R1200	0.02 0.04 0.60 0.80 0.10 0.15 0.20

(1) Only to be used with TVOC-2-E3

Description

Ordering details

1SFC170003F0002

1SFC170017F0001

LSFC170 01 6F 0001

1SFC170010F0001

1SFC170010F0001

1SFC170014F0001





Optical cable TVOC-2 – CSU



Optical cable TVOC-2 – TVOC-2



X



Mounting kit

Label



```
Mounting bracket
```

Current sensing unit		CSU	1SFA663002-A
Optical cab	le between 1	VOC-2 Arc monitor a	nd Current Sensing Unit (CSL
Cable length	0.5 m	TVOC-1TO2-OP05	1SFA664004R2005
	1 m	TVOC-1TO2-OP1	1SFA664004R2010
	2 m	TVOC-1TO2-OP2	1SFA664004R2020
	4 m	TVOC-1TO2-OP4	1SFA664004R2040
	6 m	TVOC-1TO2-OP6	1SFA664004R2060
	8 m	TVOC-1TO2-OP8	1SFA664004R2080
	10 m	TVOC-1TO2-OP10	1SFA664004R2100
	15 m	TVOC-1TO2-OP15	1SFA664004R2150
	20 m	TVOC-1TO2-OP20	1SFA664004R2200
	25 m	TVOC-1TO2-OP25	1SFA664004R2250
	30 m	TVOC-1TO2-OP30	1SFA664004R2300
Optical cab	le between t	wo TVOC-2 Arc moni	itors (transfering CSU signal)
Cable length	0.5 m	TVOC-2_OP05	1SFA664004R1005
-	1 m	TVOC-2-OP1	1SFA664004R1010
	2 m	TVOC-2-OP2	1SFA664004R1020
	4 m	TVOC-2-OP4	1SFA664004R1040
	6 m	TVOC-2-OP6	1SFA664004R1060
	8 m	TVOC-2-OP8	1SFA664004R1080
	10 m	TVOC-2-OP10	1SFA664004R1100
	15 m	TVOC-2-OP15	1SFA664004R1150
	20 m	TVOC-2-OP20	1SFA664004R1200
	25 m	TVOC-2-OP25	1SFA664004R1250
	30 m	TVOC-2-OP30	1SFA664004R1300
Optical cab	le between t	wo Current Sensing l	Jnits (CSUs)
Cable length	0.5 m		1SFA663004R1005
	1 m		1SFA663004R1010
	2 m		1SFA663004R1020
	4 m		1SFA663004R1040
	6 m		1SFA663004R1060
	8 m		1SFA663004R1080
	10 m		1SFA663004R1100
	15 m		1SFA663004R1150
	20 m		1SFA663004R1200
	25 m		1SFA663004R1250
	30 m		1SFA663004R1300

Туре

Order code

Other accessories

Description	Туре	Order code	Weight (1 pce) kg
Cable straps			
1 set incl. 50 pcs	TVOC-2-MK1	1SFA664006R1001	0.10
Mounting kit			
600 mm		1SFA663006R1001	0.35
800/1000 mm		1SFA663006R1002	0.60
Label			
1 set incl.10 pcs		1SFA663005R1001	0.02
Mounting bracket			
1 set incl. 5 bracket pcs and 10 c	able strap pss	1SFA663006R1010	0.25

Weight

(1 pce) kg 1.500

0.010

0.010

0.020 0.040

0.060 0.080 0.100 0.150

0.200 0.250 0.300

0.01 0.01 0.02

0.04 0.06 0.08

0.10 0.15 0.20 0.25

0.30

0.01

0.01 0.02

0.04 0.06 0.08

0.10 0.15 0.20 0.25

0.30

Technical data

Optical inputs and output	
Optical detectors	10 inputs on Arc monitor
	10 inputs on Extension unit X2 (optional)
	10 inputs on Extension unit X3 (optional)
Current signal from CSU	2 inputs: X1.21, X1.22 (optical)
Forward current signal to another Arc monitor	1 output: X1.23 (optical)
Breaker trip contacts (K4, K5, K6)	
Solid state tripping contacts	3 NO solid state type IGBT
Rated voltage	250 V AC / DC
Make and carry for 0.2 s	30 A
Make and carry for 1 s 0.15% duty ration	10 A
Breaking capacity	250 V 1.5 A AC-15
	250 V 1 A DC-13
	110 V 3 A DC-13
	48 V 3 A DC13
	Reinforced insulation between separate contacts
	Voltage drop 5 V 30 A, 3 V 3 A, 2 V 10 mA
	Off state current < 1 mA at 250 V 60 Hz
	Min. recommended load current 10 mA
Signal relay outputs (K2, K3)	
Manual or auto resetable	2 CO gold-plated contacts
Rated voltage	250 V AC / DC
Continous carry Ith	5A
Make and carry for 0.2 s	30 A
Make and carry for 3 s 10% duty ratio	15 A
Breaking capacity	250 V 3 A AC-15
	250 V 0.3 A DC-13
	110 V 0.6 A DC-13
	48 V 2 A DC-13
	Reinforced insulation between separate contacts
	l _{th} = 5 A
	Min switching load:
	1 mA at 5 V DC with contacts not used for switching current
	> 0.5 A if inductive/capacitive load before.
nternal Relay Fault (IRF) signal (K1)	
elf supervision alarm relay	1 CO gold-plated contact
Rated voltage	250 V AC/DC
Continuous carry, Ith	5 A
Make and carry for 3 s	8 A
Breaking capacity	250 V 1.5 A AC-15
	250 V 0.15 A DC-13
	110 V 0.3 A DC-13
	48 V 0.5 A DC-13
	Reinforced insulation between separate contacts
	I _{th} = 5 A
	Min switching load:
	1 mA at 5 V DC with contacts not used for switching current
	> 0.5 A if inductive/capacitive load before

Technical data

Settings and indications		A subscie D145 mails at factor in the
Connections for HMI on base module		1 output RJ45 male at front side 1 output RJ14 female at right side
Display on HMI		52 x 26 mm graphic LCD with LED backlight
Keyboard on HMI		Membrane buttons, 4 soft keys
LED signal on HMI		Power, Trip, Error
LED signal on Arc monitor and extension uni	ite	Power, Trip
Configuration switches	115	8-pole DIP-switch on Arc monitor front
Settings (HMI)		Time and display language
COM Module version		Modbus RTU protocol
Configuration (DIP switches)		Manual or auto reset of K2 and K3
		Use of CSU or not
		Trip configuration
Display information		Trip log, connected modules, actual configuration
		self diagnostic test result and error log
Power supply	TVOC-2-240	TVOC-2-48
Rated supply voltage, Us	100-240 V AC, 50-60 Hz	24 - 48 V DC Possibility to connect two power supplies for
	100-250 V DC	redundancy. (Common minus)
Us variation	AC -20% – +10%	DC -25% - +30%
	DC -25% – +30%	
Rated insulation voltage, Ui	250 V with reinforced insulation	250 V with reinforced insulation
Rated impulse withstand Voltage Uimp	4 kV	4 kV
Main MCB/fuse	Max. 10 A char. C/fuse 10 A gG	Max 6A, MCB ABB Type S202 Z6A
Power consumption	5 W	5W
Start-up time		
Trip possible	< 15 ms from power on	< 100 ms from power on
Reaction time		
From light detection to trip (contacts K4, K5	5, K6)	Approx. 1 ms (depends on light intensity)
From light detection to indication signal (re		< 10 ms
Current condition from input to output		< 0.4 ms
Environmental conditions		
		Loss then 2020 methods and lovel
Altitude		Less than 2000 m above sea level.
Permissible ambient temperature		-25 to +55°C IP20 Arc monitor
Degree of protection		IP54 HMI front side
Detector cable		
Maximum length		30 m with Arc monitor and extension – E1
······································		60 m with extension – E3
Service temperature range		-25 to +70°C continuous
· •		-25 to +85°C short-time
Smallest permissible bending radius		45 mm after installation
Accontable backlight interactive light with and	tripping	10 mm on handling
Acceptable backlight intensity light without	. u ipping	3000 Lux
Optical cable Maximum length		30 m
5		J 50 III
Standards		
(€ ເ∰us [Functional Safety Type Approved	TABS
JL508		Industrial control equipment
CSA C22.2 No.14		Industrial control equipment
IEC 61508		Functional safety of electrical/electronic/programmable electronic safety-relate
120 01000		systems
IEC EN60947-1		Low voltage switchgear and controlgear – Part 1: General rules
IEC EN60947-5-1		Low voltage switchgear and controlgear – Part 5-1: Control circuit devices and
		switching elements - Electromechanical control
IEC 61010-1		Safety requirements for electrical equipment for measurement, control and
		laboratory use

laboratory use

Applications Basic installation tips

Arc monitor (TVOC-2)

The Arc monitor can be mounted anywhere in the switchgear, e.g. in the breaker cubicle or in a separate control cabinet. Tripping is handled by a separate tripping circuit. The task of the Arc monitor is to close the circuit very quickly. You can connect up to 3 breakers in this way and, if required, trip different breakers depending on where the arc occurs.

CSU (Current Sensing Unit)

The CSU is an accessory used if you cannot prevent direct sunlight or other highly intensive light reaching the sensors frequently. CSUs can be mounted in series if more than two are needed.

Connection of current transformers (for CSU)

The CSU measures either 1, 2 or 3-phase. Three-phase is, however, preferable for reasons of safety and reliability. Current transformers with a secondary current of 1, 2 or 5 A are used for this purpose.

Note: Current transformers for relay protection are preferable since they do not saturate as guickly as standard current transformers. The transformers should not saturate before at least twice the set over-current level.


Detectors

Detector cables are available in standard lengths (see ordering details). They cannot be cut or joined. Avoid sharp bends or pinching when installing the cables.

The plastic fiber is made of polymethylene acrylate (PMMA) with a polyethylene jacket . Each detector consists of an optical cable and a lens that are calibrated together to give the same sensitivity independent of cable length. The detector has a plug-in connector that fits the Arc monitor. The lens collects light from all directions, with the exception of a small shaded area behind the detector (see the polar diagram). Practical experiments have shown that arc light reflected between metallic surfaces is normally sufficient to cause tripping.

Detector positioning

The basic strategy for positioning the sensors is to make sure to cover all parts that may suffer from an arc. Typically this involves the horizontal and vertical bus bar system and the breaker cubicle. If possible, it's also normally preferable to supervise each cubicle. Avoid placing the detector so that it sees the normal light from a breaker. The sensor can detect arcs within a 3-meter distance (see illustration). To raise the safety level even higher, you can separate them at a 1.5-meter distance, thereby creating redundancy between them.

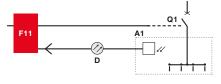

Arc Guard System[™] with Arc monitor

Switchgear Arc monitor


A1

F11


F21


Τ1


- Current Sensing Unit
- Current transformer Circuit-breaker

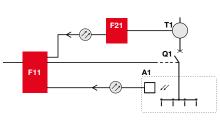


Arc Guard System™ with Arc monitor and Current Sensing Unit

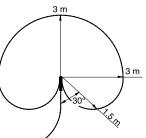

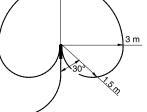

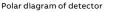

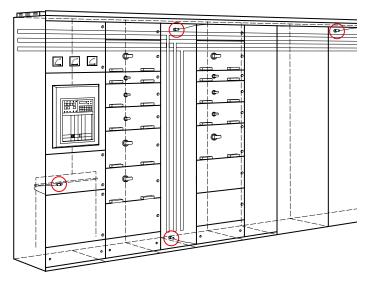


Example showing the position of detectors in: 1. Horizontal and vertical bus bar system 2. Circuit-breaker cubicle

Applications Diagrams

Example 1:


Arc Guard System[™] installed to trip all breakers in case of an arc.

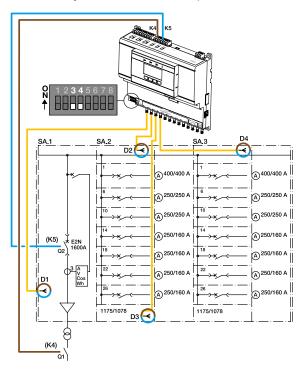

SA1 SA3	Switchgear
K4, K5	Solid state tripping
	contacts
Q1, Q2	Circuit-breaker
D1D4	Detectors

Example 2:

Arc Guard System[™] installed to trip different breakers depending on where the arc occurs.

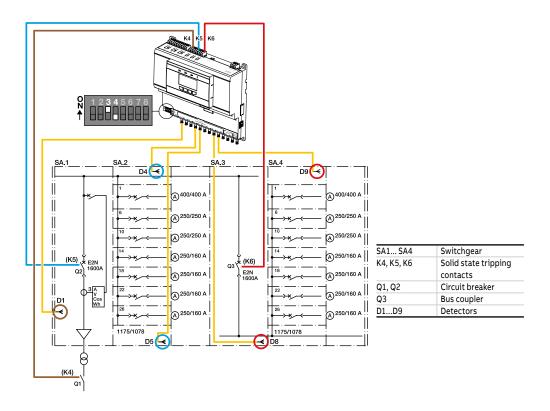

Configuration Trip condition configuration – Manual/auto reset configuration


System configuration using DIP switch

DIP switches are used to configure the system regarding use of current condition (activated CSU inputs) and assigning detectors to breaker trip outputs (so-called selectivity). They are located on the front (low, left) of the Arc monitor.

DIP sw	DIP switches			Breaker trip output	Detector inputs
Sw1	Current condition inputs Terminals X1:21-22	Sw5	Not used	Output relay K4	Terminals X1:1-10
Sw2	Current condition output Terminal X1:23	Sw6	Autoreset K2, K3 (signal relays)	Output relay K5	Terminals X2:1-10
Sw3	Trip output assign	Sw7	Not used		
Sw4	Trip output assign	Sw8	Not used	Output relay K6	Terminals X3:1-10


Trip condition configuration

TVOC-2 can be configured to trip selected breakers depending on which detector is signalling for an arc. This can be used to trip sections of a switchgear or use one monitor for several small switchgears. It also has an option to add a current condition, see page 13.

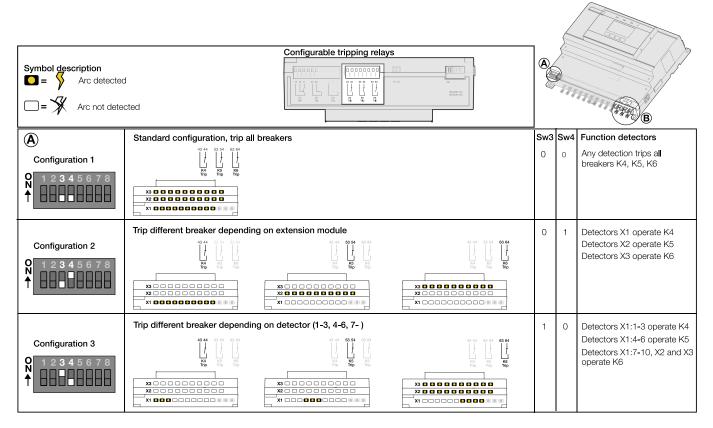

Manual/auto reset configuration

The signal relays K2, K3 can be configurated to react as the trip contacts (auto reset) or to be de-energized by manual reset on the HMI. See below for explanation.

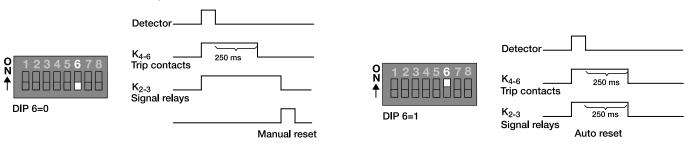



Configuration Current condition configuration

Normal trip configuration with additional current condition

A current condition is an option that could be used to avoid the risk of nuisance tripping due to strong light from other sources than arcs. The main risks are light from arc chutes and direct sunlight, which in normal cases can be avoided. Therefore the standard configuration is without CSUs (Current Sensing Units).

All trip configurations on page 12 can be combined with an additional current condition. It is possible to connect up to two CSUs directly to the Arc monitor (AM) (input 21 and 22). To connect additional current sensing units in series is also possible if required. To share the current condition between different Arc monitors can be done by connecting output 23 on the first Arc monitor to the standard CSU input on the other. The Arc monitor will then block the trip condition until it sees an over current.

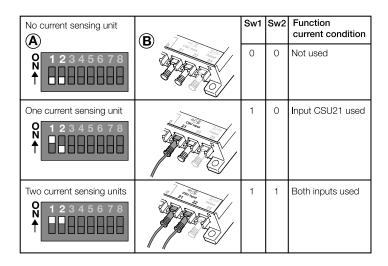


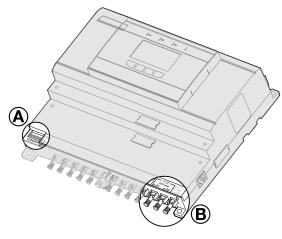

AM (Arc monitor)


Special trip configuration depending on over current

The arc monitor has a special trip configuration that determines trips depending on where it sees the over current. This configuration will then trip different breakers depending on which supply is showing an over current.

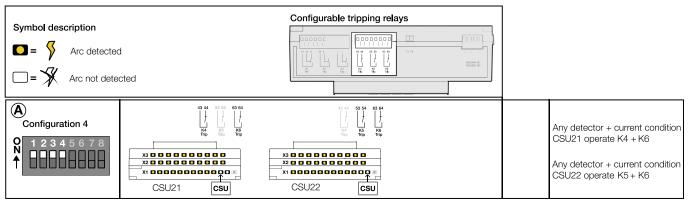



DIP switches 1, 2, 3 and 4 to position ON See manual for more details


Dimensions

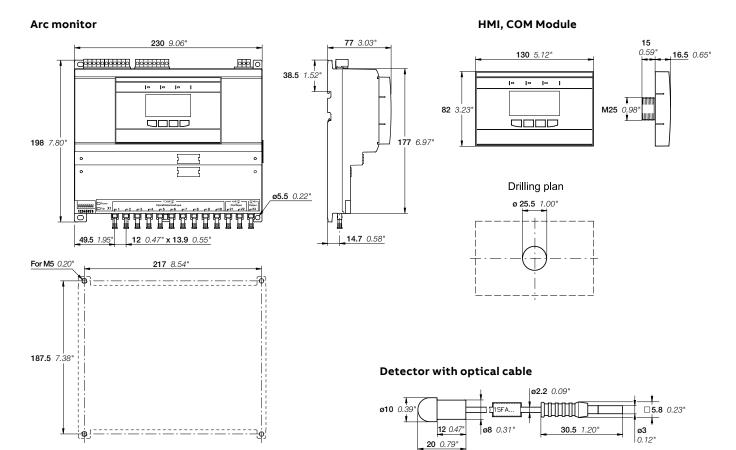

Current Sensing Unit

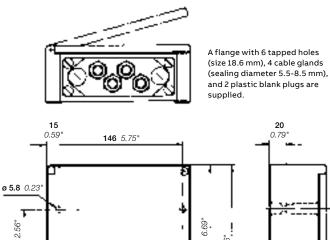

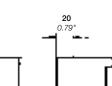


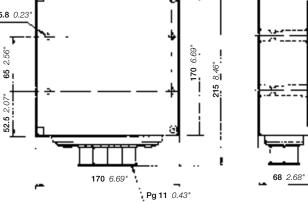

Dimensions (mm, inches)

Circuit diagrams

Arc monitor

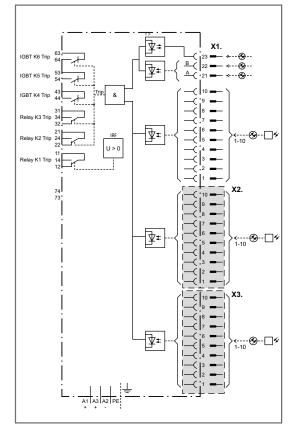



TVOC-2-48 1SFA6641001R1002

Arc monitor

Terminals	
X1 1-10	Detector input
X2 1-10	Extra detector unit detector input (option)
X3 1-10	Extra detector unit detector input (option)
A1, A2	Power supply
TVOC-2-48: A1, A2, A3	Power supply
PE	Power supply
43, 44	Solid-state contacts
53, 54	Solid-state contacts
63, 64	Solid-state contacts
11, 12, 14	Indication contacts
21, 22, 24	Indication contacts
31, 32, 34	Indication contacts

Current Sensing Unit

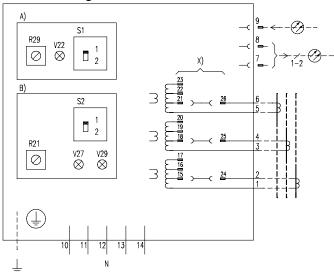

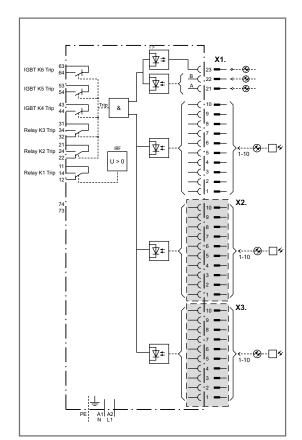

TVOC-2-240 1SFA664001R1001

Current Sensing Unit

		-		
Terminal	s			
1 6	Current	transformer terminals		
7 and 8	Output current signal to another			
	Current	Sensing Unit or Arc monitor		
9	Input cu	rrent signal from another		
	Current	Sensing Unit		
Power su	pply terr	ninals		
10 and 12	24 V DC			
11 and 12	60 V DC			
11 and 12	48 V DC	Interconnection 11-13		
13 and 12	110 V - 1	25 V AC / DC		
14 and 12	220 V D C	C, 230 V AC		
A) Testin	g faciliti	es:		
R29	Simulati	ng a test current		
S1	1 = Test position			
	2 = Operation position			
V22	Red	ON = S1 in test position		
		OFF = S1 in operation position		
B) Settin	g faciliti	es:		
R21	Overcuri	ent setting		
S2	1 = Input 9 not used			
	2 = Input	9 used		
V27	Yellow	ON = Load current less than		
		70% of set overcurrent level		
		OFF = Load current more than 70% of		
		overcurrent level		
V29	Green	ON = Load current less than set		
		overcurrent level		
		OFF = Load current more than		
		set overcurrent level		
	it range l	bridge connections		
	24-17, 25-20, 26-23			
1A:		,		
1A: 2A:		5-20, 26-23 5-19, 26-22		



ABB AB Electrification Products Division Low Voltage Products and Systems Smart Power Motorgränd 20 SE-721 61 Västerås / Sweden

You can find the address of your local sales organisation on the ABB home page.



http://new.abb.com/low-voltage/products/arc-guard



http://www.abb.com/lowvoltage

We reserve the right to make technical changes or modify the contents of this document without prior notice. ABB does not accept any responsibility whatsoever for potential errors or possible lack of information in this document.

We reserve all rights in this document and in the subject matter and illustrations contained therein. Any reproduction, disclosure to third parties or utilization of its contents – in whole or in parts – is forbidden without prior written consent of ABB.

Copyright© 2019 ABB - All rights reserved