

Series 11-22-MXP/MXPJ6

Air slide table
ø6, ø10, ø12, ø16

How to Order

• **Clean series**
11 Vacuum suction type

11 — MXP 12 15 [] [] — M9N []

22 — MXP 12 15 [] [] — M9N []

• **Copper, fluorine and silicon-free + low particle generation**
22 Vacuum suction type

• **Bore size - Stroke mm**

ø6	5, 10
ø10	10, 20
ø12	15, 25
ø16	20, 30

• **Adjuster option**

Nil	Rubber stopper
C	Metal stopper
H	Without adjuster

* Adjuster for series 11-MXP6 is available for one side only. Without adjuster type is unavailable for series 11-MXP6.

• **Auto switch**

Nil	With magnet and rail
N	Without magnet and rail

* Auto switch cannot be mounted on types without magnet and rail (N).

• **Number of auto switches**

Nil	2 pcs.
s	1 pc.
n	n pcs.

• **Type of auto switch**

Nil	Without auto switch
-----	---------------------

* Refer to the table below for auto switch part numbers.



11-MXP

How to Order 11- MXPJ6

• **Clean series**
11 Vacuum suction type

11 — MXPJ6 — 10

22 — MXPJ6 — 10

• **Copper, fluorine and silicon-free + low particle generation**
22 Vacuum suction type

* With auto switch type is unavailable for 11-MXPJ6.

• **Stroke**

5	5mm
10	10mm



Auto switch specifications (Refer to Best Pneumatics catalog for detailed specifications and auto switches not in the following table.)

Style	Special function	Electrical entry	Indicator light	Wiring (Output)	Load voltage			Auto switch model	Lead wire length (m)*		Applicable load	
					DC	AC			0.5 (Nil)	3 (L)		
Reed switch	—	Grommet	Yes	2-wire	24V	12V	100V	A93	●	●	—	Relay, PLC
Solid state switch	—	Grommet	Yes	3-wire (NPN)	24V	12V	—	M9N	●	●	—	Relay, PLC
				2-wire		12V		M9B	●	●	—	

* Lead wire symbol 0.5m.....Nil (Example) A93
3m.....L A93L

PLC: Programmable Logic Controller

Refer to applicable auto switch list — Page 182.

Specifications




Model		11-/22-MXPJ6	11-/22-MXP6	11-/22-MXP10	11-/22-MXP12	11-/22-MXP16
Bore size (mm)		6	6	10	12	16
Piping port size		M3 x 0.5		M5 x 0.8		
Fluid		Air				
Action		Double acting				
Operating pressure		0.15 to 0.7 MPa				
Proof pressure		1.05 MPa				
Ambient and fluid temperature		-10 to 60°C				
Piston speed		30 to 200 mm/s				
Cushion		Rubber bumper	Rubber bumper (Rubber stopper)			
			—	Rubber bumper (Without adjuster)		
			No (Metal stopper)			
Lubrication		Non-lube				
Stroke adjuster		—	Standard equipment (MXP6 : Adjustable on one side only)			
Stroke adjustment range	Rubber stopper	—	0 to 5mm on one side only	0 to 3 mm at both ends		
	Metal stopper	—	0 to 6mm on one side only	0 to 5 mm at both ends	0 to 4 mm at both ends	
Stroke length tolerance		+1 0 mm				
Grease		11-: Fluorine grease 22-: Lithium soap base grease				
Particle generation grade (Refer to front matter pages 13 to 22 for details.)	Without adjuster	Grade 1	—	Grade 1		
	Rubber stopper	—	Grade 2	Grade 2		
	Metal stopper	—	Grade 4	Grade 4		

Suction flow rate of vacuum type (Reference values)

Size	Suction flow rate ℓ/min (ANR)
6	1
10	3
12	4
16	6

Auto switches / Proper mounting position for stroke end detection

11-/22- MXP6

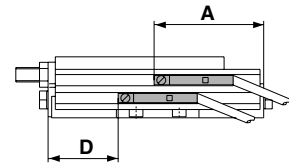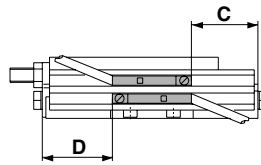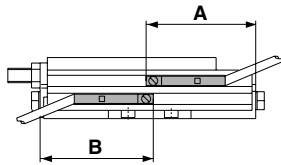

Reed switch D-A93


Model		Stroke (mm)	Auto switch operating range
		10	
11-/22-MXP 6	A	34.5	5
	B	35.5	
	C	14.5	
	D	15.5	

Solid state switch D-M9B, D-M9N


Model		Stroke (mm)		Auto switch operating range
		5	10	
11-/22-MXP 6	A	25.5	30.5	3
	B	26.5	31.5	
	C	13.5	18.5	
	D	14.5	19.5	

11-/22-MXP10, 12, 16


· Electrical entry from outside

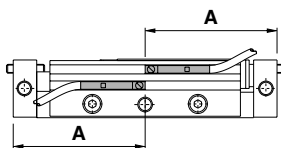

· Electrical entry from inside

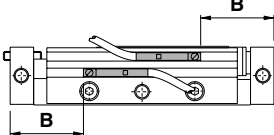

· Parallel electrical entry

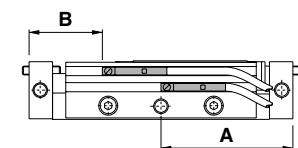



Reed switch D-A93

Model		Stroke (mm)					Auto switch operating range (mm)
		10	15	20	25	30	
11-/22-MXP10	A	35	—	45	—	—	5
	B	15	—	25	—	—	
11-/22-MXP12	A	—	40.5	—	50.5	—	
	B	—	20.5	—	30.5	—	
11-/22-MXP16	A	—	—	51	—	59	
	B	—	—	31	—	39	

Solid state switch D-M9B, D-M9N

Model		Stroke (mm)					Auto switch operating range (mm)
		10	15	20	25	30	
11-/22-MXP10	A	31	—	41	—	—	3
	B	19	—	29	—	—	
11-/22-MXP12	A	—	36.5	—	46.5	—	
	B	—	24.5	—	34.5	—	
11-/22-MXP16	A	—	—	47	—	55	
	B	—	—	35	—	43	


Dimensions / 11-22-MXPJ6

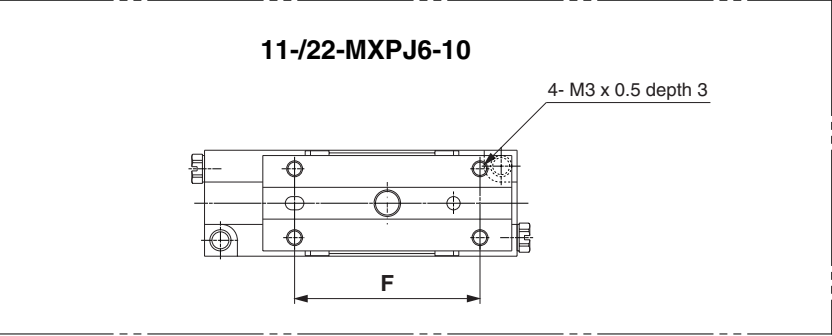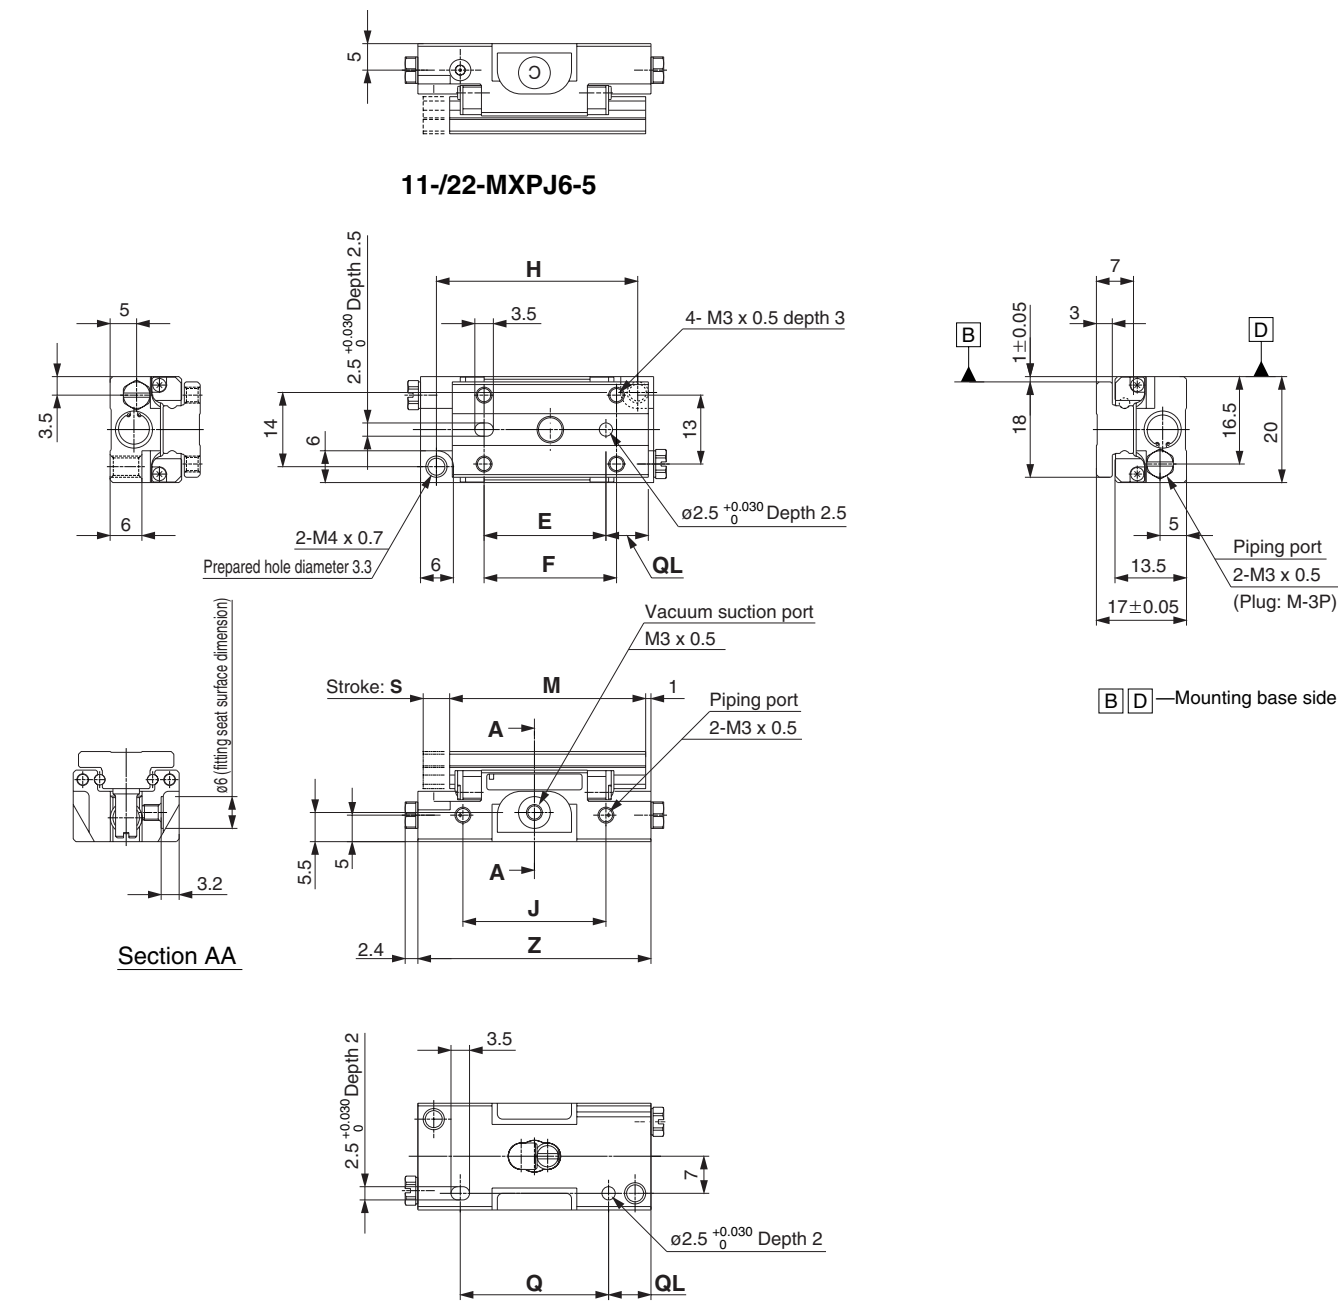


(mm)

Model	E	F	H	J	M	Q	QL	S	Z
11-22-MXPJ6-5	23	25	38	27	37	28	8	5	44
11-22-MXPJ6-10	30	35	53	42	47	37	11	10	59

Dimensions: 11-22-MXP6





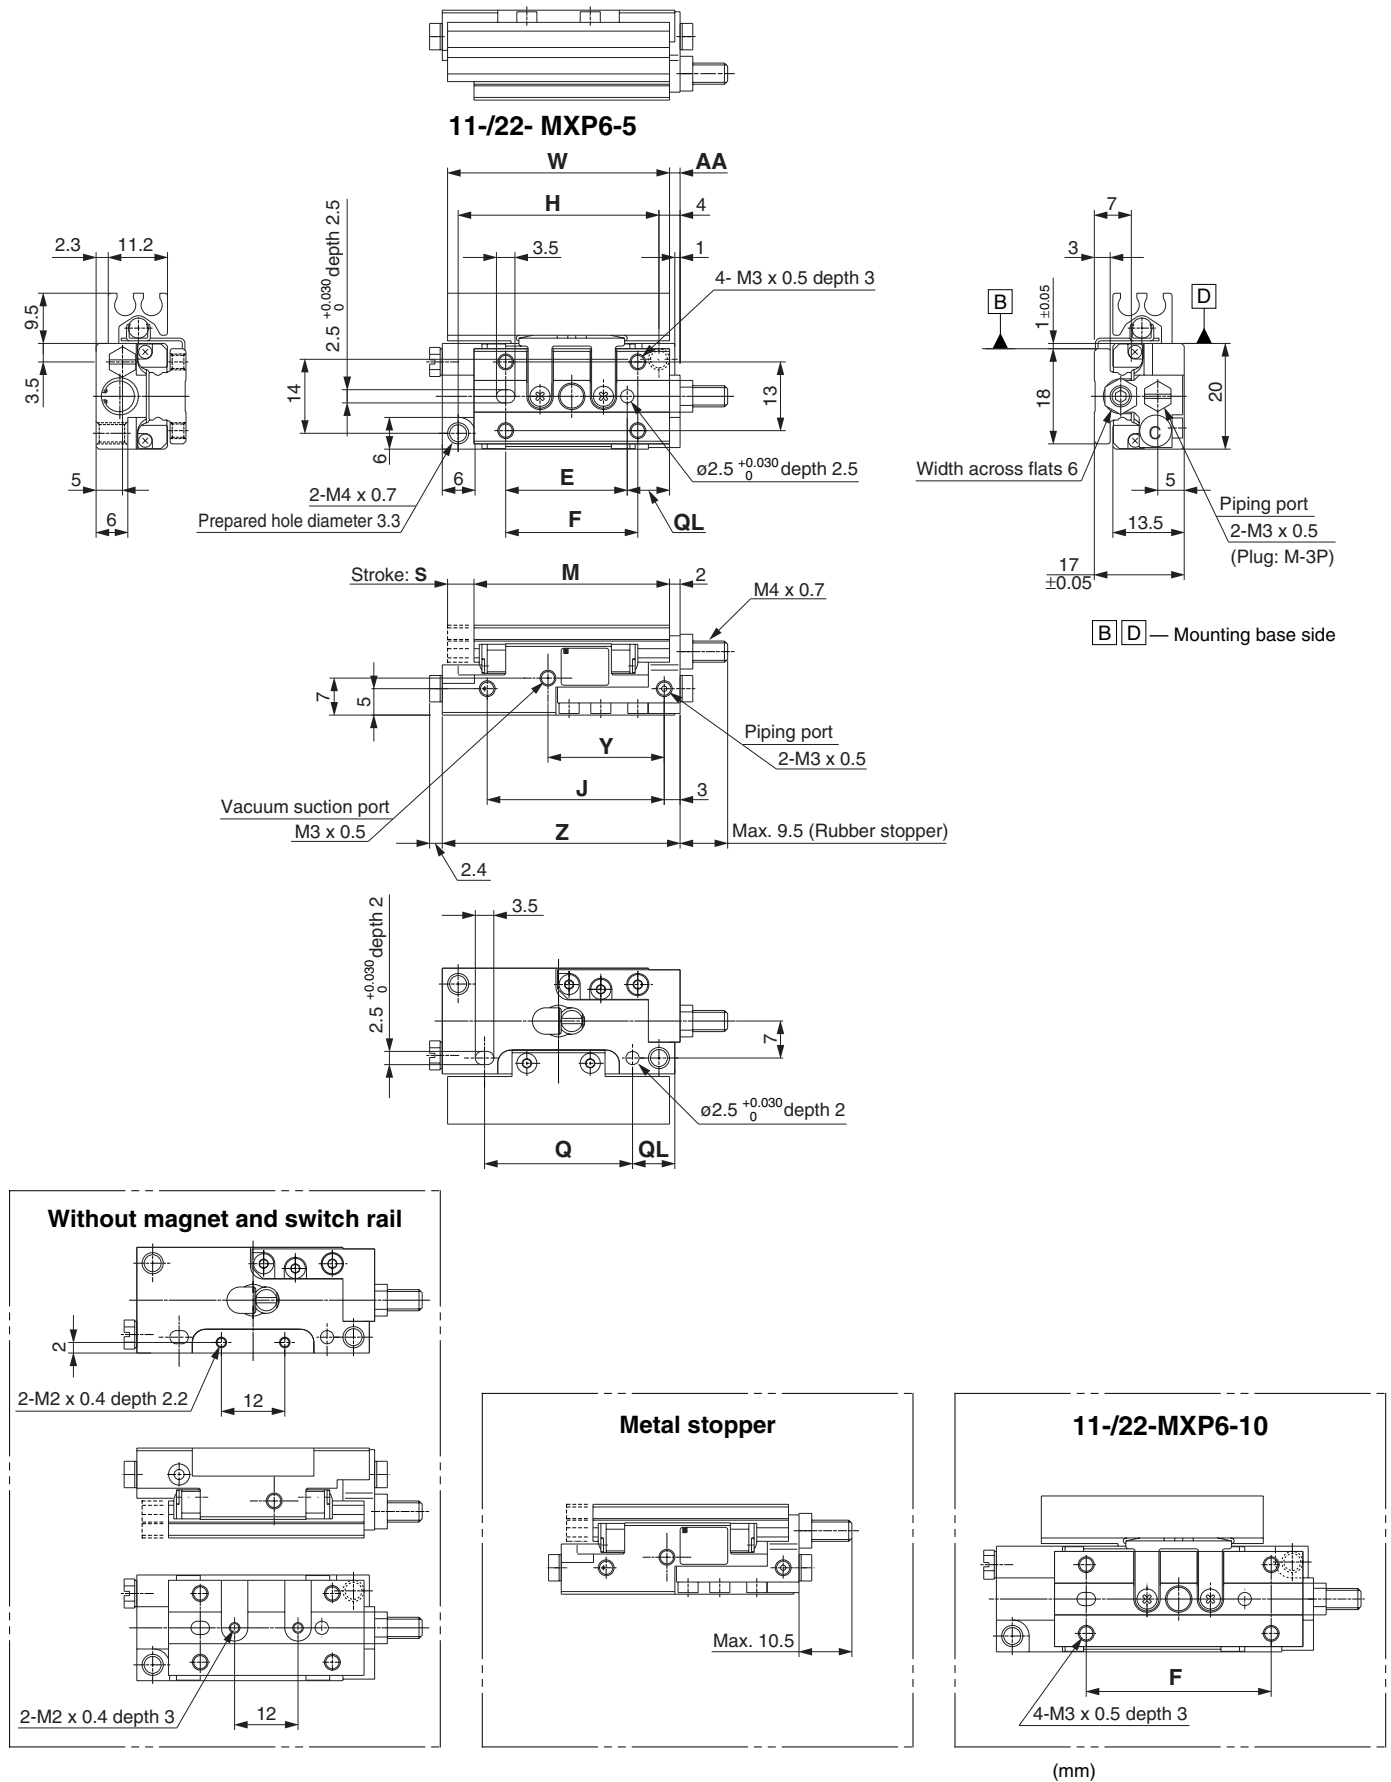


Model	E	F	H	J	M	Q	QL	S	W	Y	Z	AA
11-22-MXP6-5	23	25	38	33.5	37	28	8	5	42	22	45	2
11-22-MXP6-10	30	35	42	48.5	47	37	11	10	53	27.5	60	9.5

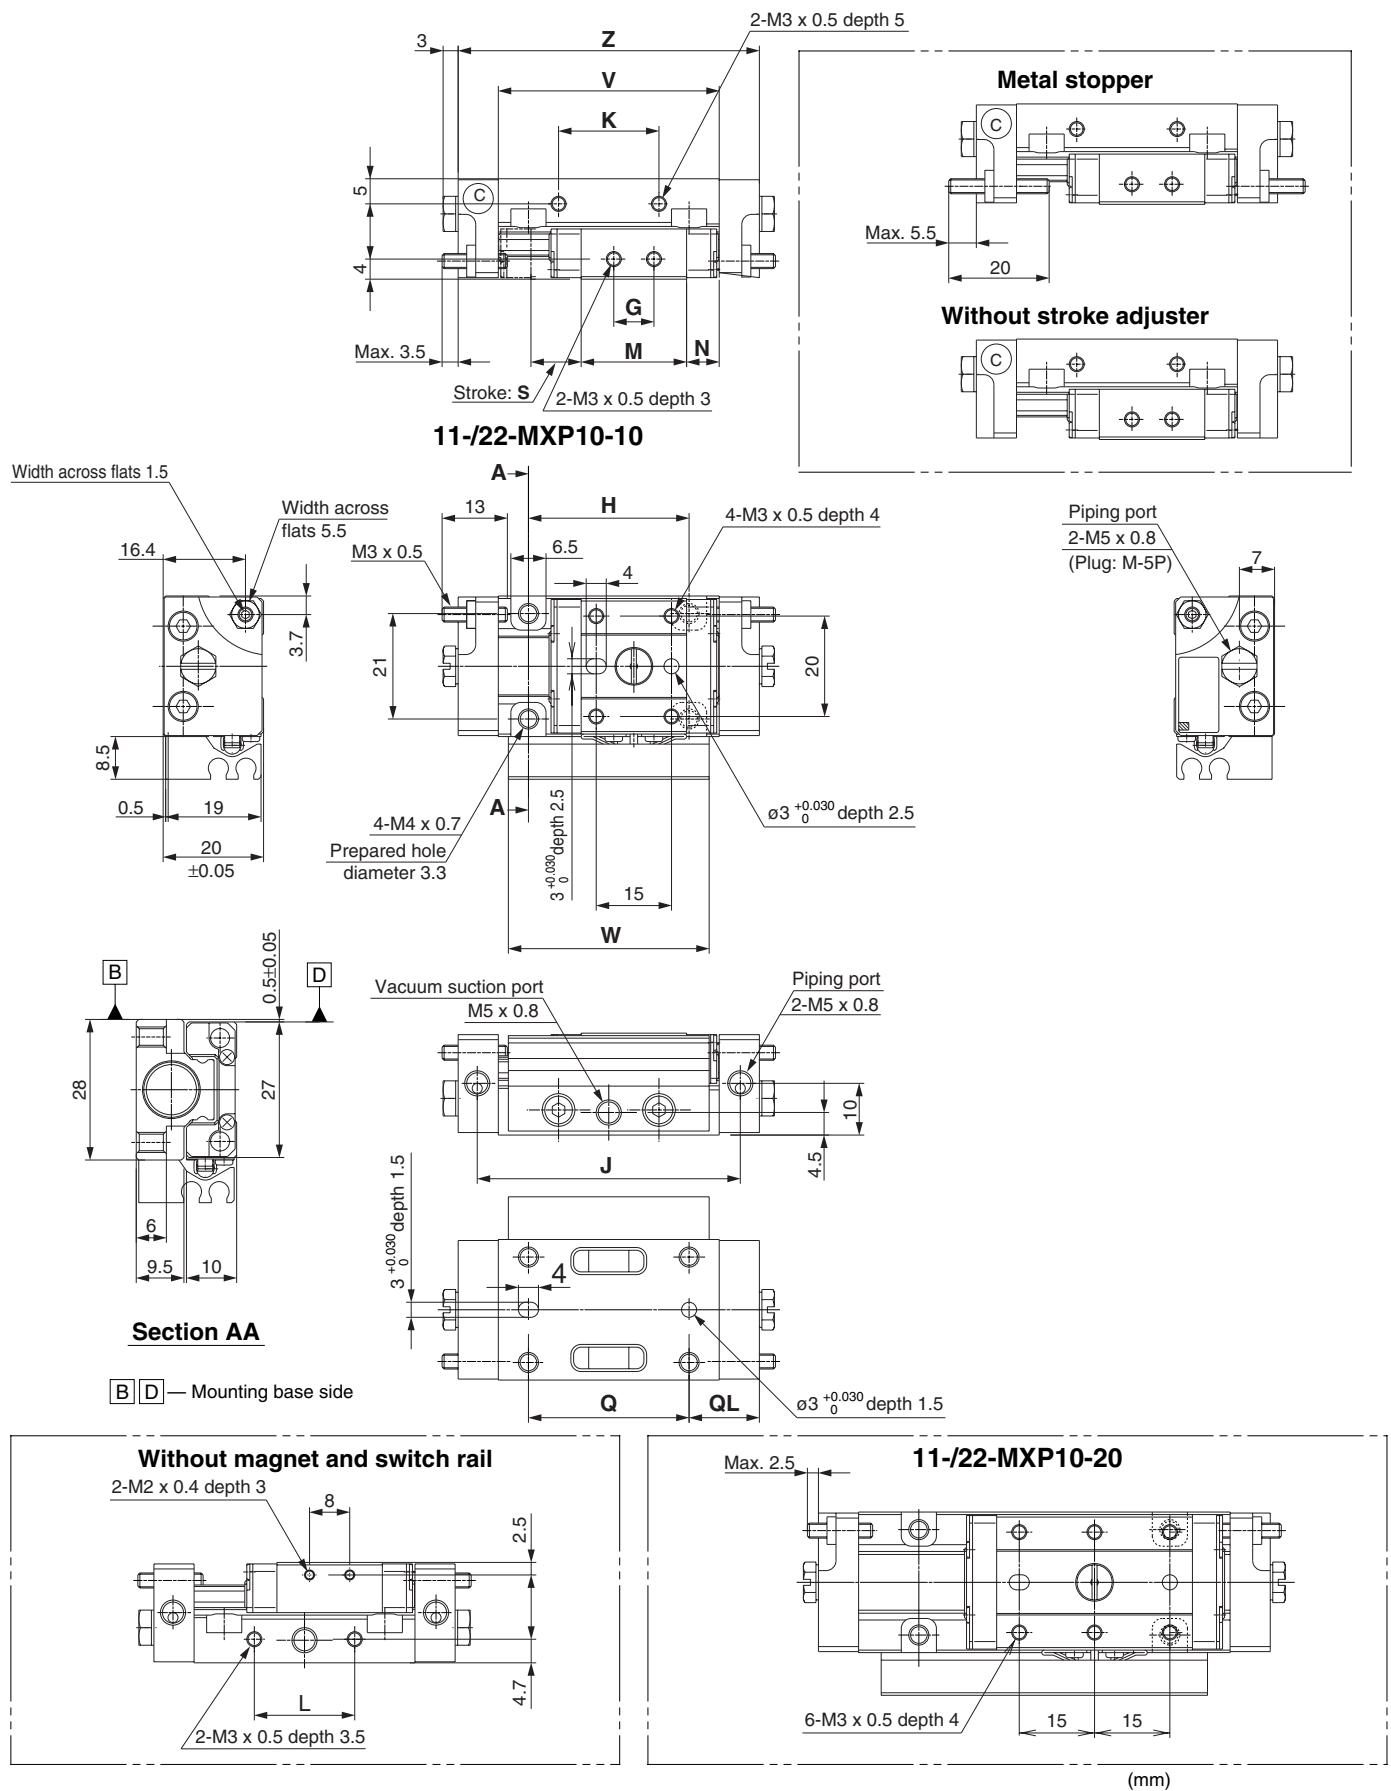Dimensions: 11-22-MXP10


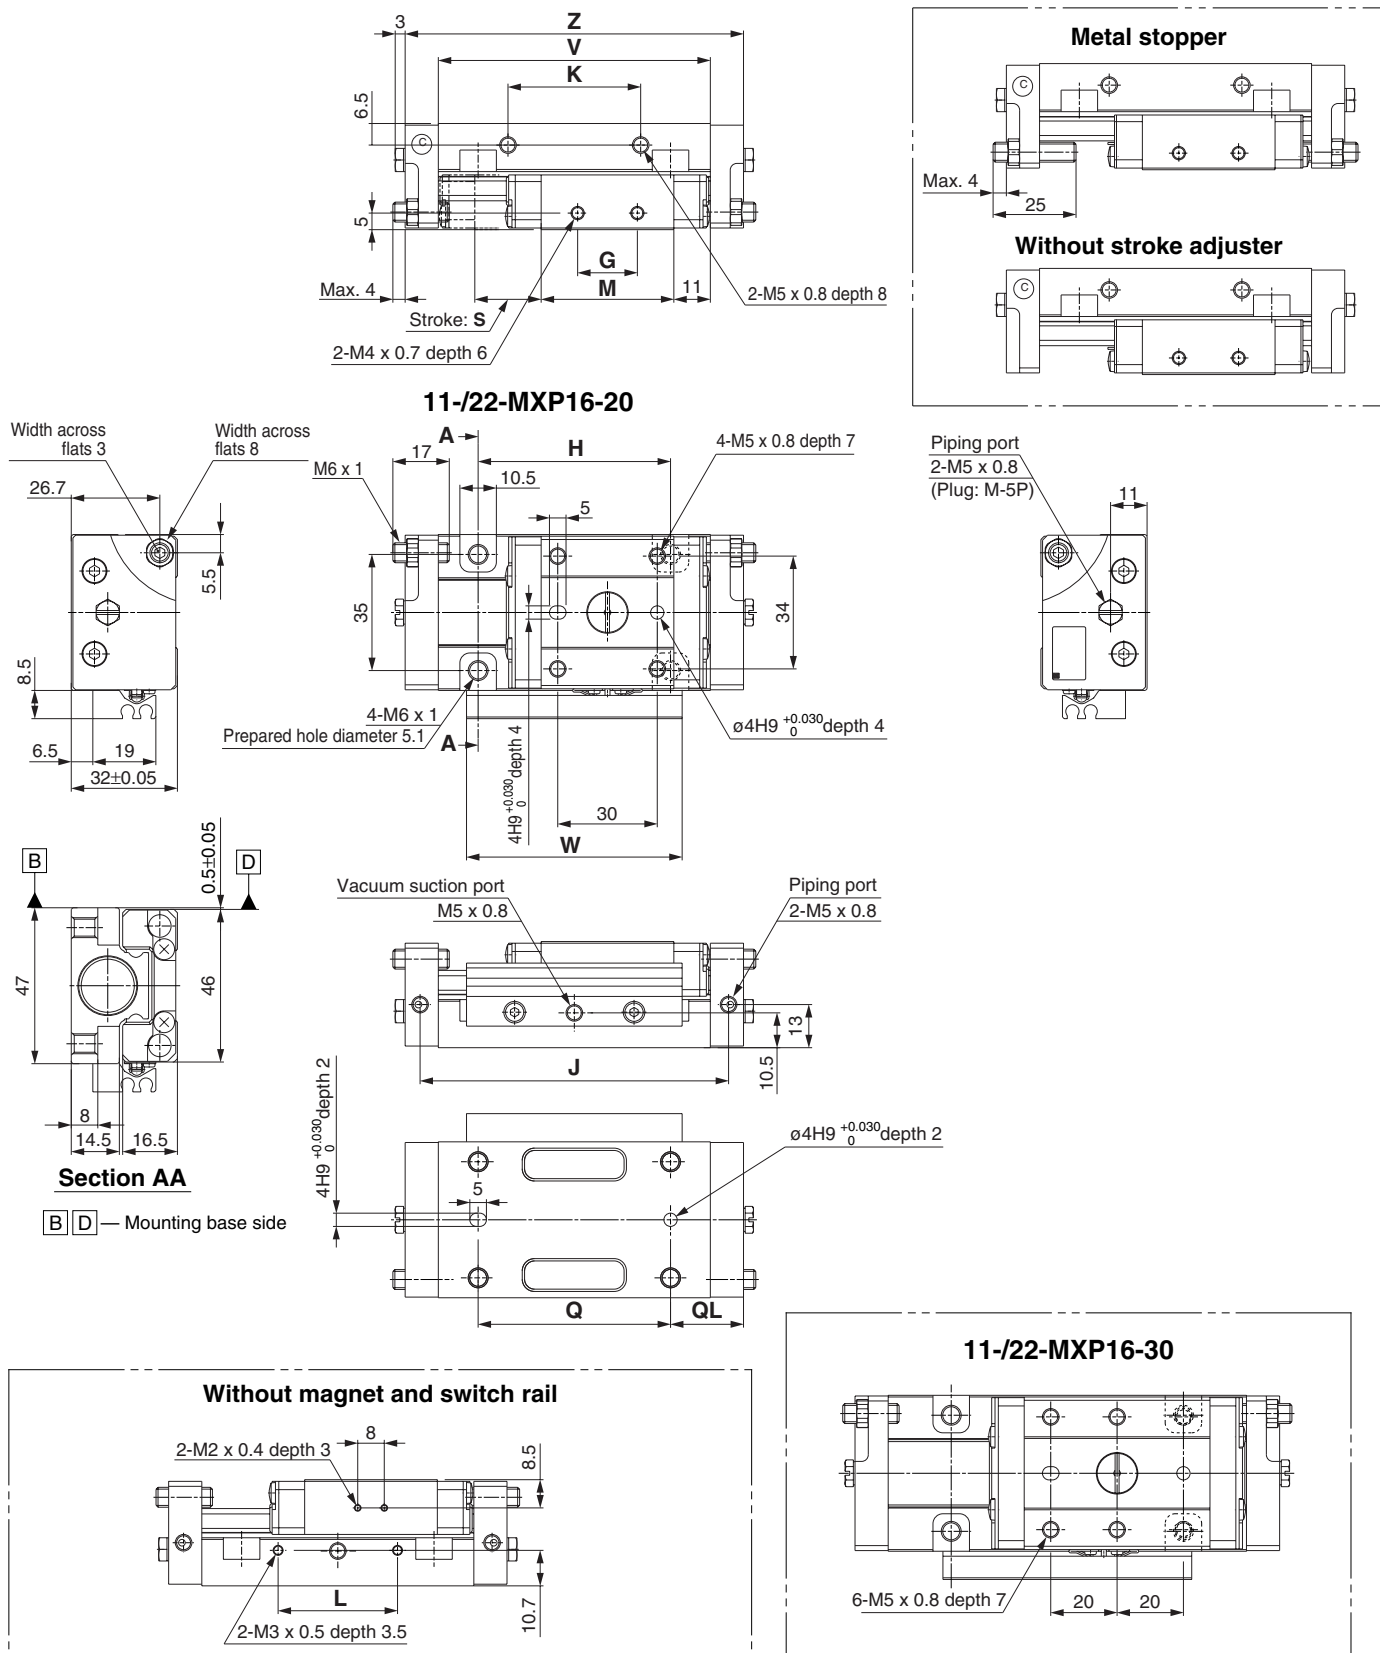
Model	G	H	J	K	L	M	N	Q	QL	S	V	W	Z
11-22-MXP10-10	8	32	52.4	20	20	21	6.5	32	14	10	44	40	60
11-22-MXP10-20	20	50	82.4	36	36	39	7.5	50	20	20	74	65	90

Dimensions: $\frac{11}{22}$ -MXP12

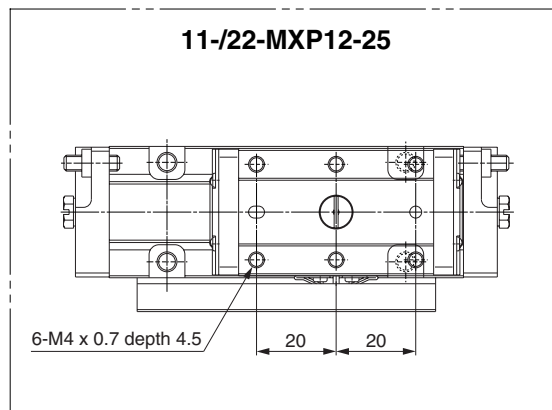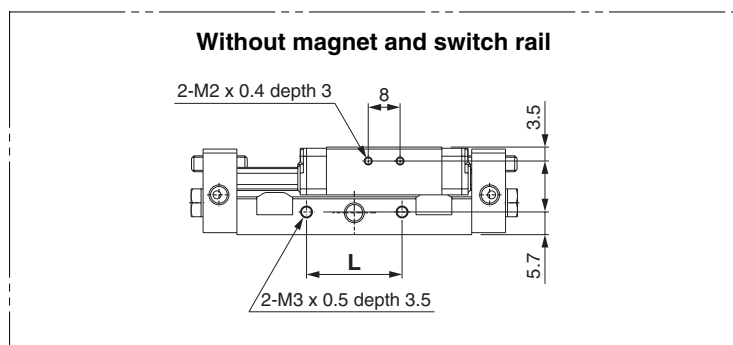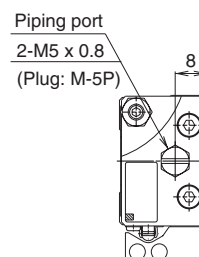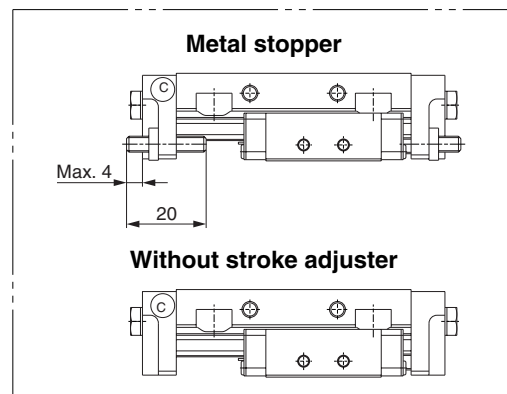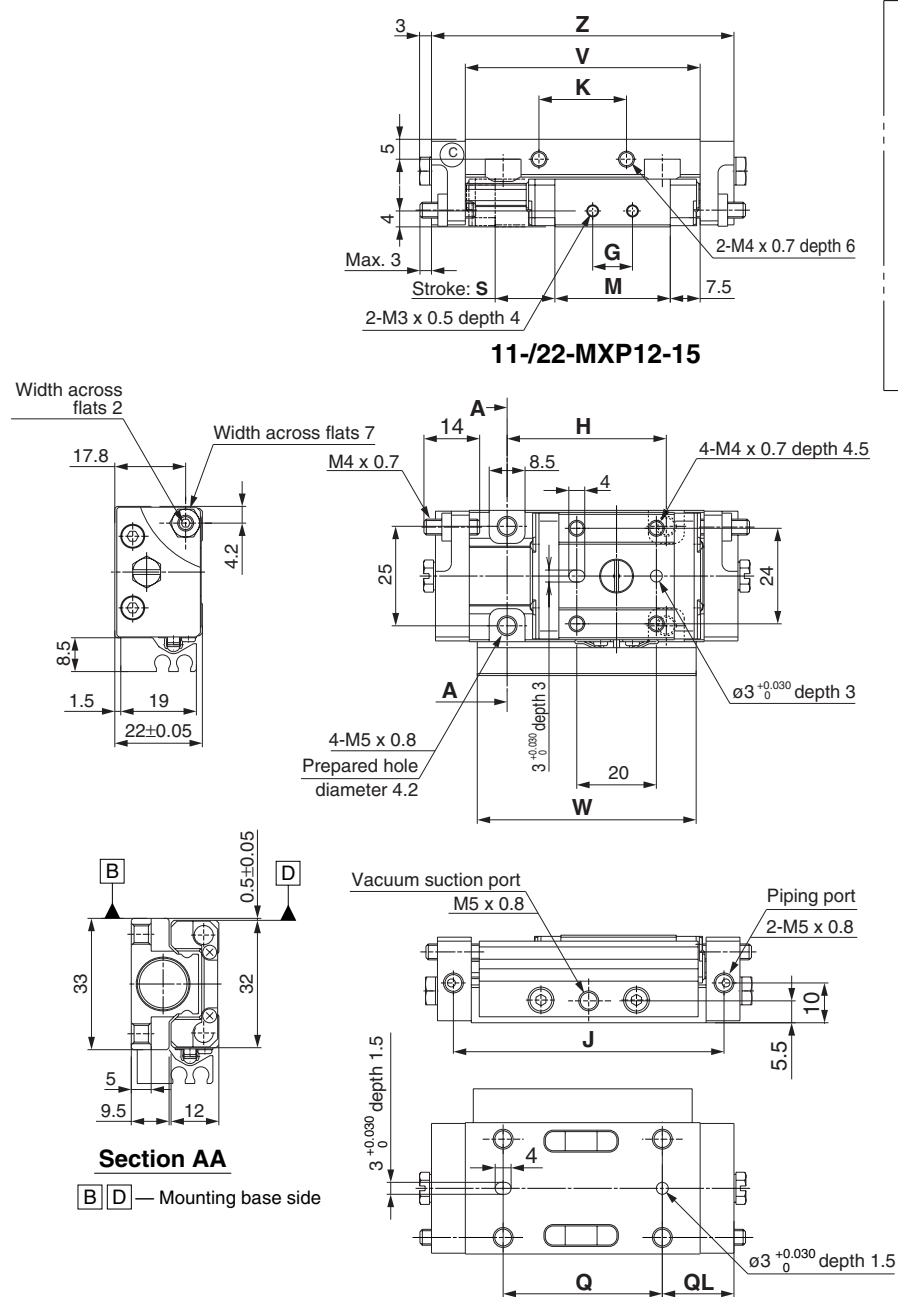

(mm)												
Model	G	H	J	K	L	M	Q	QL	S	V	W	Z
11-/22-MXP12-15	10	40	68	22	24	29	40	18	15	59	55	76
11-/22-MXP12-25	30	60	98	40	42	49	60	23	25	89	75	106

Dimensions: 11-22-MXP16



(mm)												
Model	G	H	J	K	L	M	Q	QL	S	V	W	Z
11-/22-MXP16-20	18	58	93	40	36	40	58	22	20	82	65	102
11-/22-MXP16-30	28	70	119	50	42	56	70	29	30	108	75	128

Made to Order

Anti-corrosive specifications for guide unit	-X42
--	------

11-/22-MXP Standard model no. -X42

11-/22-MXPJ6 Standard model no. -X42

Martensitic stainless steel is used for body, table and guide block. Use this treatment if more effective anti-corrosiveness is necessary. Anti-corrosive treatment ^{Note 2)} is applied to the body, table and guide block.

Note 1) Dimensions are the same as standard type.

Note 2) Special anti-corrosive treatment makes the body, the table and the guide black.

! Specific Product Precautions


Be sure to read before handling.

Mounting

! Caution

Mount the body on a flat surface in case of 11-/22-MXPJ6 series.

11-/22-MXPJ6 series has an opening on the bottom surface of the body and the opening is connected to the vacuum suction port. Sufficient vacuum suction may not be achieved in presence of any clearances.

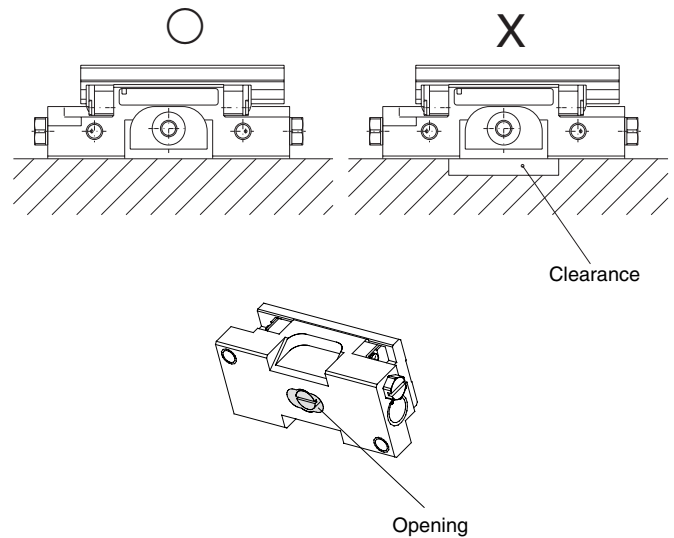

Air cylinder

Rotary actuator

Air gripper

Directional control valve

Flow control equipment

Filter, Pressure control equipment

Fittings & Tubing

Air preparation equipment

Pressure switch

Clean gas filter