

Installation Guide Technology Module

ENG

TM01

**Important Notice:**

Please note that we use machine translation to provide documents in your local language. It is possible that not all texts will be translated correctly. If you have any questions or discrepancies regarding the accuracy of the information in the translated version, please read the original English version (0185-1180-E).

Please visit <https://www.linmot.com> to check for the latest version of this document!

Content

1	General Information.....	3
1.1	Introduction	3
1.2	Explanation of Symbols	3
1.3	Qualified Personnel	3
1.4	Liability	3
1.5	Copyright.....	3
2	Safety Instructions	4
3	System Overview.....	6
4	Interfaces	7
5	Functionality	8
6	Software.....	9
6.1	Webinterface	9
6.2	WebVisu	10
6.3	License Dongle.....	10
7	Power Supply and Grounding.....	11
8	Description of the connectors / Interfaces.....	12
8.1	X1.....	12
8.2	X2.....	12
8.3	X3 / X10	12
8.4	X4.....	12
8.5	X11 / X12	12
8.6	E-Bus Out	13
8.7	Out 1/2 (EtherCAT I/O Extender).....	13
8.8	E-Bus In/Out (EtherCAT I/O Extender)	13
9	Physical Dimension.....	14
10	Power Supply Requirements.....	15
10.1	Power Supply	15
11	Ordering Information.....	16
11.1	Technology Modules	16
12	International Certifications	17
12.1	EU Declaration of Conformity CE Marking (Base Module).....	18
12.2	UK Declaration of Conformity UKCA Marking (Base Module).....	19
12.3	EU Declaration of Conformity CE Marking (I/O Extender)	20

1 General Information

1.1 Introduction

This manual includes instructions for the assembly, installation, maintenance, transport, and storage of the Technology Module 01 (TM01). The document is intended for electricians, mechanics, service technicians, and warehouse staff. Read this manual before using the product and always observe the general safety instructions and those in the relevant section.

Keep these operating instructions in an accessible place and make them available to the personnel assigned.

1.2 Explanation of Symbols



Triangular warning signs warn of danger.



Round command symbols tell what to do.

1.3 Qualified Personnel

All work such as installation, commissioning, operation, and service of the product may only be carried out by qualified personnel.

The personnel must have the necessary qualifications for the corresponding activity and be familiar with the installation, commissioning, operation, and service of the product. The manual and in particular the safety instructions must be carefully read, understood, and observed.

1.4 Liability

NTI AG (as manufacturer of LinMot and MagSpring products) excludes all liability for damages and expenses caused by incorrect use of the products. This also applies to false applications, which are caused by NTI AG's own data and notes, for example during sales, support or application activities. It is the responsibility of the user to check the data and information provided by NTI AG for correct applicability in terms of safety.

NTI AG's warranty is limited to repair or replacement as stated in our standard warranty policy as described in our "terms and conditions" previously supplied to the purchaser of our equipment (please request copy of same if not otherwise available). Further reference is made to our general terms and conditions.

1.5 Copyright

This work is protected by copyright.

Under the copyright laws, this publication may not be reproduced or transmitted in any form, electronic or mechanical, including photocopying, recording, microfilm, storing in an information retrieval system, not even for training purposes, or translating, in whole or in part, without the prior written consent of NTI AG.

LinMot® and MagSpring® are registered trademarks of NTI AG.

2 Safety Instructions



For your personal safety

Disregarding the following safety measures can lead to severe injury to persons and damage to material:

- Only use the product as directed.
- Never commission the product in the event of visible damage.
- Never commission the product before assembly has been completed.
- Do not carry out any technical changes on the product.
- Only use the accessories approved for the product.
- Only use original spare parts from LinMot.
- Observe all regulations for the prevention of accidents, directives and laws applicable on site.
- Transport, installation, commissioning, and maintenance work must only be carried out by qualified personnel.
- Observe IEC 364 and CENELEC HD 384 or DIN VDE 0100 and IEC report 664 or DIN VDE 0110 and all national regulations for the prevention of accidents.
- According to the basic safety information, qualified, skilled personnel are persons who are familiar with the assembly, installation, commissioning, and operation of the product and who have the qualifications necessary for their occupation.
- Observe all specifications in this documentation.
- This is the condition for safe and trouble-free operation and the achievement of the specified product features.
- The procedural notes and circuit details described in this documentation are only proposals. It is up to the user to check whether they can be transferred to the applications. NTI AG / LinMot does not accept any liability for the suitability of the procedures and circuit proposals described.
- Non-authorized removal of the required cover, inappropriate use, incorrect installation, or operation create the risk of severe injury to persons or damage to material assets.
- For more information, please see the documentation.



Application as directed

- TM01 are components, which are designed for installation in electrical systems or machines. They are not to be used as domestic appliances, but only for industrial purposes according to EN 61000-3-2.
- When TM01 are installed into machines, commissioning (i.e., starting of the operation as directed) is prohibited until it is proven that the machine complies with the regulations of the EC Directive 2006/42/EG (Machinery Directive); EN 60204 must be observed.
- Commissioning (i.e., starting of the operation as directed) is only allowed when there is compliance with the EMC Directive (2014/30/EU).
- The technical data and supply conditions can be obtained from the nameplate and the documentation. They must be strictly observed.



Transport, storage

- Please observe the notes on transport, storage, and appropriate handling.
- Observe the climatic conditions according to the technical data.

**Installation**

- The TM01 must be installed and cooled according to the instructions given in the corresponding documentation.
- The ambient air must not exceed degree of pollution 2 according to EN 61800-5-1.
- Ensure proper handling and avoid excessive mechanical stress. Do not bend any components and do not change any insulation distances during transport or handling. Do not touch any electronic components and contacts.
- TM01 contain electrostatic sensitive devices, which can easily be damaged by inappropriate handling. Do not damage or destroy any electrical components since this might endanger your health!

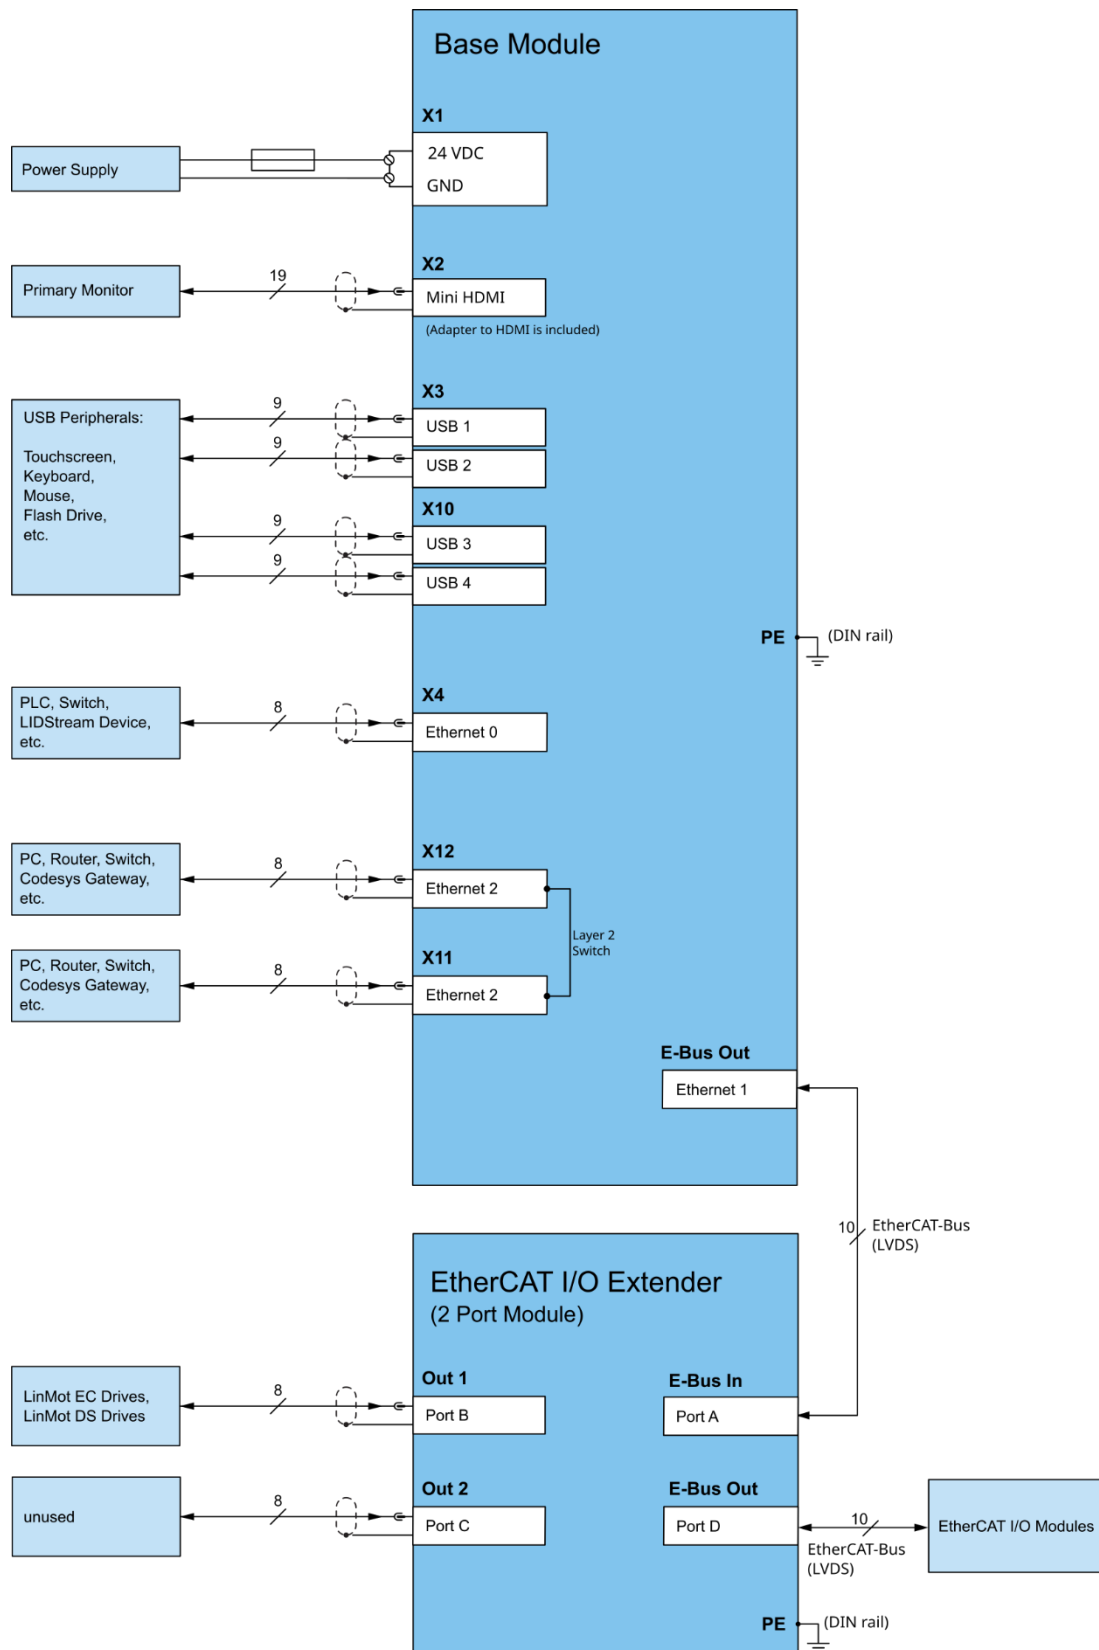
**Electrical connection**

- When working on live TM01, observe the applicable national regulations for the prevention of accidents.
- The electrical installation must be carried out according to the appropriate regulations (e.g. cable cross-sections, circuit breakers, fuses, PE connection). Additional information can be obtained from the documentation.
- This product can cause high-frequency interferences in non-industrial environments, which can require measures for interference suppression.

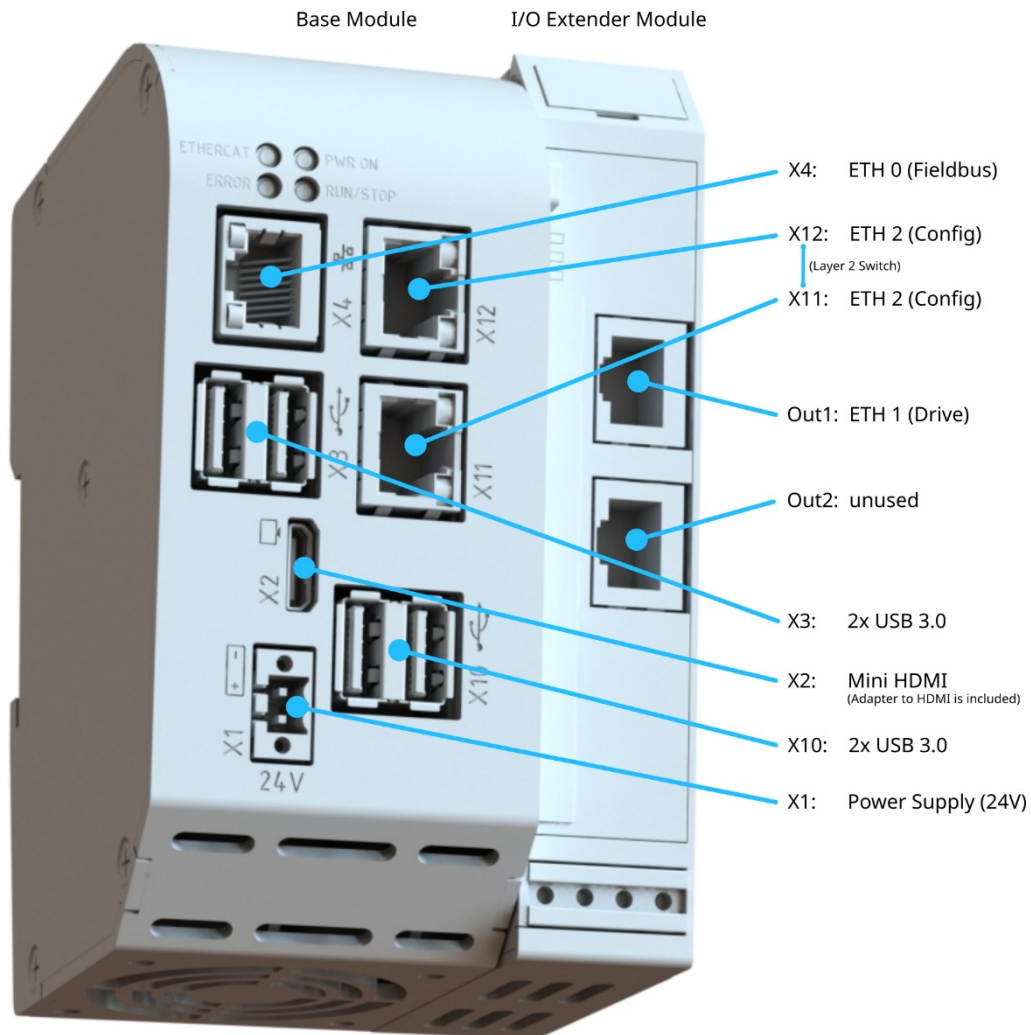
**Grounding**

All metal parts that are exposed to contact during any user operation or servicing and likely to become energized shall be reliably connected to the means for grounding.

3 System Overview



4 Interfaces



5 Functionality

	TM01-2xxx	TM01-3xxx	TM01-4xxx
Article Number	<u>0150-6552</u>	<u>0150-6553</u>	<u>0150-6491</u>
CODESYS Licenses			
CODESYS Control	•	•	•
CODESYS SoftMotion	•	•	
CODESYS SoftMotion CNC & Robotics		•	
ETH0 Interface			
LIDStream	•	•	•
PROFINET Device (Slave)	•	•	•
EtherNet/IP Adapter (Slave)	•	•	•
Modbus/TCP Slave	•	•	•
ETH1 Interface			
EtherCAT Master	•	•	•
EtherCAT SoftMotion Master (CiA402)	•	•	•
ETH2 Interface			
CODESYS WebVisu	•	•	•
OPC UA Server	•	•	•

6 Software

6.1 Webinterface

The TM01 web interface allows to change many settings, such as IP-address, time, firmware, etc. Some settings can render your device useless. Only make changes to what is described in this installation guide.

To call the web interface, enter <https://<ip-address>:8443> in the address bar of a web browser. The default IP address can be located on the LinMot-Label on the TM. To use the default address, make sure that the computer is directly connected to port X11/X12 (ETH2) without a router in between. If a DHCP router is found during bootup the port will automatically receive an address from it.

Login

The username and default password are written on the label. It is highly recommended to change the password if physical access to the device is not restricted.

Network Configurations

The network address of ETH2 (X11/X12) can be changed under Configuration>Network. To save the change, press "Save" and reboot the TM (System>Reboot). Do not make any changes to the networks ETH0, ETH1 or ETH2:1.

Per default ETH2 is configured as "dhcp" and ETH2:1 holds the static IP address which is located on the label. Its netmask is 255.255.0.0 and the gateway is 0.0.0.0. ETH0 is configured as a "profinet device" with gateway 0.0.0.0. ETH1 is configured as "ethercat" and is used by the EtherCAT Bus Extender.

Network Recovery Mode

To enter the network recovery mode (when no connection is possible) press the button S1 located on top of the TM01, while plugging in the power cord. Keep the button pressed until the Run/Stop LED blinks yellow. Set the IPv4 address of the computer's ethernet adapter to 169.254.255.254, with subnet mask of 255.255.255.0. Connect the computer to ETH0 (X4) and enter the web interface with the default IP address located on the LinMot-Label (<https://<ip-address>>). Change the IP address settings of ETH0 and ETH2/ETH2:1, press "Save" and reboot the TM (System>Reboot). Set the IPv4 address of the computer's ethernet adapter back to DHCP (Obtain an IP address automatically).

Time / Timezone

The default timezone is UTC. To change it to your location, navigate to 'Configuration>Time and Date>Timezone'. Press "Change Timezone" to save the changes.

The time and date have to be checked and updated after a timezone change under 'Configuration>Time and Date>Date'. Press "Change Time and Date" to save the changes.

To use NTP time synchronization, first add a DNS Server under 'Configuration>Network>Common'. Save the changes. Navigate to 'Configuration>Time and Date>Time syncing' and activate "Use ntpdate", "Sync RTC with NTP" and fill out one or more NTP servers. Press "Save" to save the changes.

PLC Application Update

To update the plc application, the PLC has to be in stopped state. Navigate to 'PLC-Manager>Control' and press the button "Stop All Applications".

Then navigate to 'PLC-Manager>Application files' and press "Upload folder to PLC". Choose the new plc application .tgz file which you received by LinMot and press "Submit".

Firmware Update

Important: Only update the firmware if a new plc application needs its dependency. The name of the plc application indicates the required firmware this with the following string: "FWx.x.x".

Navigate to 'System>Update' and press the "Browse..." button. Select the firmware file (TM01-firmware_mc-pi_plc_x.x.x.tgz) and press "Submit Query" to start the update process. Wait until the update is finished and do not remove the power cord.

6.2 WebVisu

The Web Visualization shows the graphical interface of a running PLC Application such as the "LinMot-Pilot".

To call the WebVisu, enter `http://<ip-address>` in the address bar of a web browser. The default IP address can be located on the LinMot-Label on the TM. To use the default address, make sure that the computer is directly connected to port X11/X12 (ETH2) without a router in between. If a DHCP router is found during bootup the port will automatically receive an address from it.

6.3 License Dongle

Some license keys will already be present on the license dongle (CmStick/B) which is connected to the TM01. The following steps will show how to activate newly purchased licenses on the license dongle.

Download and install the CodeMeter User Runtime from the following page:

<https://www.wibu.com/support/user/user-software.html>

Take note of the serial number of the license dongle which is located on one side with the following format: x-xxxxxxx.

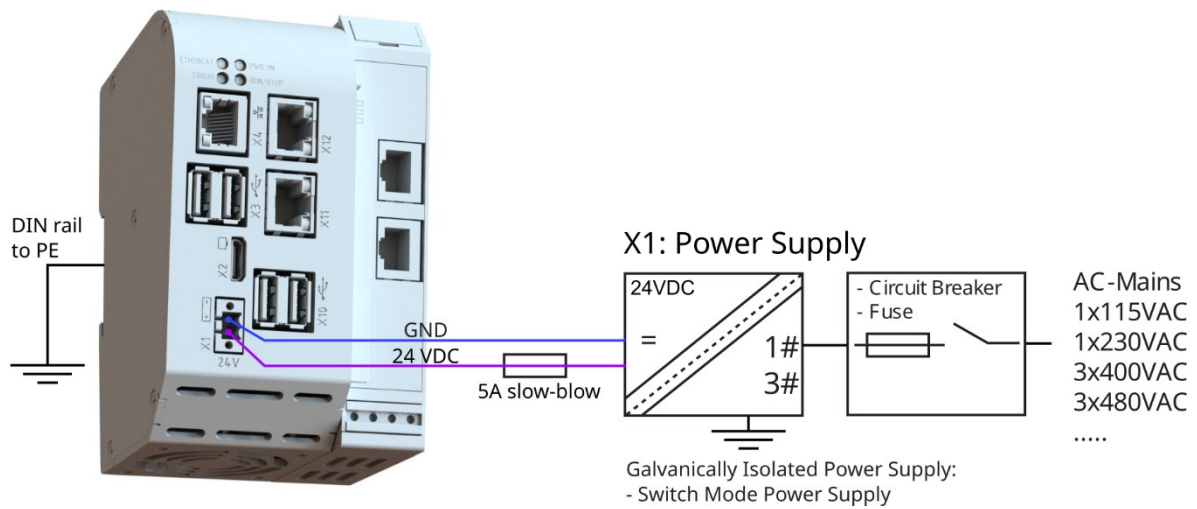


Plug the stick into the computer and open the following webpage: <https://lc.codemeter.com/97838/depot/>.

Now enter the received license key ticket into the ticket field and press "Next". Now choose the connected license dongle with the correct serial number and activate the license on it.

The license dongle is now ready to be plugged back into the TM01.

7 Power Supply and Grounding



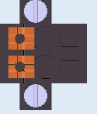
To assure a safe and error free operation, and to avoid severe damage to system components, **all system components must be well grounded to protective earth PE**. This includes both LinMot and all other control system components on the same ground bus.



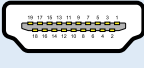
Each system component should be tied directly to the ground bus (**star pattern**). Daisy chaining from component to component is forbidden.

8 Description of the connectors / Interfaces


8.1 X1

X1	Power Supply	
	DGND PWR	Power Supply: +24 VDC (-20% / +25%) <ul style="list-style-type: none"> Use min. 0.5 mm² (AWG20) Important notes: <ul style="list-style-type: none"> The 24 VDC power supply must be protected with an external fuse (5 A slow blow)
	BLF 3.50/02/180FQV SN BK BX	Connector is included


8.2 X2

X2	Mini HDMI Port	
	HDMI 0	Supported video formats per cable type: <ul style="list-style-type: none"> HDMI Standard: max. 1920x1080p/30Hz (Full HD) HDMI High Speed: max. 3840x2160p/30Hz (4K Ultra HD)
	HDMI 1.4b	Mini HDMI to HDMI Adapter is included (15cm) (Art No. 0160-4852) Attention: The use of the HDMI port for visualization is not yet supported!


8.3 X3 / X10

X3 / X10	USB Ports	
	USB 1-4	Support of various USB devices
	USB 3.2 Gen 1x1	

8.4 X4

X4	Ethernet Port (Fieldbus)	
	ETH 0	LIDStream, PROFINET, EtherNet/IP, Modbus/TCP
	RJ-45 10/100/1000 Mbit/s	This port is used to control the TM01 from a PLC. This port can also be used to connect LIDStream-capable devices.


8.5 X11 / X12

X11/X12 (L2 Switch)	Ethernet Port (Config)	
	ETH 2	SSH, HTTP, etc.
	RJ-45 10/100 Mbit/s	This port is used to program the TM01 from the CODESYS IDE. Furthermore, the Webinterface and WebVisu Services can be reached via this port.




The Ethernet ports should never be directly accessible from the Internet. Appropriate security measures must be used (Example: Using a gateway with an activated firewall to deny incoming connections).


8.6 E-Bus Out

E-Bus Out	EtherCAT Bus (LVDS)	
	ETH1	EtherCAT LVDS (Low Voltage Differential Signaling) connector
	RJ-45 100 Mbit/s	This port is used to connect expansion modules.

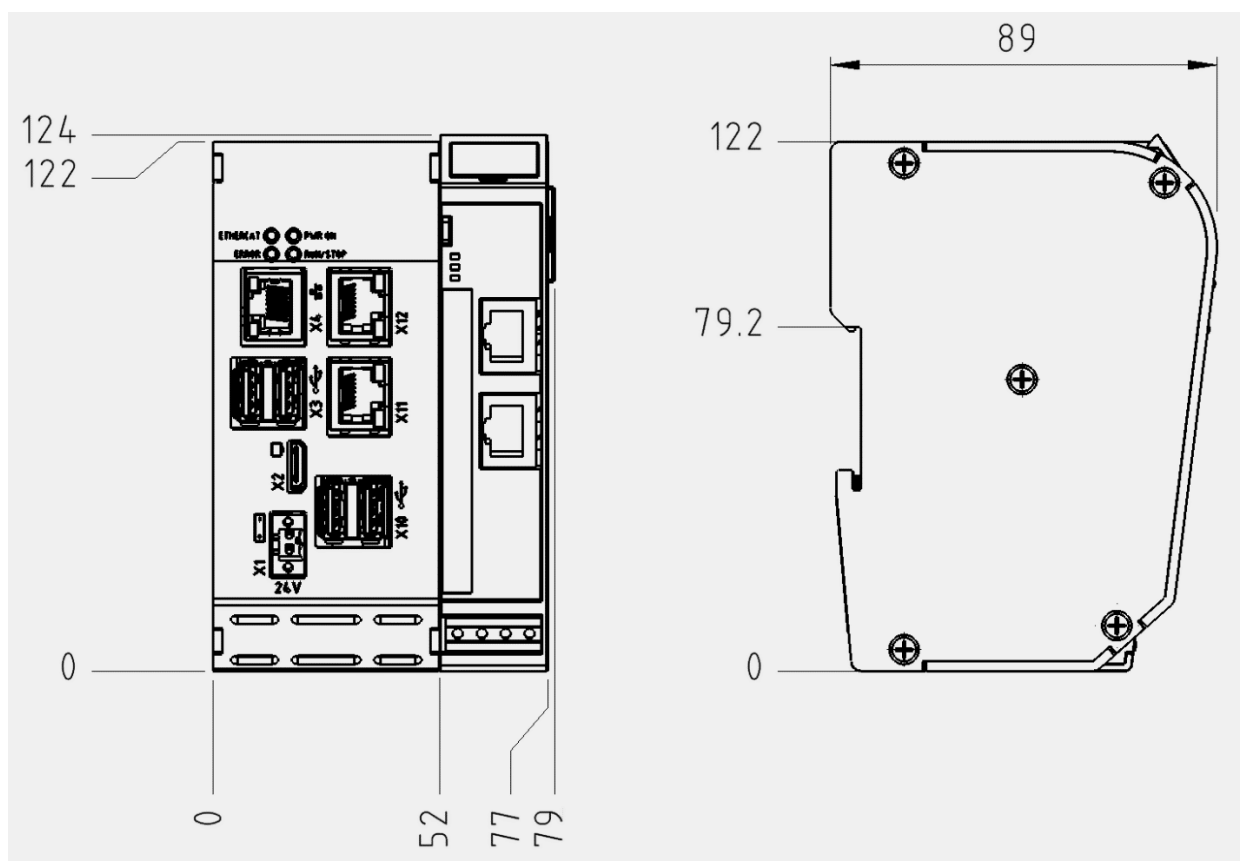
8.7 Out 1/2 (EtherCAT I/O Extender)

Out 1/2	RealTime Ethernet Port (Drive)	
	ETH1	EtherCAT, EtherCAT SoftMotion (CiA402)
	RJ-45 100 Mbit/s	Info: The ports on the extender are handled in the following order: 1. E-Bus In, 2. E-Bus Out, 3. Out 1, 4. Out 2. Therefore, the drives on Out 1/2 are always the last datagrams in the EtherCAT telegram. These ports are optimized for real time communication with EtherCAT drives.

8.8 E-Bus In/Out (EtherCAT I/O Extender)

E-Bus In/Out	EtherCAT Bus (LVDS)	
	Port A / Port D	EtherCAT LVDS (Low Voltage Differential Signaling) connectors on the EtherCAT I/O-Extender module.
	RJ-45 100 Mbit/s	These ports are used to connect expansion modules.

9 Physical Dimension



Technology Module		TM01
Width	mm (in)	79 (3.11)
Height	mm (in)	124 (4.88)
Depth	mm (in)	89 (3.50)
Weight	g (lb)	500 (1.10)
Mounting	NS 35/7,5 EN 50022	35 mm DIN-rail
Case, Degree of Protection	IP	20
Storage / Transport Temperature	°C	-20...70
Operating Temperature (Ambient)	°C	-20...40*
Operating Temperature (CPU)	°C	-20...85
Relative humidity	RH	< 85% (non-condensing)
Mounting place		In the control cabinet
Mounting position		Vertical
Distance between TM01 & Drives	mm (in)	20 (0.8) horizontal / 50 (2) vertical

* The temperature of the TM01 CPU should be checked under full load (the temperature should be stable, which may take an hour or more). This allows to verify that enough margin is there if the cabinet goes to the maximum allowable temperature of 40° C. For example, if the TM01 CPU temperature reaches 68° C and the cabinet temperature is 23° C, this would result in a TM01 CPU temperature of about 85° C at a cabinet temperature of 40° C.

10 Power Supply Requirements

10.1 Power Supply

A regulated power supply of a nominal voltage of 24 VDC SELV is needed.
The voltage must be between 19.2 VDC (-20%) and 30 VDC (+25%).

Current to be provided from the 24 VDC supply:

- min. 0.1 A (standby)
- typ. 0.7 A (running – normal workload)
- max. 2.2 A (running – high workload)



The 24 VDC power supply must be protected with an external fuse (max. 5 A slow blow).

11 Ordering Information

11.1 Technology Modules




Technology Module	Description	Art. No.
TM01 (with Softmotion)	Raspberry Pi based TM01 with CODESYS Softmotion	<u>0150-6552</u>
TM01 (with Softmotion and CNC/Robotic)	Raspberry Pi based TM01 with CODESYS Softmotion and CNC/Robotics -> suitable for the LinMot-Pilot Application (Art. No. 0187-1000)	<u>0150-6553</u>
TM01 (without Softmotion)	Raspberry Pi based TM01 without any CODESYS Softmotion -> suitable for a Stand-alone Process Monitoring Application (Art. No. 0150-6453)	<u>0150-6491</u>

The TM01 comes preinstalled with a certain firmware version. Do not update the firmware unless you have been asked to do so by LinMot. See chapter 6 on how to perform an update.



12 International Certifications

The TM01 consists of a Base Module and an I/O Extender Module. Both do not have the same certifications.

Base Module (Art No. 0150-6454, 0150-6455, 0150-6456)

Certifications Base Module	
Europe 	See chapter 12.1 EU Declaration of Conformity CE Marking (Base Module)
UK 	See chapter 12.2 UK Declaration of Conformity UKCA Marking (Base Module)
USA / Canada 	File Number: E242595 Type: Open Type PCD Category: Programmable controller UL Standard: UL 61010-1, 3rd Edition and UL 61010-2-201, 2nd Edition cUL Standard: CAN/CSA C22.2 No. 61010-1, 3rd Edition and CAN/CSA C22.2 No. 61010-2-201:18

MC-I/O Extender 2 Port (Art No. 0150-6457)

Certifications I/O Extender Module	
Europe 	See chapter 12.3 EU Declaration of Conformity CE Marking (I/O Extender)
USA / Canada 	File Number: E242595 Type: Open Type PCD Category: Programmable controller UL Standard: UL 61010-1, 3rd Edition and UL 61010-2-201, 2nd Edition cUL Standard: CAN/CSA C22.2 No. 61010-1, 3rd Edition and CAN/CSA C22.2 No. 61010-2-201:18

12.1 EU Declaration of Conformity CE Marking (Base Module)

NTI AG / LinMot®
Bodenaeckerstrasse 2
8957 Spreitenbach
Switzerland
Tel.: +41 (0)56 419 91 91
Fax: +41 (0)56 419 91 92

declares under sole responsibility the compliance of the products:

- Technology Modules (Base Modules) of the Series **TM01-201x, TM01-301x, TM01-401x**

with the following directives:

- EMC Directive 2014/30/EU
- RoHS Directive 2011/65/EU & 2015/863/EU
- RED Directive 2014/53/EU

Applied harmonized standards:

- EN 61000-6-4:2020-09
- IEC EN 61010-1:2010/A1:2019/AC:2019
- EN 61131-2:2007
- IEC EN 62311:2020
- EN 63000:2019-05
- ETSI EN 300 328 V2.2.2:2019
- ETSI EN 301 893 V2.1.1:2017

According to the EMC directive, the listed devices are not independently operable products.

Compliance of the directive requires the correct installation of the product, the observance of specific installation guides and product documentation. This was tested on specific system configurations.

The safety instructions of the manuals are to be considered.

The product must be mounted and used in strict accordance with the installation instructions contained within the installation guide, a copy of which may be obtained from NTI AG.

Company: NTI AG

Spreitenbach, 09.08.2024



Dr. Ronald Rohner / CEO NTI AG

12.2 UK Declaration of Conformity UKCA Marking (Base Module)

NTI AG / LinMot®
Bodenaeckerstrasse 2
8957 Spreitenbach
Switzerland
Tel.: +41 (0)56 419 91 91
Fax: +41 (0)56 419 91 92

declares under sole responsibility the compliance of the products:

- Technology Modules (Base Modules) of the Series **TM01-201x, TM01-301x, TM01-401x**

with the regulations:

- UK S.I. 2012 No. 3032
- UK S.I. 2016 No. 1091
- UK S.I. 2017 No. 1206

Applied designated standards:

- BS EN IEC 61000-6-4:2019
- BS EN 61010-1:2010+A1:2019
- BS EN 61131-2:2007
- BS EN IEC 62311:2020
- BS EN IEC 63000:2018
- ETSI EN 300 328 V2.2.2:2019
- ETSI EN 301 893 V2.1.1:2017

According to the EMC regulation, the listed devices are not independently operable products.

Compliance of the regulation requires the correct installation of the product, the observance of specific installation guides and product documentation. This was tested on specific system configurations.

The safety instructions of the manuals are to be considered.

The product must be mounted and used in strict accordance with the installation instructions contained within the installation guide, a copy of which may be obtained from NTI AG.

Company: NTI AG

Spreitenbach, 09.08.2024



Dr. Ronald Rohner / CEO NTI AG

12.3 EU Declaration of Conformity CE Marking (I/O Extender)

NTI AG / LinMot®
Bodenaeckerstrasse 2
8957 Spreitenbach
Switzerland
Tel.: +41 (0)56 419 91 91
Fax: +41 (0)56 419 91 92

declares under sole responsibility the compliance of the products:

- Technology Modules (I/O Extender) of the Series **TM01-201x**, **TM01-301x**, **TM01-401x**

with the following directives:

- EMC Directive 2014/30/EU
- RoHS Directive 2011/65/EU

Applied harmonized standards:

- **EN 61131-2:2007**
- **EN 50581:2012**

According to the EMC directive, the listed devices are not independently operable products.

Compliance of the directive requires the correct installation of the product, the observance of specific installation guides and product documentation. This was tested on specific system configurations.

The safety instructions of the manuals are to be considered.

The product must be mounted and used in strict accordance with the installation instructions contained within the installation guide, a copy of which may be obtained from NTI AG.

Company: NTI AG

Spreitenbach, 09.08.2024



Dr. Ronald Rohner / CEO NTI AG

ALL LINEAR MOTION FROM A SINGLE SOURCE

Europe / Asia Headquarters

NTI AG - LinMot & MagSpring

Bodenaeckerstrasse 2
CH-8957 Spreitenbach
Switzerland

Sales / Administration: +41 56 419 91 91
office@linmot.com

Tech. Support: +41 56 544 71 00
support@linmot.com

Web: <https://www.linmot.com/>

Visit <https://linmot.com/contact/> to find a distributor near you.

North / South America Headquarters

LinMot USA Inc.

N1922 State Road 120, Unit 1
Lake Geneva, WI 53147
USA

Sales / Administration: 262.743.2555
usasales@linmot.com

Tech. Support: 262.743.2555
usasupport@linmot.com

Web: <https://www.linmot-usa.com/>