
## Compact Cylinder with Solenoid Valve/ Guide Rod Type

Labor, energy and space are saved by integrated structure.




Series CVQM

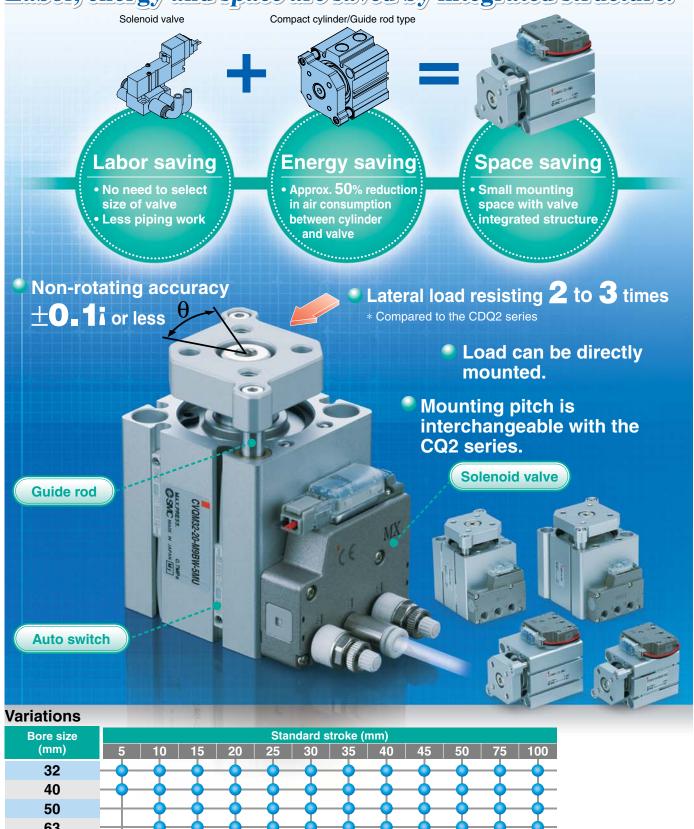


## Guide rod configuration with improved lateral load resistance and non-rotating accuracy

- Allowable lateral load of the plate is 2 to 3 times better than the CDQ2 series.
- Plate non-rotating accuracy  $\pm 0.1^{\circ}$

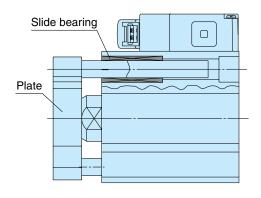

## Small 2-color indication solid state auto switch can be mounted.

• A round slot for mounting small auto switches is provided on 3 surfaces.

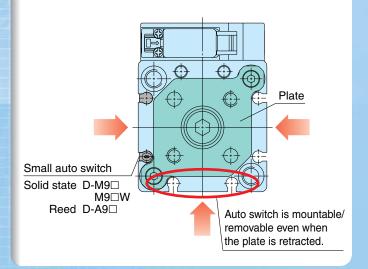

## Height comparison (Dimensional difference: C)


# CVQM

			(111111)
Bore size	Α	В	C
32	59	49.5	9.5
40	67	57	10
50	83	71	12
63	97	84	13

(mm)

#### **Mounting example**

- Two ways of mounting are possible.
- Mounting pitch is interchangeable with the CQ2 series.

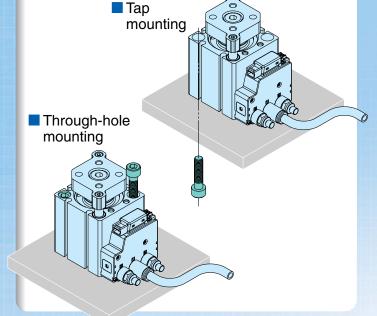


## Compact Cylinder with Solenoid Valve/ Guide Rod Type

## Series CVQM ø32, ø40, ø50, ø63

 $\epsilon$ 

#### **How to Order**

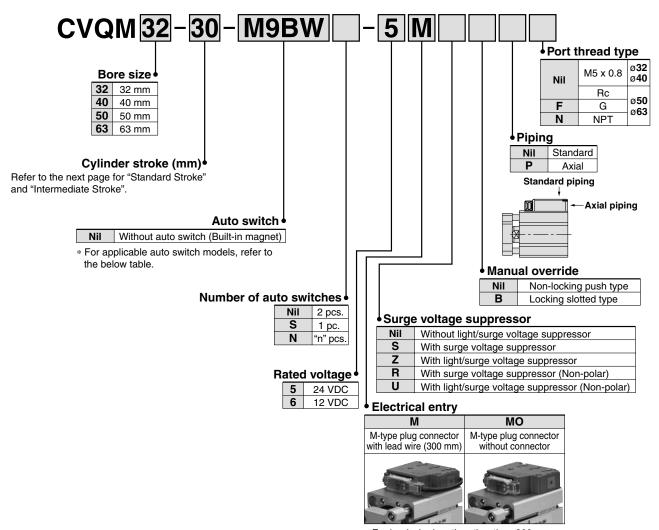

For lead wire lengths other than 300 mm, refer to the plug connector lead wire. (Page 5)

#### Applicable Auto Switches/Refer to pages 11 to 13 for detailed auto switch specifications.

		<b>-</b>	to	145.	Load volta		Load voltage		Auto swite	Lead wire length (m)*					A																								
Туре	Special function	Electrical entry	Indicator light	Wiring (Output)	D0		DC AC		al entry	0.5	1	3	5	Pre-wired connector		cable ad																							
	lanction	Citity	<u> =</u> –	(Output)		DC	AC	Perpendicular	In-line	(Nil)	(M)	(L)	(Z)	Connector	100	au																							
				3-wire (NPN)	24 V 5 V, 12 V 12 V 5 V, 12 V	5 V 40 V	5.7.40.77	5 V 40 V	24 V 12 V —		M9NV	M9N	•	•	•	0	0	IC circuit																					
유당	-			3-wire (PNP)		J V, 12 V	5 V, 12	12 V		5 V, 12 V	24 V 12 V		M9PV	M9P	•	•	•	0	0	ic circuit																			
switch		Grommet	Yes	2-wire		24 V	24 V			24 V		, 12 V	12 V	12 V	12 V		M9BV	M9B	•	•	•	0	0	_	Relay,														
Solid auto s	Diagnostic	Grommet	165	3-wire (NPN)								_	M9NWV	M9NW	•	•	•	0	0	IC circuit	PLC																		
ag Sc	indication / 2-color \			3-wire (PNP)				J V, 12V	5 V						3	5 V, 12V	5 V, 12V	5 V, 12V	3 V, 12 V	3 V, 12 V	3 V, 12 V	J V, 12 V	3 V, 12 V	J V, 12V	J V, 12V	5 V, 12 V	J V, 12 V	J V, 12 V	5 V, 12 V	5 V, 12V	J V, 12V	5 V, 12 V	V, 12V	M9PWV	M9PW	•	•	•	0
	(indication)			2-wire		12 V	12 V		M9BWV	M9BW	•	•	•	0	0	_																							
_ 듈			Yes	3-wire (NPN equivalent)	_	5 V	_	A96V	A96	•	_	•	_	_	IC circuit	_																							
Reed auto switch	-	Grommet	—	res	2-wire 24 V	24 V	12 V	100 V	A93V	A93	•	_	•	_	_	_	Relay,																						
aut				2-WIIE	24 V	24 V	5 V, 12 V	100 V or less	A90V	A90	•	_	•	_	_	IC circuit	PLC																						

\* Lead wire length symbols: 0.5 m ....... Nil (Example) M9NW 1 m ...... M M9NWM

1 m ······· M M9NWN 3 m ······ L M9NWL 5 m ····· Z M9NWZ

- $\ast$  Solid state auto switches marked with " $\bigcirc$ " are produced upon receipt of order.
- \* For details about auto switches with pre-wired connector, refer to pages 1784 and 1785 of Best Pneumatics No. 3.
- \* Auto switches are shipped together, (but not assembled).






#### **⚠** Caution

- 1. Do not separate the cylinder from the valve.
- 2. Do not disassemble or modify the guide rod.
- 3. This product should not be used as a stopper.

#### JIS Symbol

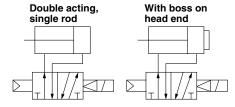


#### **Standard Stroke**

	(mm
Bore size	Standard stroke
<b>32</b> *1	5, 10, 15, 20, 25, 30, 35 40, 45, 50, 75, 100
40	5, 10, 15, 20, 25, 30, 35 40, 45, 50, 75, 100
50 *2	10, 15, 20, 25, 30, 35 40, 45, 50, 75, 100
63	10, 15, 20, 25, 30, 35 40, 45, 50, 75, 100

- \*1 The outline dimensions for 5 mm stroke will be the same as those for 10 mm stroke.
- \*2 The outline dimensions for 10 mm stroke will be the same as those for 15 mm stroke.

#### Theoretical Output

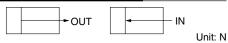

Bore size	Bore size Operating		Operating pressure (MPa)					
(mm)	direction	0.3	0.5	0.7				
32	IN	181	302	422				
32	OUT	241	402	563				
40	IN	317	528	739				
40	OUT	377	628	880				
	IN	495	825	1150				
50	OUT	589	982	1370				
	IN	840	1400	1960				
63	OUT	936	1560	2184				

#### **Cylinder Specifications**

Bore size (mm)	32	40	50	63		
Action		Double actin	g, Single rod			
Fluid		Air (No	n-lube)			
Proof pressure		1.0	MPa			
Maximum operating pressure		0.7	MPa			
Minimum operating pressure		0.15	MPa			
Ambient and fluid temperature		−10 to 50°C	(No freezing)			
Stroke tolerance		0 to +1	.0 mm*			
Mounting		Through-hole/B	oth ends tapped	d		
Piston speed	50 to 500 mm/s 50 to 300 mm/s					
Cushion	Rubber bumper					

<sup>\*</sup> Stroke length tolerance dose not include the amount of bumper change.

#### **Valve Specifications**

Type of actuation	2-position single			
Manual override Non-locking push type/Locking slotted type				
Pilot exhaust	Main/Pilot valve common exhaust type			
Mounting orientation	Unrestricted (based on cylinder mounting orientation)			
Enclosure	Dustproof			

#### **Solenoid Specifications**

Electrical entry		M-type plug connector		
Coil rated voltage DC		24, 12 (V)		
Allowable voltage range Note)		±10% of the rated voltage		
Power consumption	DC	0.35 (With light: 0.4) W		
Surge voltage suppressor		Diode (Non-polar: Varistor)		
Indicator light		LED		

Note) The S and Z types of surge voltage suppressor have an internal circuit allowing voltage drop, so use within the following allowable voltage range.

S, Z type 24 VDC: -7% to +10% 12 VDC: -4% to +10%

#### **Intermediate Stroke**

Part no.	Refer to "How to Order" for standard model numbers. (Previous page)				
	Spacers are installed in a cylinder with	standard stroke.			
Description	Bore size	Description			
Description	32	Available in 1 mm stroke increments			
	40, 50, 63	Available in 5 mm stroke increments			
	Bore size	Stroke range			
Stroke range (mm)	32	1 to 99			
()	40, 50, 63	5 to 95			
Example	Part no.: CVQM32-95-□ A spacer 5 mm in width is installed in standard cylinder CVQM32-100-□. B dimension: 133 mm				

#### Weight

												Unit (g)
Bore size		Stroke										
(mm)	5	10	15	20	25	30	35	40	45	50	75	100
32	349	344	368	393	417	441	465	489	514	538	660	782
40	435	464	492	520	548	577	605	633	661	690	828	966
50	_	834	865	908	952	995	1039	1081	1125	1168	1386	1603
63	_	1088	1139	1190	1241	1292	1343	1394	1445	1496	1751	2006

## Compact Cylinder with Solenoid Valve/Guide Rod Type Series CVQM

#### **Mounting Bolt for CVQM**


Mounting: Be sure to use it as through-hole when

mounting.

Ordering: Add the word, "Bolt" in front of the bolts to

be used.

Example) Bolt M5 x 45L: 4 pcs.

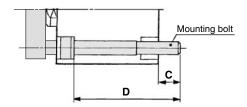


			(mm)
Cylinder model	С	D	Mounting bolt size
CVQM32- 5		45	M5 x 45L
- 10		45	x 45L
- 15		50	x 50L
- 20		55	x 55L
- 25		60	x 60L
- 30	9	65	x 65L
- 35	9	70	x 70L
- 40		75	x 75L
- 45		80	x 80L
- 50		85	x 85L
- 75		110	x 110L
-100		135	x 135L
CVQM40- 5		45	M5 x 45L
- 10		50	x 50L
- 15		55	x 55L
- 20		60	x 60L
- 25		65	x 65L
- 30	7.5	70	x 70L
- 35	7.5	75	x 75L
- 40		80	x 80L
- 45		85	x 85L
- 50		90	x 90L
- 75		115	x 115L
-100		140	x 140L

Cylinder model	С	D	Mounting bolt size
CVQM50- 10		60	M6 x 60L
- 15		60	x 60L
- 20		65	x 65L
- 25		70	x 70L
- 30		75	x 75L
- 35	12.5	80	x 80L
- 40		85	x 85L
- 45		90	x 90L
- 50		95	x 95L
- 75		120	x 120L
-100		145	x 145L
CVQM63- 10		60	M8 x 60L
- 15		65	x 65L
- 20		70	x 70L
- 25		75	x 75L
- 30		80	x 80L
- 35	14.5	85	x 85L
- 40		90	x 90L
- 45		95	x 95L
- 50		100	x 100L
- 75		125	x 125L
-100		150	x 150L

#### **Plate Non-rotating Accuracy**

Non-rotating accuracy without load is designed to be same or less than the figures shown in the table below at the retracted cylinder end (plate).


Bore size (mm)	Non-rotating accuracy
32 to 63	±0.1°

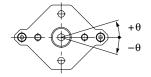

#### **Plate Allowable Rotational Torque**

Make sure to operate strictly within the allowable rotation torque range to the plate.

Operation outside of this range may result in shorter service life or damage to the device.

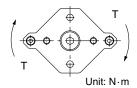


(mm)


Bore size		Cylinder stroke (mm)										
(mm)	5	10	15	20	25	30	35	40	45	50	75	100
32	0.66	0.59	0.53	0.49	0.45	0.42	0.39	0.36	0.34	0.32	0.25	0.20
40	1.06	0.96	0.88	0.81	0.75	0.70	0.65	0.61	0.58	0.55	0.43	0.36
50	_	1.70	1.56	1.45	1.35	1.26	1.19	1.12	1.06	1.01	0.80	0.67
63	_	3.90	3.62	3.37	3.15	2.96	2.80	2.65	2.51	2.39	1.92	1.61

#### Plate Allowable Lateral Load

Make sure to operate strictly within the allowable lateral load range to the plate.

Operation outside of this range may result in shorter service life or damage to the device.

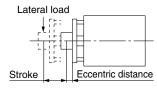

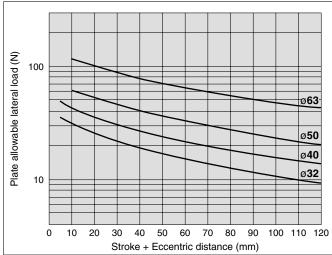


#### Allowable Kinetic Energy


Make sure to operate strictly within the allowable range of the load weight and maximum speed.

Operation outside of this range may cause excessive impact, which may result in the damage to the device.

Operating pressure: 0.5 MPa

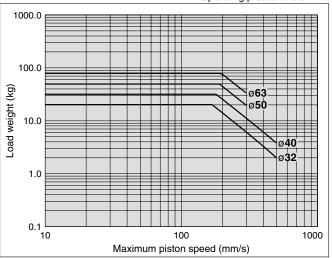


#### Relationship between Number of Needle Rotations and Piston Speed

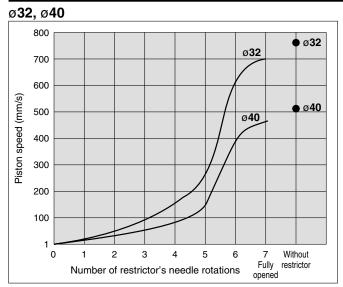

Restrictor: ASN2-M5 Pressure: 0.5 MPa

Mounting orientation: Horizontal, No-load, Piston extended \* The above piston speed is for reference purpose only.

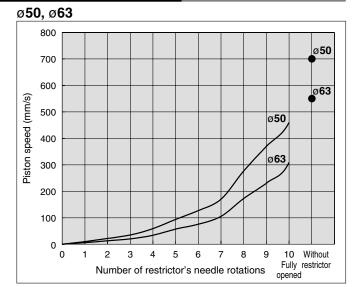

Restrictor: ASN2-01 Pressure: 0.5 MPa

Mounting orientation: Horizontal, No-load, Piston extended \* The above piston speed is for reference purpose only.


#### <Exhaust restrictor with silencer>




Applicable bore size (mm)	Model	Port size	Effective area (mm²)	Weight (g)	
32, 40	ASN2-M5	M5 x 0.8	1.8	5	
50, 63	ASN2-01	1/8	3.6	17	

## Compact Cylinder with Solenoid Valve/Guide Rod Type Series CVQM

#### Construction

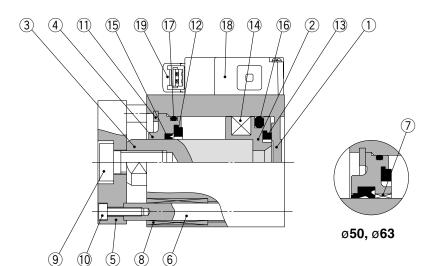

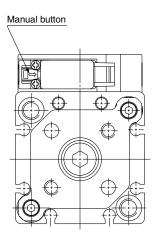


#### **Component Parts**

No.	Description	Material	Note
1	Cylinder tube	Aluminum alloy	Hard anodized
2	Piston	Aluminum alloy	Chromated
3	Piston rod	Carbon steel	Hard chrome plated
4	Collar	Alluminum alloy casted	ø50, ø63, Chromated, painted
	Collai	Aluminum alloy	ø32, ø40, Anodized
5	Plate	Aluminum alloy	Anodized
6	Guide rod	Stainless steel	
7	Bushing	Bearing alloy	ø50, ø63
8	Bushing	Oil impregnated sintered alloy	
9	Hexagon socket head bolt	Carbon steel	Nickel plated
10	Hexagon socket head bolt	Carbon steel	Nickel plated
11	Retaining ring	Carbon tool steel	Phosphate coated
12	Bumper A	Urethane	
13	Bumper B	Urethane	
14	Magnet	_	
15	Rod seal	NBR	
16	Piston seal	NBR	
17	Gasket	NBR	
18	Solenoid valve	_	
19	Pilot valve	_	

#### Length of plug connector lead wire

The standard length of the plug connector with a lead wire is 300 mm, but other lengths are available as follows.

#### **How to Order Pilot Valve Assembly**

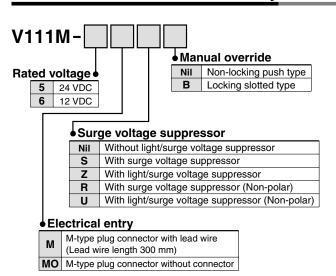

#### **How to Order Connector Assembly**

With lead wire: **SY100-30-4A-**

#### Lead wire length

Nil	300 mm	20	2000 mm
6	600 mm	25	2500 mm
10	1000 mm	30	3000 mm
15	1500 mm	50	5000 mm

#### How to Order


Indicate the part number of the connector assembly in addition to the part number of the solenoid valve without the connector for the plug connector. Example) Lead wire length 2000 mm


When ordering cylinder with valve CVQM32-30-M9B-5MOZ SY100-30-4A-20




#### **Dimensions**


ø32 to ø63

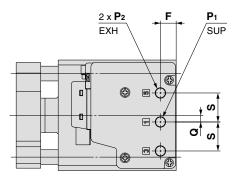

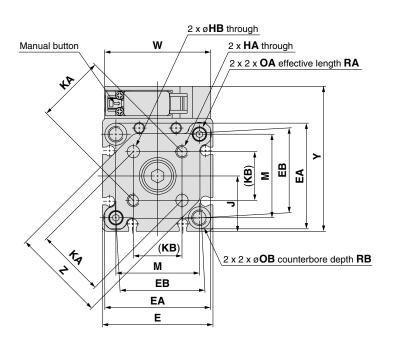

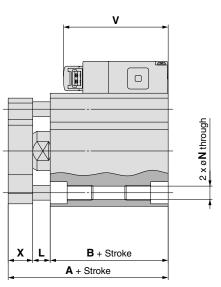

#### **Axial piping**

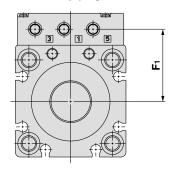


Bore size (mm)	F <sub>1</sub>
32	30
40	34.5
50	43.5
63	51

Bore size (mm)	Stroke range (mm)	Α	В	E	EA	ЕВ	F	НА	НВ	J	KA	КВ	L	М	N	OA
32	5 to 100	50 Note 1)	33 Note 1)	45	43	34.4	6.5	M5 x 0.8	5 +0.2	22.5	28 ±0.2	19.8	7	34	5.4	M6 x 1
40	5 to 100	56.5	39.5	52	50	41.4	6.5	M5 x 0.8	5 +0.2	26	33 ±0.2	23.3	7	40	5.4	M6 x 1
50	10 to 100	60.5 Note 2)	40.5 Note 2)	64	62	53.4	7.5	M6 x 1	6 +0.2	32	42 ±0.2	29.7	8	50	6.6	M8 x 1.25
63	10 to 100	66	46	77	74	59.6	7.5	M6 x 1	6 +0.2	38.5	50 ±0.2	35.4	8	60	9	M10 x 1.5

Note 1) The dimensions (A + stroke) and (B + stroke) for 5 mm stroke will be the same as those for 10 mm stroke. Note 2) The dimensions (A + stroke) and (B + stroke) for 10 mm stroke will be the same as those for 15 mm stroke.

Bore size (mm)	Stroke range (mm)	ОВ	P <sub>1</sub>	P <sub>2</sub>	Q	RA	RB	s	٧	w	х	Υ	Z
32	5 to 100	9	M5 x 0.8	M5 x 0.8	2.5	10	7	12	43	43.5	10	59	38
40	5 to 100	9	M5 x 0.8	M5 x 0.8	2.5	10	7	12	43	43.5	10	67	46
50	10 to 100	11	Rc, G, NPT1/8	Rc, G, NPT1/8	3.5	14	8	17	54	63	12	83	58
63	10 to 100	14	Rc, G, NPT1/8	Rc, G, NPT1/8	3.5	18	10.5	17	54	63	12	97	69

#### Auto Switch Proper Mounting Position (Detection at Stroke End) and Mounting Height

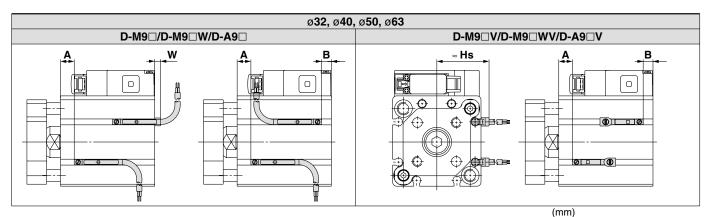


												()
Bore size (mm)	_	-M9□ -M9□W	1		M9□V M9□W'	v	<b>D-A9</b> □			D-A9□V		
(11111)	Α	В	W	Α	В	Hs	Α	В	W	Α	В	Hs
32	12 [17]	9	1	12 [17]	9	29	8 [13]	5	-3 (-0.5)	8 [13]	5	27
40	16	11.5	-1.5	16	11.5	32.5	12	7.5	-5.5 (-3)	12	7.5	30.5
50	14 <19>	14.5	-4.5	14 <19>	14.5	42	10 <15>	10.5	-8.5 (-6)	10 <15>	10.5	36.5
63	16.5	17.5	-7.5	16.5	17.5	42	12.5	13.5	-11.5 (-9)	12.5	13.5	40

- ]: Values for 5 mm stroke with ø32
- >: Values for 10 mm stroke with ø50
- ): Values for the D-A93
- \* The negative indication in the table for W shows the mounting inside the cylinder body.
- \* For the actual setting, check the operating condition of the auto switch and adjust.

#### **Auto Switch Mountable Surface, Mounting Groove Number (Direct Mounting)**

The below table shows which surfaces of the cylinder an auto switch can be mounted on, and the number of grooves for the direct mounting style auto switch.

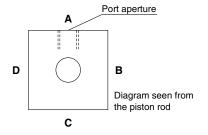

Auto switch model	D-	M9□(V), M9[	⊐W(V), A9⊟	(V)
Bore size (mm)	(Mounting groove number)	<b>B</b> (Mounting groove number)	C (Mounting groove number)	(Mounting groove number)
32	_	(2)	(2)	(2)
40	_	(2)	(2)	(2)
50	_	(2)	(2)	(2)
63	<u> </u>	(2)	(2)	(2)

#### **Operating Range**


				(mm)					
Auto switch model		Bore size							
Auto switch model	32	40	50	63					
D-M9□, D-M9□V D-M9□W, D-M9□WV	6	6	7	7.5					
D-A9□, D-A9□V	9.5	9.5	9.5	11.5					

Since this is a guideline including hysteresis, not meant to be guaranteed. (assuming approximately ±30% dispersion)

There may be the case it will vary substantially depending on the ambient environment

#### **Minimum Stroke for Auto Switch Mounting**

#### **Auto Switch Mounting**

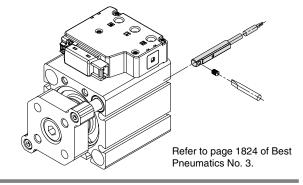

							(mm)
Bore size (mm)	Number of auto switches mounted	D-M9□	D-M9□V	D-M9□W	D-M9□WV	D-A9□	D-A9□V
32*1, 40	1	10	5	15	10	10	5
50*2, 63	2	10	5	15	15	10	10

<sup>\*1</sup> The outline dimensions for 5 mm stroke will be the same as those for 10 mm stroke.

<sup>\*2</sup> The outline dimensions for 10 mm stroke will be the same as those for 15 mm stroke.

## Prior to Use Auto Switches Common Specifications 1

### **▲ Specific Product Precautions**

Before handling auto switches, refer to "Handling Precautions for SMC Products" (M-E03-3) for Auto Switches Precautions.

#### **Auto Switches Common Specifications**

Туре	Reed auto switch	Solid state auto switch				
Leakage current	None	3-wire: 100 μA or less, 2-wire: 0.8 mA or less				
Operating time	1.2 ms	1 ms or less				
Impact resistance	300 m/s <sup>2</sup>	1000 m/s²				
Insulation resistance	50 M $\Omega$ or more at 500 VDC M	ega (Between lead wire and case)				
Withstand voltage	1500 VAC for 1 minute (Between lead wire and case)	1000 VAC for 1 minute (Between lead wire and case)				
Ambient temperature	−10 to 60°C					
Enclosure	IEC60529 Standard IP67					

#### **Lead Wire**

Lead wire length indication (Example)

#### D-M9BW

Lead wire length

Nil	0.5 m	
M	1 m	
L	3 m	
Z	5 m	

Note 1) Lead wire length Z: 5 m

Applicable auto switches

Solid state auto switch: Manufactured upon receipt of order as standard.

Note 2) Lead wire length tolerance

Lead wire length	Tolerance
0.5 m	±15 mm
1 m	±30 mm
3 m	±90 mm
5 m	±150 mm


## Prior to Use Auto Switches Common Specifications 2

### **▲ Specific Product Precautions**

Before handling auto switches, refer to "Handling Precautions for SMC Products" (M-E03-3) for Auto Switches Precautions.

#### **Auto Switch Hysteresis**

Hysteresis is the distance between the position at which piston movement operates an auto switch and the position at which reverse movement turns the switch off. This hysteresis is included in part of the operating range (single side).

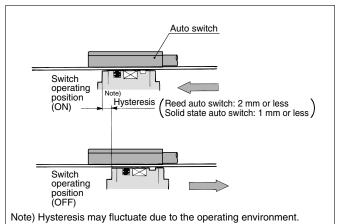

Please contact SMC if hysteresis causes an operational problem.

#### Contact Protection Box: CD-P11, CD-P12

#### <Applicable switch models>

D-A9/A9□V

The auto switches above do not have a built-in contact protection circuit. A contact protection box is not required for solid state auto switches due to their construction.

- 1) Where the operation load is an inductive load.
- ② Where the wiring length to load is greater than 5 m.
- 3 Where the load voltage is 100 VAC.

Therefore, use a contact protection box with the switch for any of the above cases:

The contact life may be shortened (due to permanent energizing conditions.)

#### Where the load voltage is 110 VAC.

When the load voltage is increased by more than 10% to the rating of applicable auto switches above, use a contact protection box (CD-P11) to reduce the upper limit of the load current by 10% so that it can be set within the range of the load current range, 110 VAC.


#### **Contact Protection Box Specifications**

Part no.	CD-P	CD-P12	
Load voltage	100 VAC or less	24 VDC	
Max. load current	25 mA	12.5 mA	50 mA


Lead wire length — Auto switch connection side 0.5 m
 Load connection side 0.5 m



#### **Contact Protection Box Internal Circuit**

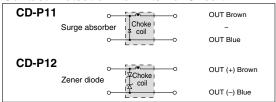

#### **Contact Protection Box/Dimensions**

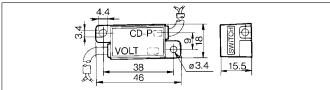


#### **Contact Protection Box Connection**

To connect a switch unit to a contact protection box, connect the lead wire from the side of the contact protection box marked SWITCH to the lead wire coming out of the switch unit. Keep the switch as close as possible to the contact protection box, with a lead wire length of no more than 1 meter.




## **Prior to Use**Auto Switches Connection and Example


#### **Basic Wiring**

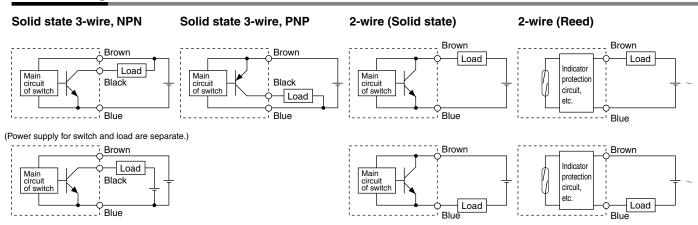


#### **Example of Connection with PLC (Programmable Logic Controller)**

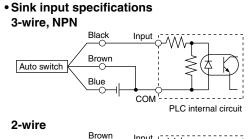


## Source input specifications 3-wire, PNP

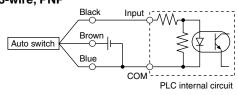

Connect according to the applicable PLC input specifications, as the connection method will vary depending on the PLC input specifications.

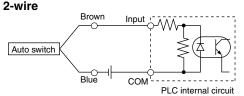


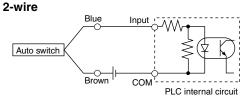


#### Example of AND (Series) and OR (Parallel) Connection

#### • 3-wire


### AND connection for NPN output (Using relays)

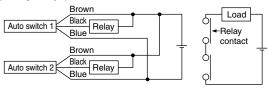

## AND connection for NPN output (Performed with auto switches only)

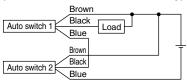


#### **OR connection for NPN output**

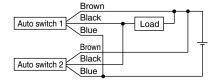

The indicator lights will light up when both auto switches are turned ON.

#### • 2-wire 2-wire with 2-switch AND connection

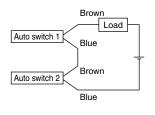

When two auto switches are connected in series, a load may malfunction because the load voltage will decline when in the ON state.

The indicator lights will light up when both of the auto switches are in the ON state.


Load voltage at ON = Power supply voltage – Residual voltage x 2 pcs. = 24 V – 4 V x 2 pcs. = 16 V

Example: Power supply is 24 VDC

10

Internal voltage drop in auto switch is 4 V.

#### 2-wire with 2-switch OR connection

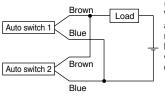

(Solid state)
When two auto switches are connected in parallel, malfunction may occur because the load voltage will increase when in the OFF state.

Load voltage at OFF = Leakage current x 2 pcs. x Load impedance = 1 mA x 2 pcs. x 3 k $\Omega$  = 6 V

Example: Load impedance is 3 k $\Omega$ . Leakage current from auto switch is 1 mA.

#### (Reed) Because

there is current leakage, the load voltage will not increase when turned OFF. However, depending number of auto the switches in the ON state, the indicator lights may sometimes grow dim or not light up, due to the dispersion and reduction of the current flowing to the auto switches.



## Solid State Auto Switch Direct Mounting Style D-M9N(V)/D-M9P(V)/D-M9B(V) ( €

#### **Grommet**

- 2-wire load current is reduced (2.5 to 40 mA).
- Flexibility is 1.5 times greater than the conventional model (SMC comparison).
- Using flexible cable as standard spec.




#### **∆**Caution

#### **Precautions**

Fix the auto switch with the existing screw installed on the auto switch body. The auto switch may be damaged if a screw other than the one supplied is used.

#### **Auto Switch Internal Circuit**

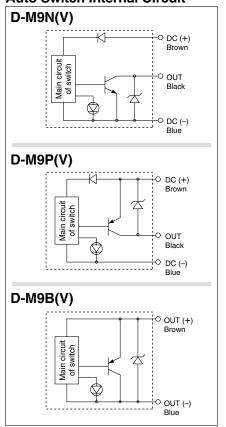

#### **Auto Switch Specifications**

Refer to SMC website for the details of the products conforming to the international standards.

PLC: Programmable Logic Controller

D-M9□, D-M9□V (With indicator light)								
Auto switch model	D-M9N D-M9NV D-M9P D-M9PV		D-M9B	D-M9BV				
Electrical entry direction	In-line	Perpendicular	In-line	Perpendicular	In-line	Perpendicular		
Wiring type		3-w	/ire		2-v	2-wire		
Output type	N	PN	PI	NΡ	_	_		
Applicable load		IC circuit, F	Relay, PLC		24 VDC relay, PLC			
Power supply voltage	Ę	5, 12, 24 VDC	_					
Current consumption	10 mA or less				_			
Load voltage	28 VDC	28 VDC or less —				to 28 VDC)		
Load current	40 mA or less				2.5 to	40 mA		
Internal voltage drop	0.8 V or less at 10 mA (2 V or less at 40 mA) 4 V or less					r less		
Leakage current	100 μA or less at 24 VDC 0.8 mA or less					or less		
Indicator light	Red LED illuminates when turned ON.							
Standard		CE marking						

 Lead wires — Oilproof flexible heavy-duty vinyl cord: ø2.7 x 3.2 ellipse, 0.15 mm², 2 cores (D-M9B(V)), 3 cores (D-M9N(V), D-M9P(V))

Note 1) Refer to page 8 for solid state auto switch common specifications. Note 2) Refer to page 8 for lead wire lengths.


#### Weight

Auto switch model		D-M9N(V)	D-M9P(V)	D-M9B(V)
Lead wire length 0.5	8	8	7	
	1	14	14	13
(m)	3	41	41	38
	5	68	68	63


#### **Dimensions**

(mm)

(g)

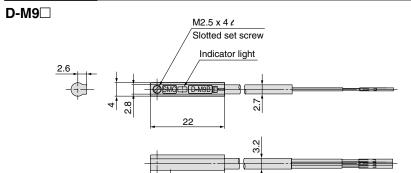

Most sensitive position

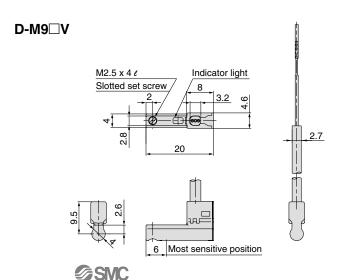

## 2-Color Indication Solid State Auto Switch Direct Mounting Style D-M9NW(V)/D-M9PW(V)/D-M9BW(V) ( )

#### Grommet


- 2-wire load current is reduced (2.5 to 40 mA).
- Flexibility is 1.5 times greater than the conventional model (SMC comparison).
- Using flexible cable as standard spec.
- The optimum operating position can be determined by the color of the light. (Red → Green ← Red)



#### **Precautions**

Fix the auto switch with the existing screw installed on the auto switch body. The auto switch may be damaged if a screw other than the one supplied is used.

#### **Auto Switch Internal Circuit**

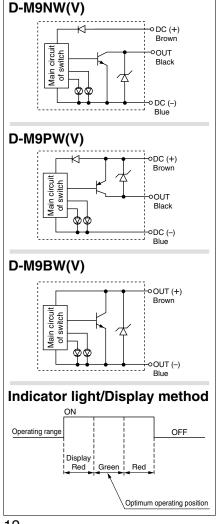

#### **Auto Switch Specifications**



PLC: Programmable Logic Controller

D-M9□W, D-M9□WV (With indicator light)							
Auto switch model	D-M9NW	D-M9NWV	D-M9PW	D-M9PWV	D-M9BW	D-M9BWV	
Electrical entry direction	In-line	Perpendicular	In-line	Perpendicular	In-line	Perpendicular	
Wiring type		3-w	/ire		2-wire		
Output type	N	PN	PI	NΡ	_	_	
Applicable load		IC circuit, F	Relay, PLC		24 VDC r	elay, PLC	
Power supply voltage	Ę	5, 12, 24 VDC	')	_			
<b>Current consumption</b>	10 mA or less				_		
Load voltage	28 VDC or less —				24 VDC (10 to 28 VDC)		
Load current	40 mA or less					40 mA	
Internal voltage drop	0.8 V or l	0.8 V or less at 10 mA (2 V or less at 40 mA)					
Leakage current	100 μA or less at 24 VDC 0.8 mA or less					or less	
Indicator light	Operating position ······· Red LED illuminates.						
	Optimum operating position Green LED illuminates.					tes.	
Standard		CE marking					

 Lead wires — Oilproof flexible heavy-duty vinyl cord: ø2.7 x 3.2 ellipse, 0.15 mm², 2 cores (D-M9BW(V)), 3 cores (D-M9NW(V), D-M9PW(V))


Note 1) Refer to page 8 for solid state auto switch common specifications.

Note 2) Refer to page 8 for lead wire lengths.


Weight (g)

Auto switch model		D-M9NW(V)	D-M9PW(V)	D-M9BW(V)
0.5		8	8	7
Lead wire length (m)	1	14	14	13
	3	41	41	38
	5	68	68	63

**Dimensions** (mm)

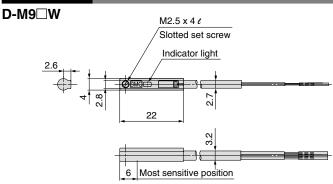

## M2.5 x 4 ¢ Slotted set screw 8 3.2 ©

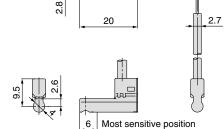



D-M9□WV

12

## **Reed Auto Switch Direct Mounting Style** D-A90(V)/D-A93(V)/D-A96(V)

#### Grommet




#### **∆**Caution

#### **Precautions**

Fix the auto switch with the existing screw installed on the auto switch body. The auto switch may be damaged if a screw other than the one supplied is used.

#### **Auto Switch Internal Circuit**

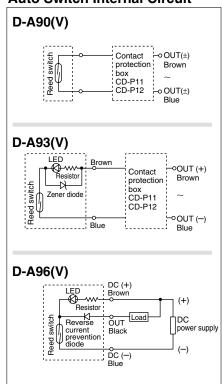

Note 1) Operating load is an induction load. Note 2) Wiring to the load is 5 m or longer. Note 3) Load voltage is 100 VAC. Use the contact protection box in any of the above listed situations. The contact point life may decrease. (Refer to page 9 for contact protection box.)

#### **Auto Switch Specifications**



Refer to SMC website for the details of the products conforming to the international standards

PLC: Programmable Logic Controller

D-A90, D-A90V (Without indicator light)							
Auto switch model	D-A90, D-A90V						
Applicable load		IC circuit, Relay, PLC					
Load voltage	24 V AC or less	100 V AC or less					
Maximum load current	50 mA	40 mA	20 mA				
Contact protection circuit		None					
Internal resistance	1 Ω or les	s (Including lead wire leng	th of 3 m)				
Standard		CE marking					
D-A93, D-A93V, D-A96, D-A96V (With indicator light)							
Auto switch model	D-A93, D-A93V D-A96, D-A96V						
Applicable load	Relay	IC circuit					
Load voltage	24 VDC	4 to 8 VDC					
Load current range and Maximum load current	5 to 40 mA 5 to 20 mA		20 mA				
Contact protection circuit		None					
Internal voltage drop	D-A93: 2.4 V or less (up to 20 mA)/3 V or less (up to 40 mA) D-A93V: 2.7 V or less  0.8 V or les						
internal voltage drop							
Indicator light	Red LED illuminates when turned ON.						
Standard	CE marking						

Lead wires

D-A90(V)/D-A93(V) -- Oilproof heavy-duty vinyl cord, ø2.7, 0.18 mm² x 2 cores (Brown, Blue), 0.5 m D-A96(V) — Oilproof heavy-duty vinyl cord, ø2.7, 0.15 mm² x 3 cores (Brown, Black, Blue), 0.5 m

Note 1) Refer to page 8 for reed auto switch common specifications.

Note 2) Refer to page 8 for lead wire lengths.


Note 3) Under 5 mA, the strength of the indicator light is poor. In some cases, visibility of the indicator light will not be possible where the output signal is less than 2.5 mA. However, there is no problem in terms of contact output, when an output signal exceeds 1 mA or more.

#### Weight (g)


Model		D-A90	D-A90V	D-A93	D-A93V	D-A96	D-A96V
Lead wire length	0.5	6	6	6	6	8	8
(m)	3	30	30	30	30	41	41

#### **Dimensions** (mm)

#### D-A90/D-A93/D-A96

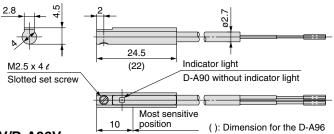

#### D-A90V/D-A93V/D-A96V

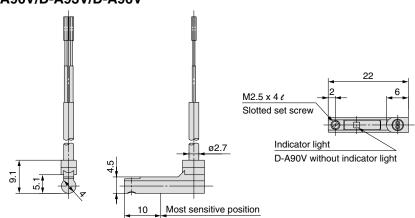



These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "Caution," "Warning" or "Danger." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)\*1), and other safety regulations.

\*1) ISO 4414: Pneumatic fluid power – General rules relating to systems.

ISO 4413: Hydraulic fluid power – General rules relating to systems.

IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)

ISO 10218-1: Manipulating industrial robots - Safety.

etc.

**⚠** Caution:

Caution indicates a hazard with a low level of risk which, if not avoided, could result in minor or

moderate injury.

**⚠** Warning:

Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or

serious injury.

**⚠** Danger

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious

injury.

#### **Warning**

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

- 3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.
  - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
  - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
  - 3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.
- 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.
  - 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct suplicibit
  - 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
  - 3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
  - 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.



#### **⚠** Caution

#### 1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.

If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.

If anything is unclear, contact your nearest sales branch.

## Limited warranty and Disclaimer/Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements". Read and accept them before using the product.

#### **Limited warranty and Disclaimer**

- 1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered.\*2)
  Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided.
  - This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- 3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
  - \*2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.

Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

#### **Compliance Requirements**

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.



## Series CVQM Specific Product Precautions

Be sure to read before handling.


Refer to back pages 1 and 2 for Safety Instructions, "Handling Precautions for SMC Products" (M-E03-3) for Actuators and Auto Switches Precautions.

#### Mounting

#### **⚠** Warning

1. Do not put hands or fingers between the plate and cylinder tubing.

Never put hands or fingers in the gap between the plate and cylinder tubing when the piston rods are retracted. Due to the heavy power output of the cylinder, failure to comply with this directive may result in trapping and subsequent injury to the human body.

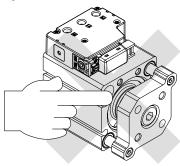

#### **∧** Caution

1. Do not scratch or dent the sliding parts of the piston rod and guide rods.

Damage to seals may cause air leakage or faulty operation.

2. Mounting of work piece

When screwing a bolt onto the threaded portion of the plate surface, be certain that the guide rods are fully extended to the end. Also, be careful that the tightening torque is not applied to the guide rods.

3. Make sure that the cylinder mounting surface has a flatness of 0.02 mm or less.


When mounting the cylinder body or work pieces on the plate, improper flatness of the mounting surface may cause malfunctions.


When the flatness of a work piece is not sufficient, attaching a shim such as a flat washer, etc., at the place of a mounting bolt between the work piece and the plate may reduce the affect on the operation.

#### **Others**

#### **⚠** Caution


- 1. Do not separate the cylinder from the valve.
- 2. This product should not be used as a stopper.
- 3. Do not disassemble and modify the product.
- 4. For example, in a pressing application, the cylinder thrust is directly applied to the plate, therefore, make sure that the pressing force is applied to the plate directly on the extended axial line of a rod. (Below figures)

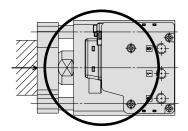

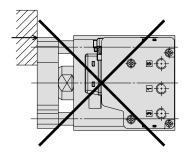



#### SMC'S GLOBAL MANUFACTURING, DISTRIBUTION AND SERVICE NETWORK

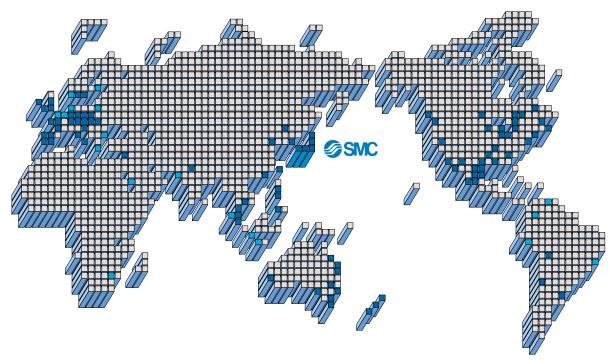

**EUROPE** 

**AUSTRIA** 

SMC Pneumatik GmbH (Austria)

**BELGIUM** 

SMC Pneumatics N.V./S.A.

**BULGARIA** 

SMC Industrial Automation Bulgaria Eood

**CROATIA** 

SMC Industrijska Automatika d.o.o.

**CZECH REPUBLIC** 

SMC Industrial Automation CZ s.r.o.

**DENMARK** 

SMC Pneumatik A/S

**ESTONIA** 

SMC Pneumatics Estonia OÜ

**FINLAND** 

SMC Pneumatics Finland Oy

**FRANCE** 

SMC Pneumatique SA

**GERMANY** 

SMC Pneumatik GmbH

**GREECE** 

SMC Hellas E.P.E.

**HUNGARY** 

SMC Hungary Ipari Automatizálási Kft.

**IRELAND** 

SMC Pneumatics (Ireland) Ltd.

**ITALY** 

SMC Italia S.p.A.

**LATVIA** 

SMC Pnuematics Latvia SIA

**LITHUANIA** 

**UAB "SMC Pneumatics"** 

NETHERI ANDS

SMC Pneumatics B.V.

**NORWAY** 

SMC Pneumatics Norway AS

**POLAND** 

SMC Industrial Automation Polska Sp.z.o.o.

**ROMANIA** 

SMC Romania S.r.I.

**RUSSIA** 

SMC Pneumatik LLC

**SLOVAKIA** 

SMC Priemyselná Automatizácia Spol s.r.o.

SLOVENIA

SMC Industrijska Avtomatika d.o.o.

SPAIN/PORTUGAL

SMC España S.A.

**SWEDEN** 

SMC Pneumatics Sweden AB

**SWITZERLAND** 

SMC Pneumatik AG

SMC Pneumatics (U.K.) Ltd.

**ASIA** 

CHINA

SMC (China) Co., Ltd.

HONG KONG

SMC Pneumatics (Hong Kong) Ltd.

INDIA

SMC Pneumatics (India) Pvt. Ltd.

**MALAYSIA** 

SMC Pneumatics (S.E.A.) Sdn. Bhd.

**PHILIPPINES** 

Shoketsu SMC Corporation

SINGAPORE

SMC Pneumatics (S.E.A.) Pte. Ltd.

SOUTH KOREA

SMC Pneumatics Korea Co., Ltd.

**TAIWAN** 

SMC Pneumatics (Taiwan) Co., Ltd.

**THAILAND** 

SMC (Thailand) Ltd.

**NORTH AMERICA** -

SMC Pneumatics (Canada) Ltd.

**MEXICO** 

SMC Corporation (Mexico), S.A. de C.V.

SMC Corporation of America

SOUTH AMERICA

**ARGENTINA** 

SMC Argentina S.A.

**BOLIVIA** 

SMC Pneumatics Bolivia S.r.l.

**BRAZIL** 

SMC Pneumáticos do Brasil Ltda

CHILE

SMC Pneumatics (Chile) S.A.

VENEZUELA

SMC Neumatica Venezuela S.A.

**OCEANIA** 

**AUSTRALIA** 

SMC Pneumatics (Australia) Pty. Ltd.

**NEW ZEALAND** 

SMC Pneumatics (N.Z.) Ltd.

Safety Instructions Be sure to read "Handling Precautions for SMC Products" (M-E03-3) before using.

**SMC** Corporation

Akihabara UDX 15F

4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249 Fax: 03-5298-5362

URL http://www.smcworld.com

© 2009 SMC Corporation All Rights Reserved

D-DN

1st printing NT printing NT 6000SZ Printed in Japan.