High Purity Chemical Valve

Series LVC/LVA/LVH

Integral Fittings/Threaded Ports/Manual Operation (Integral Fittings/Threaded Ports)



LVC

LVA

LVH

LVD

LVQ

LQ1

LVN

TL/TIL

LQ3



Air Operated Type
Integral Fittings Series LVC
P.461

- N.C./N.O. with same configuration/Double acting
- Compatible with 100°C fluid temperature



Air Operated Type
Threaded Ports Series LVA
P.471

Diaphragm material PTFE, EPR, NBR are selectable








Locking and non-locking types available





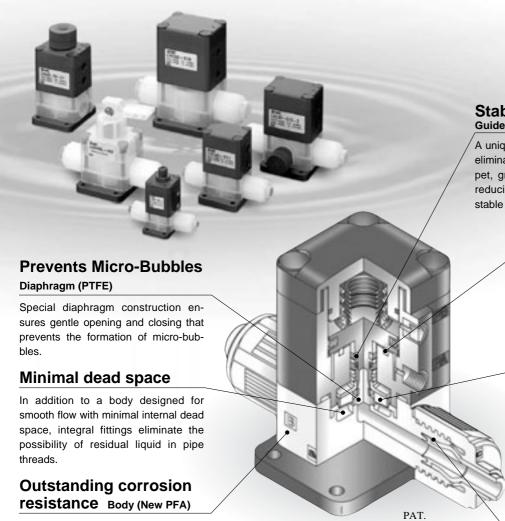

Stable Sealing Surface Guide ring

A unique guide ring on the piston rod eliminates lateral motion of the poppet, greatly increasing seal life and reducing particle formation with a stable work surface.

Low particle generation Piston bumper

A bumper absorbs piston momentum to minimize impact-induced particles.

Back-pressure resistance and long life Buffer

The diaphragm is supported by a buffer that minimizes deformation, which gives it long life and resistance to backpressure.


Different tubing sizes can be selected Hyper fitting




- No leak design (quadruple seal)
- Nut lock mechanism (sealing)
- High flexural strength (tubing supports)

Main applications and fields

Compatible with chemicals such as acids, bases and ultra DI water.

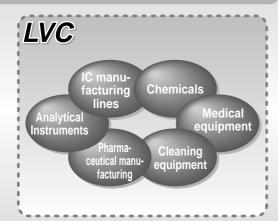

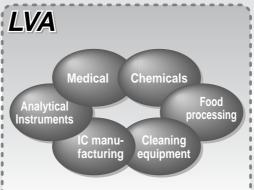



Air Operated

Integral Fitting Type Series LVC

		Model	LVC2□	LVC3□	LVC4□	LVC5□	LVC6□		
	Orifice dia	meter	ø4	ø8	ø10	ø16	ø22		
	Tubing O.D.	Metric	3, 4, 6	6, 8, 10	10, 12	12, 19	19, 25		
Туре	Symbol Valve typ	Inch	1/8, 3/16, 1/4	1/4, 3/8	3/8, 1/2	1/2, 3/4	3/4, 1		
Basic type	,PA ,PB ,PA	N.C.	0	0	0	0	0		
	B A B A B A B A B A B A B A B A B A B A	N.O.	0	0	0	0	0		
	N.C. N.O. Double acting	Double acting	0	0	0	0	0		
With flow rate adjustment	PA PA BHABHA	N.C.	0	0	0	0	0		
	N.C. Double acting	Double acting	0	0	0	0	0		
With bypass	PA PA BUABUA	N.C.	_	0	0	0	_		
	N.C. Double acting	Double acting	_	0	0	0	_		
With flow rate adjustment	iPA iPA ₩ B₩A B₩A	N.C.	_	0	0	0	_		
& bypass	N.C. Double acting	Double acting	_	0	0	0	_		
With indicator	B J A N.C.	N.C.	0	0	0	0	0		
Suck back	P PP	Single type	0	_	_	_	_		
	Single type Unit	Unit	0		_	_	_		
Manifold (5 stations max.))					
3 port	.¦PA ⊟R								

3 port	PA R P E N.C.	N.C.	0	_	_		_

Air Operated

Threaded Type Series LVA

		Model	LV	\1 □	LV	\2□	LVA	\3□	LV	\4 □	LV	\5 □	LVA6□
Body material	Orifice dia	meter	_	2		4		8		12		20	ø22
30dy material	Stainless story	ort size	1/8	1/4	1/8	1/4	1/4	3/8	3/8	1/2	1/2	3/4	1
/ ///	Stainless steel (St	JS316)	0	0	0	0	0	0	0	0	0	0	Ö
		_PPS		Ō		Ō	Ť	Ō	Ť	Ō		Ō	
Туре	Symbol Valve ty	PFA	_	_	_	0	_	0	_	0	_	0	0
Basic type	.PA .PB .PA	N.C.	0	0	0	0	0	0	0	0	0	0	0
	в фав фав фа	N.C.	_	_	0	0	0	0	0	0	0	0	0
	N.C. N.O. Double acting	N.O.	0	0	0	0	0	0	0	0	0	0	0
With flow rate adjustment	PA PA	Double acting	_	_	0	0	0	0	0	0	0	0	0
	PB N.C. Double acting	Double acting	_	_	0	0	0	0	0	0	0	0	0
With bypass	PA PA BUJA PB	N.C.	_	_	_	_	_	0	_	0	_	0	_
	PB N.C. Double acting	Double acting	_	_	_	_	_	0	_	0	_	0	_
With flow rate adjustment	PA PA PB PB	N.C.	_	_	_	_	_	0	_	0	_	0	_
& bypass	N.C. Double acting	Double acting	_	_	_	_	_	0	_	0	_	0	_
With indicator	PA B → A N.C.	N.C.			0	0	0	0	0	0	0	0	0
Manifold (5 stations max.)	<u>'</u>			·		<u> </u>				1	1		

3 port PA N.C. Note 2) N.C. N.C. Note 2) N.C. N.C. N.C. Note 2) N.C. N.C. N.C. Note 2) N.C. N.C. Note 2) N.C. N.C. Note 2) N.C. N.C. N.C. N.C. Note 2) N.C. N.C. Note 2) N.C. N.C. N.C. N.C. Note 2) N.C. N.C. N.C. N.C. N.C. N.C. Note 2) N.C. N.
--

Note 2) Only PFA is applicable as a body material.

Note 1) Refer to the page 471 for the applicable optional body materials.

SMC

LVC

LVA

LVH

LVD

LVQ

LQ1

LVN

TL/TIL

Series LV

Manually Operated Series LVH Integral Fitting Type

	Model	LVH20	LVH30	LVH40
	Orifice diameter	Ø4	Ø8	ø10
	Tubing O.D. Metric	3, 4, 6	6, 8, 10	10, 12
Туре	Symbol Valve type Inch	1/8, 3/16, 1/4	1/4, 3/8	3/8, 1/2
Basic type	B L A B L A N.C. Non-locking Locking	0	0	0
Manifold (5 stations max.)				


Threaded Type

	0	Model		LVI	120			LVI	130			LVI	140	
	- Or	fice diameter		Ø					8			ø'		
		_ D- :	Stainle (SUS	ss steel 3316)	PPS	PFA	Stainle (SUS	ss steel 3316)	PPS	PFA	Stainle (SUS	ss steel 3316)	PPS	PFA
Туре	Symbol	Port size	1/8	1/4	1/4	1/4	1/4	3/8	3/8	3/8	3/8	1/2	1/2	1/2
Basic type	B H A Non-locking	B ₽ N.C.	0	0	0	0	0	0	0	0	0	0	0	0
Manifold (5 stations max.)														

Air Operated Type Integral Fitting Type (Hyper Fittings)

Series LVC

How to Order Valves (Single Type)

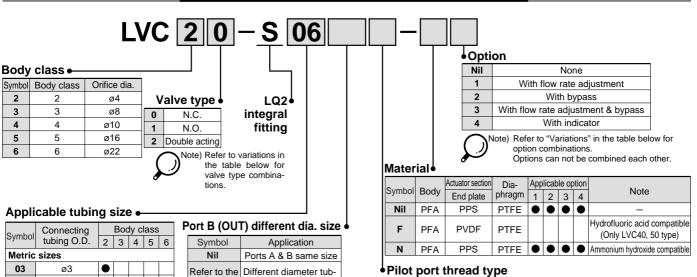

	cabic tabii			_		
Symbol	Connecting		Boo	dy c	lass	
Symbol	tubing O.D.	2	3	4	5	6
Metric	sizes					
03	ø3	•				
04	ø4	•				
06	ø6	0	•			
08	ø8		•			
10	ø10		0	•		
12	ø12			0	•	
19	ø19				0	•
25	ø25					0
Inch si	izes					
03	1/8	•				
05	3/16	•				
07	1/4	0	•			
11	3/8		0	•		
13	1/2			0	•	
19	3/4				0	•
25	1					0

app tubir to th

	ings can be selected	Symbol	Body class	Thread type	e
0	within the same body class.	NII	2	M5	
ie ieit.	Class.	Nil	3, 4, 5, 6	Rc 1/8	
Varia	tions	N	3, 4, 5, 6	NPT 1/8	
v ai ia					

	Ovite	Model	LVC20	LVC30	LVC40	LVC50	LVC60
	Orifice dia	meter	ø4	ø8	ø10	ø16	ø22
		Metric	3, 4, 6	6, 8, 10	10, 12	12, 19	19, 25
Туре	Symbol Valve ty	Inch	1/8, 3/16, 1/4	1/4, 3/8	3/8, 1/2	1/2, 3/4	3/4, 1
Basic type		N.C.	0	0	0	0	0
	PA PB PA BHA BHA PB	N.O.	0	0	0	0	0
	N.C. N.O. Double acting	Double acting	0	0	0	0	0
With flow rate adjust-	PA PA PA PA PA PA PA PA PA PA PA PA PA PA PA	N.C.	0	0	0	0	0
ment	FB N.C. Double acting	Double acting	0	0	0	0	0
With bypass	;PA ;PA Buja Buja	N.C.	_	0	0	0	_
	ドPB N.C. Double acting	Double acting	_	0	0	0	_
With flow rate adjust-	PA PA	N.C.		0	0	0	
ment & bypass	Bட்ர்A Bட்ர்A PB N.C. Double acting	Double acting	_	0	0	0	_
With indicator	PA BHHA N.C.	N.C.	0	0	0	0	0

LVC

LVA

LVH

LVD

LVQ

LQ1

LVN

TL/TIL

Series LVC



Standard Specifications

Mo	del	LVC20	LVC30	LVC40	LVC50	LVC60				
Tubing O.D.	Metric size	6	10	12	19	25				
Tubing O.D.	Inch size	1/4	3/8	1/2	3/4	1				
Orifice diamete		ø4	ø8	ø10	ø16	ø22				
Flow	Av x 10 ⁻⁶ m ²	8.4	40.8	60	144	192				
characteristics	Cv	0.35	1.7	2.5	6	8				
Withstand pres	sure (MPa)	1								
Operating press	sure (MPa)	0 to 0.5 0 to 0.4								
Back pressure	N.C./N.O.	0.3 or less 0.2 or less								
(MPa)	Double acting		0.4 or less		0.3 o	r less				
Valve leakage (cm³/min)		0 (with	h water pres	ssure)					
Pilot air pressu	re (MPa)			0.3 to 0.5						
Pilot port size		M5		Rc 1/8, N	NPT 1/8					
Fluid temperatu	re (°C)	0 to 100								
Ambient tempe	rature (°C)			0 to 60						
Mass (kg)		0.09	0.23	0.42	0.86	1.00				

Note 1) Contact SMC if the valve is to be used with vacuum and $B \rightarrow A$ flow.

Different Diameter Tubing Applicable with Reducer

Different diameter tubing can be selected (within a body class) by using a nut and insert bushing (reducer).

• With reducer

							Tul	oing C).D.						
Body class			- 1	Metric	sizes	3					In	ch siz	es		
Class	3	4	6	8	10	12	19	25	1/8	3/16	1/4	3/8	1/2	3/4	1
2	•	•	0	_	_	_	_	_	•	•	0	_	-	_	<u> </u>
3	_	_	•	•	0	-	_	-	_	-	•	0	-	-	_
4	_	_	_	_	•	0	_	_	_	-	_	•	0		
5	_	_	_	_	_	•	0	_	_	_	_	_	•	0	_
6	_	_	_	_	_	_		0	_	_	_	_	_	•	



Note) Refer to page 489 for information on changing tubing sizes.

△ Specific Product Precautions


Be sure to read before handling. Refer to front matters 42 and 43 for Safety Instructions, and pages 491 and 492 for High Purity Chemical Valve Precautions.

Piping

⚠ Caution

1. Connect tubing with special tools.

Refer to the pamphlet "High-Purity Fluoropolymer Fittings HYPER FIT-TING®/Series LQ1, 2 Work Procedure Instructions" (M-E05-1) for connecting tubing and special tools. (Downloadable from our web site.)

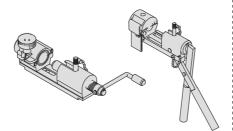

⚠ Caution

2. Tighten the nut to the end surface of the body. As a guide, refer to the proper tightening torques shown below.

Tightening torque for piping


Body class	Torque (N·m)
2	1.5 to 2.0
3	3.0 to 3.5
4	7.5 to 9.0
5	11.0 to 13.0
6	5.5 to 6.0

Suck Back

A change of volume inside the suck back valve pulls in liquid at the end of the nozzle to prevent dripping.



Unit type

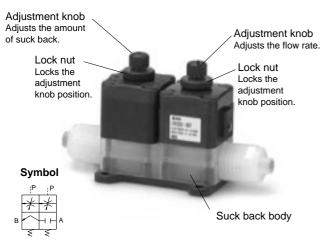


Standard Specifications

Mod	el	LVC23	LVC23U		
Note 1)	Metric sizes	(3), (4), 6			
Tubing O.D.	Inch sizes	(1/8), (3	/16), 1/4		
Orifice diameter		_	ø3		
Flow	Av x 10 ⁻⁶ m ²	_	4.8		
characteristics	Cv	_	0.2		
Withstand pressur	e (MPa)	1			
Operating pressur	e (MPa)	0 to 0.2			
Maximum suck ba	ck volume (cm³)	0.1			
Pilot air pressure (МРа)	0.3 to 0.5			
Pilot port size		N	15		
Fluid temperature	(°C)	0 to 100			
Ambient temperatu	ure (°C)	0 to 60			
Mass (kg)		0.08	0.16		

Note 1) Different diameter tubing shown in () can be selected when used with a reducer. Refer to page 489 for details.

How to Order

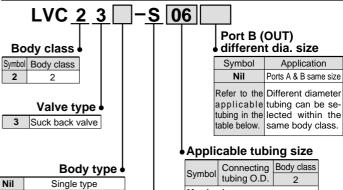

LQ2 integral fitting

Unit type with 2 way valve

U

Symbol	Connecting	Body class							
Symbol	tubing O.D.	2							
Metric									
03	ø3	0							
04	ø4	0							
06	ø6	0							
Inch siz	zes								
03	1/8	0							
05	3/16	0							
07	1/4	0							
© Pagio gizo									

Options

■ With flow rate adjustment

The flow rate is adjusted by controlling the diaphragm stroke.



■ With bypass

A small amount of fluid from the inlet side is allowed to flow continuously to the outlet side by providing a bypass inside the body.





LVC

LVA

LVH

LVD

LVQ


LQ1

LVN


TL/TIL

Series LVC


Construction

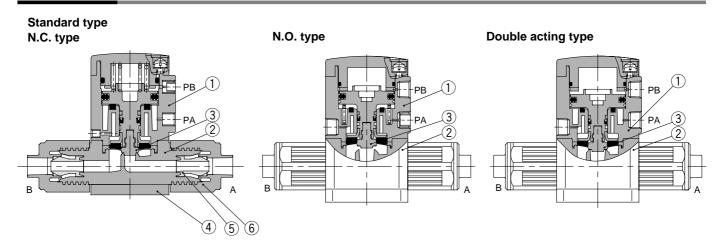


With reducer

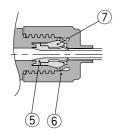


With flow rate adjustment

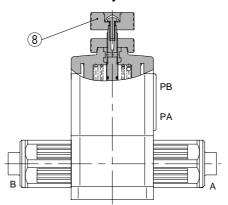


With bypass

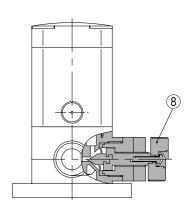

Suck back (single type)

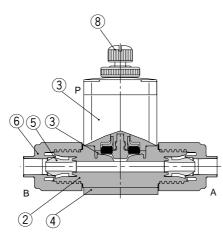


Suck back (unit type)

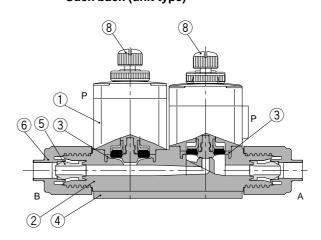

Parts list


No.	Description	Material	Option
1	Actuator section	PPS	PVDF
2	Body	PFA	_
3	Diaphragm	PTFE	_
4	End plate	PPS	PVDF
5	Insert bushing	PFA	_
6	Nut	PFA	_
7	Collar	PFA	_
8	Flow rate adjuster section	PPS	_
9	Indicator	PP	_


With indicator

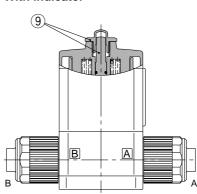


Dimensions

Basic type

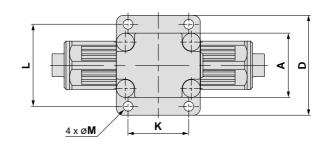

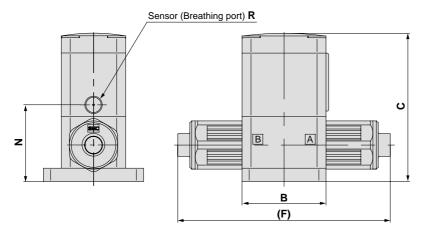

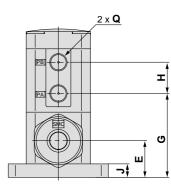

n	m	۸n	ı۵i	^	٠.

Dimensions															(mm)
Model	Α	В	С	D	Е	F	G	Н	J	K	L	M	N	Q	R
LVC2□	30	30	54.5	44	11	79	28.5	13	4	20	37	3.5	23.5	M5 x 0.8	M3 x 0.5
LVC3□	36	47	79	56	16.5	106	43	17.5	7.5	34	46	5.5	39		
LVC4□	46	60	96	68	22	131	55	18	8	42	57	5.5	48	Rc 1/8	Rc 1/8
LVC5□	58	75	129	84	26	154	68	27.5	8	56	71	6.5	62	NPT 1/8	NPT 1/8
LVC6□	58	75	138	84	32	165	77	27.5	8	56	71	6.5	71		

LVC

LVA

LVH

LVQ

LQ1


LVN


TL/TIL

Series LVC

Dimensions




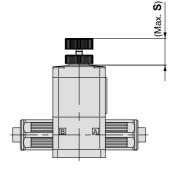


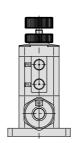


Dimensions (mm)									
Model	S								
LVC2□	12.5								
LVC3□	24								
LVC4□	29								
LVC5□	34.5								
LVC6□	36								


With bypass

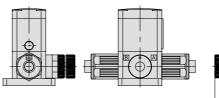

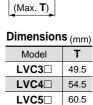


With flow rate adjustment & bypass

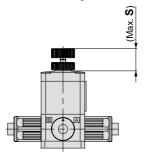

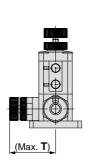


Dimension	(mm)			
Model	S	Т		
LVC3□	24	49.5		
LVC4□	29	54.5		
LVC5	34.5	60.5		


With indicator

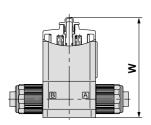


Dimension	s _{(mm}
Model	W
LVC20	64
LVC30	90
LVC40	110.5
LVC50	147
LVC60	156

Suck back (Single type)

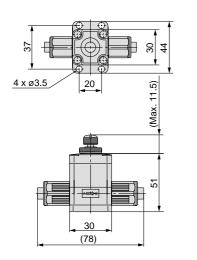


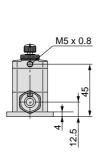

Suck back (Unit type)

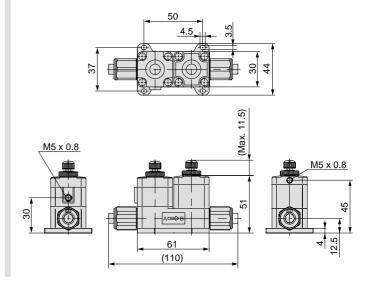

Series LVC **Manifolds**

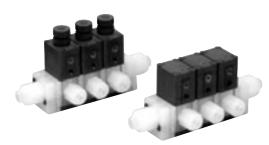

Manifold Specifications

Model	LLC2A	LLC3A	LLC4A	LLC5A						
Manifold type	Stacking type									
P (IN), A (OUT) type	Common IN/Individual OUT									
Valve stations		2 to 5 s	stations							
Tubing size (port P)	3/8 1/2 3/4 3/4									
Tubing size (port A)	1/4 3/8 1/2 3/4									
_	•									


2 to 5

2

3

Note 1) Contact SMC if the manifold will be used with vacuum and $A \rightarrow P$ flow.

How to Order Manifold Base

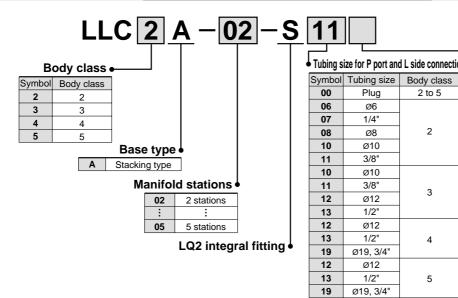

on •	Tubing s	ize for P port and	d R side connection
	Symbol	Tubing size	Body class
	Nil	L side, R sid	de same size
	00	Plug	2 to 5
	06	ø6	
	07	1/4"	
	08	ø8	2
	10	ø10	
	11	3/8"	
	10	ø10	
	11	3/8"	3
	12	Ø12	3
	13	1/2"	
	12	Ø12	
	13	1/2"	4
	19	Ø19, 3/4"	
	12	Ø12	
	13	1/2"	5
_	19	Ø19, 3/4"	

LVC

LVA

LVH

LVD

LVQ


LQ1

LVN

TL/TIL

LQ3


How to Order Valve

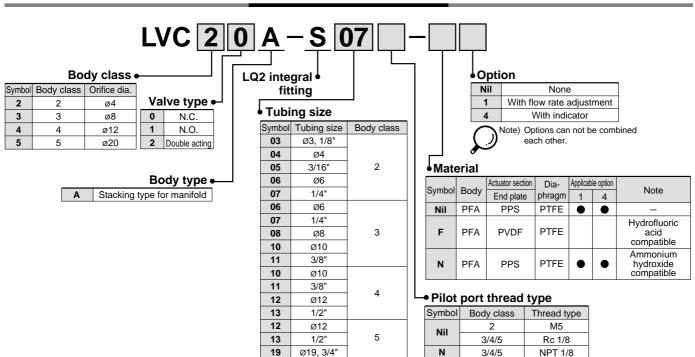

Series LVC

How to Order Manifold Assembly (Example)

Enter the part number of the valves to be mounted together with the manifold base part number.

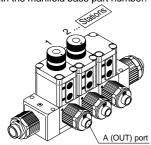

Stations are counted from station 1 on the left side, with the A (OUT) ports in front.

<Example>

LLC2A-03-S11 1set 1 set Manifold base part no.


- * LVC20A-S07-1 ····· 2 sets 2 sets Valve part no. (stations 1 & 2)
- *LVC20A-S07 ····· 1 set 1 set Valve part no. (station 3)
- Add the * symbol at the beginning of part numbers for valves, etc. to be mounted.

Enter together in order counting from station 1 on the left side, with the A (OUT) ports in front.

Manifold variations

			Model	LVC20A	LVC30A	LVC40A	LVC50A		
	M	anifold ma	aterial	PFA					
		Orifica	g size	1/4	3/8	1/2	3/4		
Туре	Symbol	Valve typ	meter	Ø4	Ø8	Ø10	Ø16		
Basic type			N.C.	0	0	0	0		
			N.O.	0	0	0	0		
	N.C. N.	O. Double acting	Double acting	0	0	0	0		
With flow rate adjustment	PĀ A PA	PA PA	N.C.	0	0	0	0		
	N.C.	Double acting	Double acting	0	0	0	0		

Dimensions

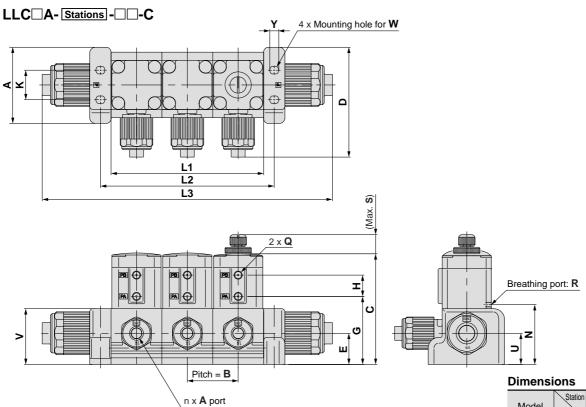

Dimensions

_															(
	Model	Α	В	С	D	Е	G	Н	K	N	Q	R	S	U	٧	W	Υ	
L	LC2A	46.5	31	67.5	67	19	41.5	13	18	36.5	M5 x 0.8	M3 x 0.5	11.5	19	34	M4	5.5	
L	LC3A	47	36.5	93.5	76	27.5	57.5	17.5	39	53.5	Rc 1/8 Rc 1/8 NPT 1/8 NPT 1/8	D 4/0	5 4/0	24	27.5	47	M5	6.5
L	LC4A	60	47	111.5	95	33.5	70.5	18	50	63.5			29	33.5	56	M6	7.5	
L	LC5A	75	59	131	114	33.5	70	27.5	62	64		141 1 1/0	34.5	27.5	56.5	M6	7.5	
4	68										9							

Dillielisi	0113		2 3 4 5 62 93 124 155 75 106 137 168								
Model	Station Symbol	2	3	4	5						
	L1	62	93	124	155						
LLC2A	L2	75	106	137	168						
	L3	146	177	208	239						
LLC3A	L1	73	109.5	146	182.5						
	L2	84	120.5	157	193.5						
	L3	183	219.5	256	292.5						
	L1	94	141	188	235						
LLC4A	L2	109	156	203	250						
	L3	219	266	313	360						
	L1	118	177	236	295						
LLC5A	L2	130	189	248	307						
	L3	240	299	358	417						

SMC


Series LVC 3 Port

Standard Specifications




Model		LVC200				
Orifice diameter		ø4				
Flow	Av x 10 ⁻⁶ m ²	7.2				
characteristics	Cv	0.3				
Withstand pressure (MPa)		1				
Operating pressure (MPa)		0 to 0.5				
Valve leakage (c	m³/min)	0 (with water pressure)				
Pilot air pressure	e (MPa)	0.4 to 0.5				
Pilot port size		M5 x 0.8				
Fluid temperatur	re (°C)	0 to 100				
Ambient tempera	ature (°C)	0 to 60				
Mass (kg)		0.120				

How to Order Valve

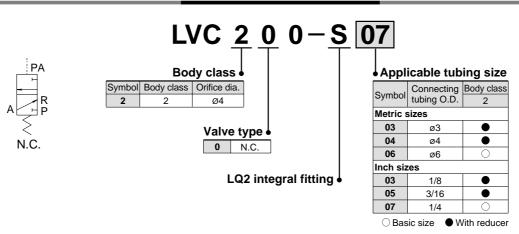

Construction

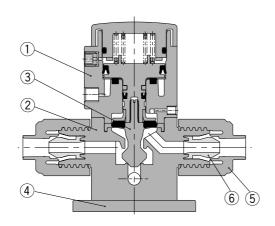

Parts list

No.	Description	Material
1	Actuator section	PPS
2	Body	PFA
3	Diaphragm	PTFE
4	End plate	PPS
5	Nut	PFA
6	Insert bushing	PFA

LVC

LVA

LVH

LVD

LVQ


LQ1


LVN


TL/TIL


Series LVC


Dimensions

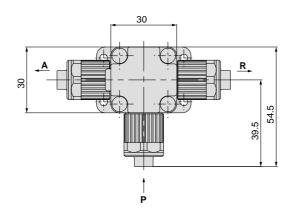

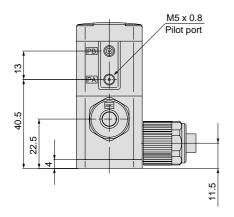

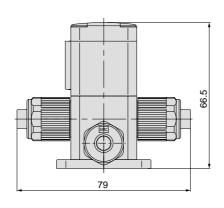

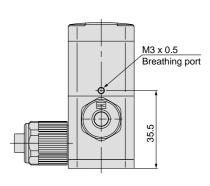


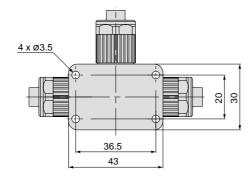

Air Operated Type Threaded Type

Series LVA

How to Order Valves (Single Type)

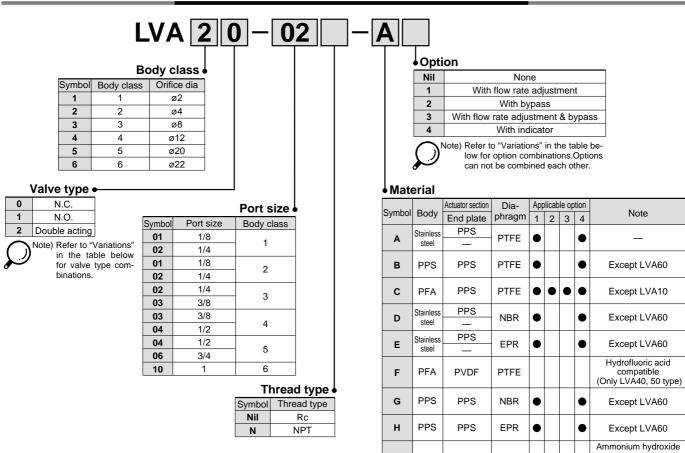

PFA

Ν

PPS

PTFE

Variations

			Model Orifice diameter	LV			A20	LV		_	A40	LV		LVA60
	Boo	dv m	onlice diameter	ø2 ø4		ø8		ø12		ø20		ø22		
		dy material Note) Stainless	Port size	1/8	1/4	1/8	1/4	1/4	3/8	3/8	1/2	1/2	3/4	1
	\	7,00831			0	0	0	0	0	0	0	0	0	0
		Val	PPS	0	0	_	0	_	0	_	0	_	0	_
Туре		Symbol	type PFA	_	_	_	0	_	0	_	0	_	0	0
Basic type		.PA .PB .PA	N.C.	0	0	0	0	0	0	0	0	0	0	0
		BHHAB ABHHA	N.O.	_	-	0	0	0	0	0	0	0	0	0
	N.C. N.O. Double acting	Double acting	0	0	0	0	0	0	0	0	0	0	0	
With flow rate adjustment			N.C.	_	_	0	0	0	0	0	0	0	0	0
adjustment		BHA BHA PB N.C. Double acting	Double acting	-	_	0	0	0	0	0	0	0	0	0
With bypass		.¡PA .¡PA	N.C.	_	_	_	_	_	0	_	0	_	0	_
		B A B A PB N.C. Double acting	Double acting	_	_	-	-	_	0	_	0	_	0	_
With flow rate adjustment &		PA PA Py A By A By A	N.C.	_	_	-	-	_	0	_	0	_	0	_
bypass		B A B A PB	Double acting	_	_	_	_	_	0	_	0	_	0	_
With indicator		BHHA SN.C.	N.C.	_	_	0	0	0	0	0	0	0	0	0

Note) Refer to the "Material" table for the applicable optional body materials.

compatible Except LVA10 LVC

LVA

LVH

LVD

LVQ

LQ1

LVN

TL/TIL

Series LVA



Basic type



With flow rate adjustment

Standard Specifications

Mod	el	LVA10	LVA20	LVA30	LVA40	LVA50	LVA60			
Orifice diamet	er	ø2	ø4	ø8	ø12	ø20	ø22			
Port size		1/8, 1/4	1/8, 1/4	1/4, 3/8	3/8, 1/2	1/2, 3/4	1			
Flow	Av x 10 ⁻⁶ m ²	1.7	8.4	40.8	79.2	144	192			
characteristics	Cv	0.07	0.35	1.7	3.3	6	8			
Withstand pres	ssure (MPa)				1					
Operating pres	ssure (MPa)		0 to	0.5		0 to	0.4			
Back pressure	N.C./N.O.	0.15 or less		0.3 or less	1	0.2 or less				
(MPa)	Double acting	0.3 or less		0.3 o	r less					
Valve leakage	(cm³/min)	0 (with water pressure)								
Pilot air press	ure (MPa)	0.3 to 0.5								
Pilot port size		M	5		Rc 1/8,	NPT 1/8				
Fluid tempera	ture (°C)			0 to	100 Note 1)					
Ambient temp	erature (°C)			0 tc	60					
	Stainless steel (SUS)	0.12	0.18	0.44	0.86	1.67	1.96			
Mass (kg)	PPS	0.05	0.08	0.18	0.32	0.73	_			
	PFA	_	0.09	0.20	0.35	0.78	0.90			

Note 1) 0 to 60°C when the diaphragm is NBR or EPR. Note 2) The N.O. type is not available for LVA10.

Note 3) Contact SMC if the valve will be used with vacuum and B \rightarrow A flow.

▲ Specific Product Precautions

Be sure to read before handling. Refer to front matters 42 and 43 for Safety Instructions, and pages 491 and 492 for High Purity Chemical Valve Precautions.

Piping

⚠ Caution

1. Avoid using metal fittings with a resin body (taper threads).

This can cause damage to the valve body.

Options

■ With flow rate adjustment

Adjusts the flow rate by controlling the diaphragm stroke.




Adjustment knob Adjusts the flow rate.


Lock nut
 Locks the adjustment knob position.

Construction


Standard type N.C. type

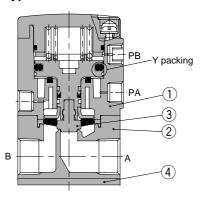

N.O. type

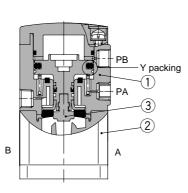

Double acting type

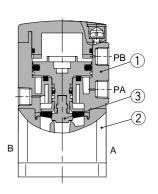

LVC

LVA

LVH

LVD

LVQ


LQ1

LVN


TL/TIL

LQ3

With flow rate adjustment

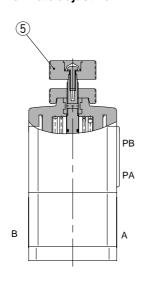


With indicator

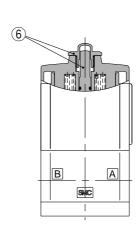

Parts list

No.	Description	Material	Option
1	Actuator section	PPS	PVDF
		Stainless steel	
2	Body	PPS	_
		PFA	
		PTFE	
3	Diaphragm	NBR	_
		EPR	
4	End plate (PFA body only)	PPS	PVDF
5	Flow rate adjuster section	PPS	_
6	Indicator	PP	_

Series LVA

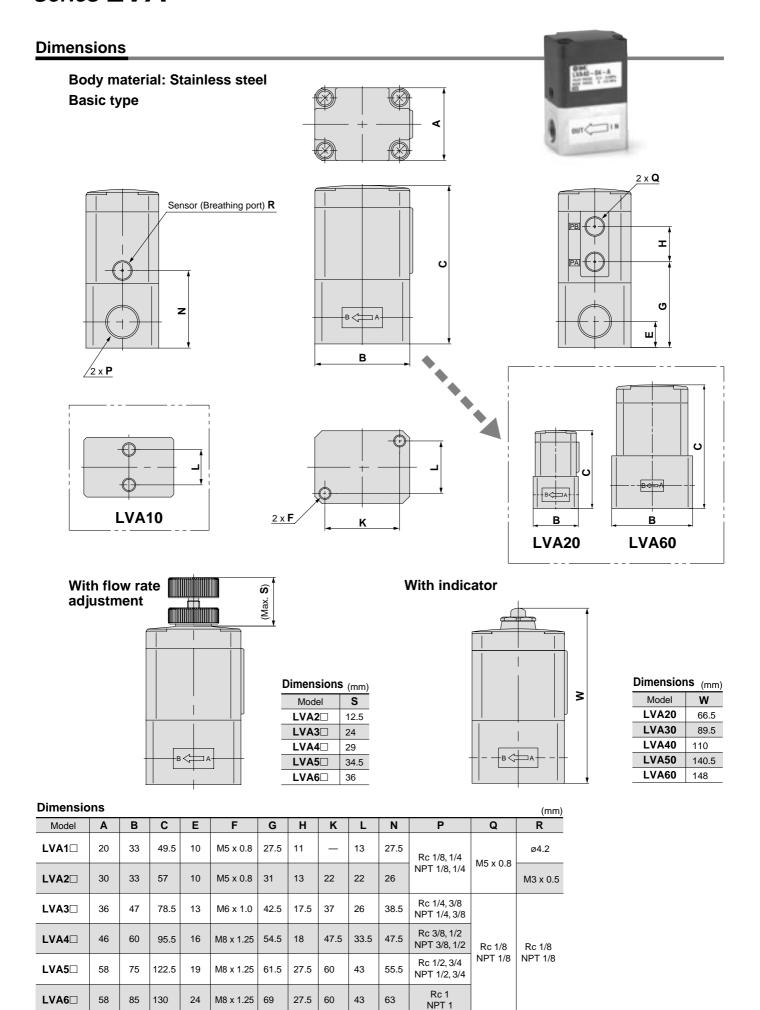


Air Operated Type Series LVA

Dimensions

Body material: PPS

Basic type

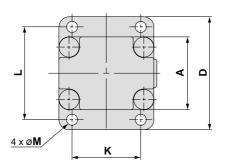



LVC

LVA

LVH LVD


LVQ


LQ1

LVN

TL/TIL

LQ3

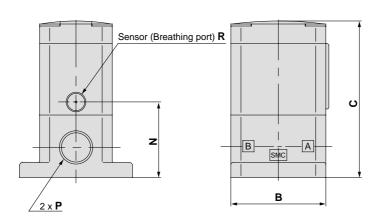

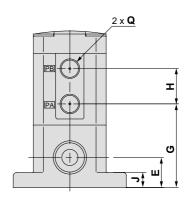

LVA10


В

A


2 x Ø2 Depth 4

49.5

With flow rate adjustment

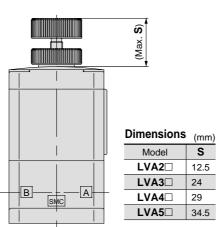

With indicator

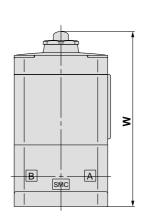


Dimension	Dimensions (mm)										
Model	W										
LVA20	67										
LVA30	88.5										
LVA40	110.5										
LVA50	147										
LVA60	_										

Dimensio	ns														(mm)
Model	Α	В	С	D	Е	G	Н	J	K	L	М	N	P	Q	R
LVA1□	20	33	49.5	_	10	27.5	11	_	4	11	_	27.5	Rc 1/8, 1/4 NPT 1/8, 1/4	M5 x 0.8	ø4.2
LVA2□	30	36	57.5	44	11	31.5	13	4	20	37	3.5	26.5	Rc 1/4 NPT 1/4	IVIO X U.O	M3 x 0.5
LVA3□	36	47	77.5	56	15	41.5	17.5	7.5	34	46	5.5	37.5	Rc 3/8 NPT 3/8		
LVA4□	46	60	96	68	22	55	18	8	42	57	5.5	48	Rc 1/2 NPT 1/2	Rc 1/8 NPT 1/8	Rc 1/8 NPT 1/8
LVA5□	58	75	129	84	26	68	27.5	8	56	71	6.5	62	Rc 3/4 NPT 3/4		


Series LVA


Dimensions


Body material: PFA Basic type

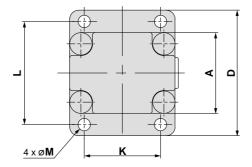




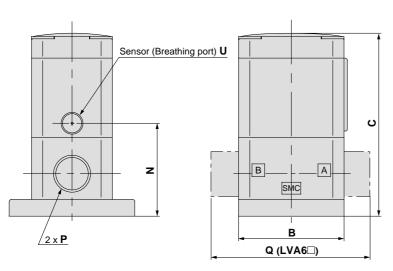

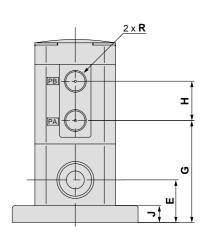

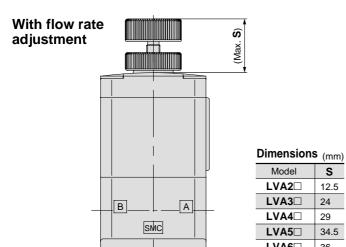

With indicator

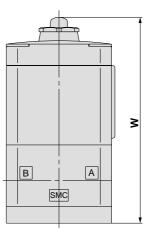

Dimension	ns (mm)
Model	W
LVA20	70.5
LVA30	92.5
LVA40	110.5
LVA50	147
LVA60	156

Dimension	Dimensions													(mm)		
Model	Α	В	С	D	Е	G	Н	J	K	L	M	N	Р	Q	R	U
LVA2□	30	36	61	44	14.5	35	13	4	20	37	3.5	30	Rc 1/4 NPT 1/4	_	M5 x 0.8	M3 x 0.5
LVA3□	36	47	81.5	56	19	45.5	17.5	7.5	34	46	5.5	41.5	Rc 3/8 NPT 3/8	_		
LVA4□	46	60	96	68	22	55	18	8	42	57	5.5	48	Rc 1/2 NPT 1/2	_	Rc 1/8	Rc 1/8
LVA5□	58	75	129	84	26	68	27.5	8	56	71	6.5	62	Rc 3/4 NPT 3/4	_	NPT 1/8	NPT 1/8
LVA6□	58	75	138	84	32	77	27.5	8	56	71	6.5	71	Rc 1 NPT 1	117		

Model

LVA2□

LVA3□

LVA4□

LVA5□

LVA6□

S

12.5

24

29

36

34.5

Series LVA Manifolds




Manifold Specifications


Model	LLA2A	LLA3A	LLA4A	LLA5A						
Manifold type	Stacking type									
P (IN), A (OUT) type	Common IN/Individual OUT									
Valve stations		2 to 5 s	tations							
Port size (port P)	1/4	3/8	1/2	3/4						
Port size (port A)	1/4	3/8	1/2	3/4						
_										

Note 1) Contact SMC if the manifold will be used with vacuum and A \rightarrow P flow.

How to Order Manifold Base

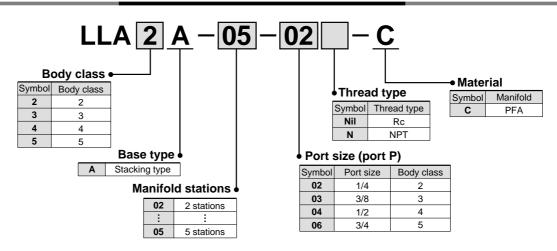

How to Order Valve

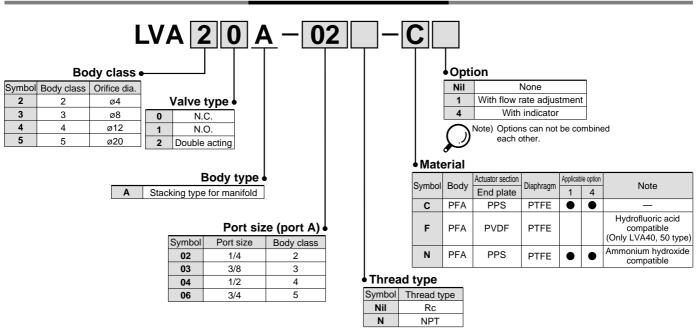

LVC

LVH

LVD

LVQ

LQ₁


LVN

TL/TIL

Series LVA

How to Order Manifold Assembly (Example)

Enter the part number of the valves to be mounted together with the manifold base part number.

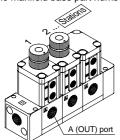

Stations are counted from station 1 on the left side, with the A (OUT) ports in front.

<Example>

LLA2A-03-02-C ····· 1 set 1 set Manifold base part no.

- * LVA20A-02-C1 ····· 2 sets 2 sets Valve part no. (stations 1 & 2) * LVA20A-02-C ····· 1 set 1 set Valve part no. (station 3)
- Add the * symbol at the beginning of part numbers for valves, etc. to be mounted.

Enter together in order counting from station 1 on the left side, with the A (OUT) ports in front.


Manifold variations

	Ma	N	/lodel	LVA20A	LVA30A	LVA40A	LVA50A		
	IVIA	nifold ma	aterial	PFA					
	0	Por Prifice dia Valve typ	t size	1/4	3/8	1/2	3/4		
Туре	Symbol	Valve typ	meter	ø4	ø8	ø12	ø20		
Basic type			N.C.	0	0	0	0		
	A PA A PE		N.O.	0	0	0	0		
	N.C. N.O	. Double acting	Double acting	0	0	0	0		
With flow rate adjustment			N.C.	0	0	0	0		
	N.C. Do	uble acting	Double acting	0	0	0	0		

4 x Mounting hole for W

Dimensions



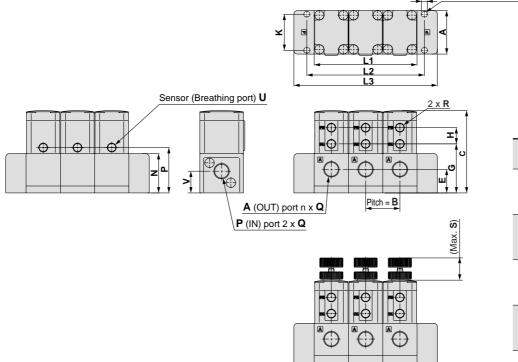

Dimensions	(mm)
Model	S
LLA2A	11.5
LLA3A	24
LLA4A	29
LLA5A	34.5

					(mm)
Model	Station Symbol	2	3	4	5
	L1	62	93	124	155
LLA2A	L2	75	106	137	168
	L3	118	149	180	211
LLA3A	L1	74	111	148	185
	L2	90	127	164	201
	L3	118	155	192	229
	L1	94	141	188	235
LLA4A	L2	112	159	206	253
	L3	144	191	238	285
	L1	118	177	236	295
LLA5A	L2	140	199	258	317
	L3	178	237	296	355

Dimension	ons
Maralal	_

Dimensions (n										(mm)						
Model	Α	В	С	Е	G	Н	K	М	N	Р	Q	R	U	٧	W	Y
LLA2A	50	31	68	20.5	41.5	13	18	4.5	34	35	Rc 1/4, NPT 1/4	M5 x 0.8	M3 x 0.5	19	M4	5.5
LLA3A	47	37	88.5	25.5	52.5	17.5	39	5.5	42.5	51.5	Rc 3/8, NPT 3/8		5 4/2	23.5	M5	6.5
LLA4A	60	47	103.5	29	62.5	18	50	6.5	48	62.5	Rc 1/2, NPT 1/2	Rc 1/8 NPT 1/8	Rc 1/8 NPT 1/8	26	M6	7.5
LLA5A	75	59	135.5	32.5	74.5	27.5	61	6.5	61	68.5	Rc 3/4, NPT 3/4	1/0	1 170	29	M6	7.5


Series LVA 3 Port

Standard Specifications




Mo	odel	LVA200			
Orifice diameter		ø4			
Port size		1/4			
Flow	Av x 10 ⁻⁶ m ²	7.2			
characteristics	Cv	0.3			
Withstand pressure (MPa)		1			
Operating press	ure (MPa)	0 to 0.5			
Valve leakage (c	:m³/min)	0 (with water pressure)			
Pilot air pressur	e (MPa)	0.4 to 0.5			
Pilot port size		M5 x 0.8			
Fluid temperatur	re (°C)	0 to 100			
Ambient temper	ature (°C)	0 to 60			
Mass (kg)		0.162			

How to Order Valve

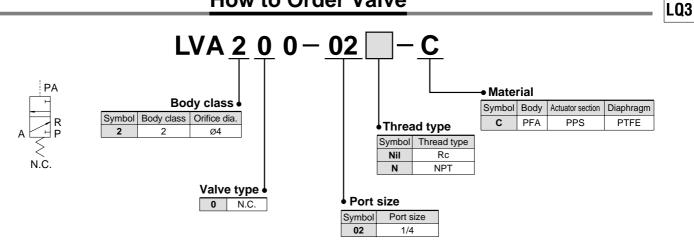

Construction

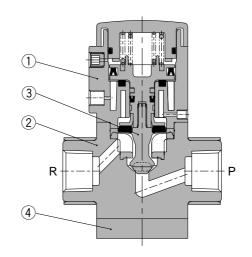

Parts list

No.	Description	Material
1	Actuator section	PPS
2	Body	PFA
3	Diaphragm	PTFE
4	End plate	Stainless steel

LVC

LVA

LVH

LVD

LVQ


LQ1


LVN


TL/TIL


Series LVA


Dimensions

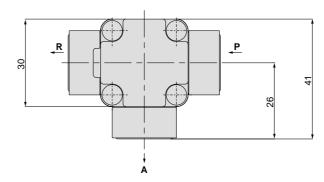

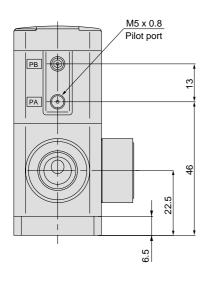

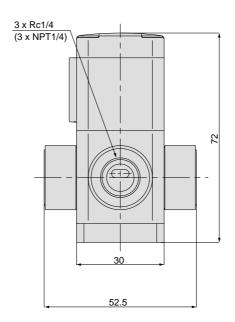


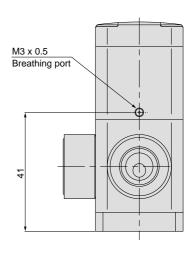

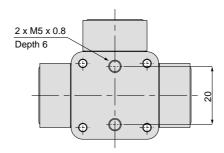

Manually Operated Integral Fitting Type/Threaded Type

Series LVH

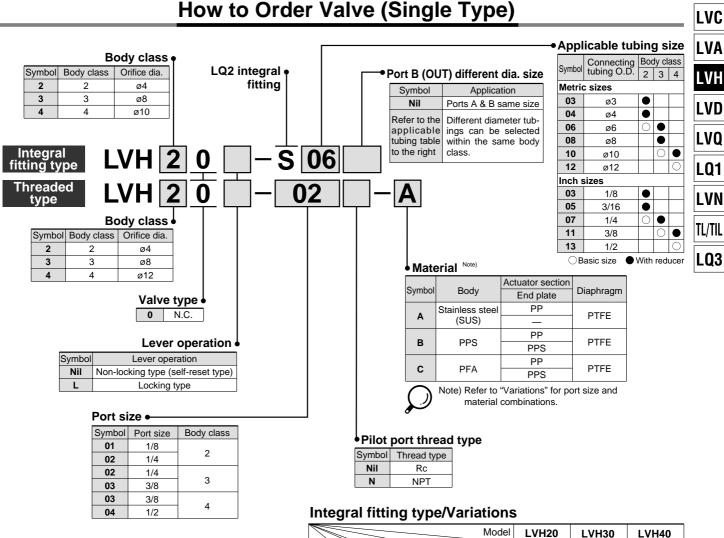

9	g ., po, ranamente									
	Orig	Model	LVH20	LVH30	LVH40					
	Orifice dia	ameter	ø4	ø8	ø10					
			-, , -	6, 8, 10	10, 12					
Туре	Symbol Valve ty	Inch	1/8, 3/16, 1/4	1/4, 3/8	3/8, 1/2					
Basic type	B H A B H A Non-locking Locking	N.C.	0	0	0					

Threaded type/Series variation

												_			
		rie:	Model		LVI	H20			LVI	1 30			LVI	H40	
`		rifice dia	meter		Ø	4			Ø	8			ø	12	
Туре	Symbol	Valve typ	ort size	1/8	1/4	1/4	1/4	1/4	3/8	3/8	3/8	3/8	1/2	1/2	1/2
Basic type		31°	N.C.	Stair ste (SUS	eel	PPS	PFA	Stair ste (SUS	eel	PPS	PFA				PFA
	B⊢⊢A Non-locking	B ⊢ ⊢ A Locking	IN.C.	0	0	0	0	0	0	0	0	0	0	0	

Series LVH



↑Specific Product Precautions


Be sure to read before handling.
Refer to front matters 42 and 43 for Safety Instructions, and pages 491 and 492 for High Purity Chemical Valve Precautions.

Piping

⚠ Caution

Integral fitting type

Connect tubing with special tools.
 Refer to the pamphlet "High-Purity Fluoropolymer Fittings HYPER FITTING®/Series LQ1, 2 Work Procedure Instructions" (ME05-1) for connecting tubing and special tools. (Downloadable from our web site.)

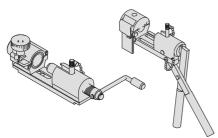

2. Tighten the nut to the end surface of the body. As a guide, refer to the proper tightening torques shown below.

Tightening torque for piping

ngntoning to quo for piping								
Body class	Torque (N⋅m)							
2	1.5 to 2.0							
3	3.0 to 3.5							
4	7.5 to 9.0							

Threaded type

1. Avoid using metal fittings with a resin body (taper threads).

This can cause damage to the valve body.

Standard Specifications/Integral Fitting Type

Mod	el	LVH20	LVH30	LVH40			
Turkin a O D	Metric size	6	10	12			
Tubing O.D.	Inch size	1/4	3/8	1/2			
Orifice diamet	ter	ø4	ø8	ø10			
Flow	Av x 10 ⁻⁶ m ²	8.4	40.8	60			
characteristics	Cv	0.35	1.7	2.5			
Withstand pre	ssure (MPa)	1					
Operating pres	ssure (MPa)	0 to 0.5					
Back pressure	e (MPa)		0.3 or less				
Valve leakage	(cm³/min)		0 (with water pressure	e)			
Action		Toggle type (non-locking/locking)					
Fluid tempera	ture (°C)	0 to 60					
Ambient temp	erature (°C)	0 to 60					
Mass (kg)		0.06	0.14	0.26			

Note) Contact SMC if the valve is to be used with $B \rightarrow A$ flow.

Different Diameter Tubing Applicable with Reducer

Different diameter tubing can be selected (within a body class) by using a nut and insert bushing (reducer).

With reducer

		Tubing O.D.									
Body class			Metric	sizes	Inch sizes						
	3 4 6 8 10 12				12	1/8	3/16	1/4	3/8	1/2	
2	•	•	0	_	_	_	•	•	0	_	_
3	_	_	•	•	0	_	_	_	•	0	_
4	_	_	_	_	•	0	_	_		•	0

Note) Refer to page 489 for information on changing tubing sizes.

Standard Specifications/Threaded Type


Mod	lel	LVH20	LVH30	LVH40			
Port size		1/8, 1/4	1/4, 3/8	3/8, 1/2			
Orifice diamet	ter	ø4	ø8	ø12			
Flow	Av x 10 ⁻⁶ m ²	8.4	40.8	60			
characteristics	Cv	0.35	1.7	2.5			
Withstand pre	ssure (MPa)		1				
Operating pres	ssure (MPa)		0 to 0.5				
Back pressure	e (MPa)	0.3 or less					
Valve leakage	(cm³/min)	0 (with water pressure)					
Action		Toggle type (non-locking/locking)					
Fluid tempera	ture (°C)		0 to 60				
Ambient temp	erature (°C)		0 to 60				
	Stainless steel (SUS)	0.15	0.36	0.71			
Mass (kg)	PPS	0.04	0.09	0.17			
	PFA	0.05	0.11	0.20			


Manually Operated Integral Fitting Type/Threaded Type Series LVH

Construction

Integral fitting type

Threaded type

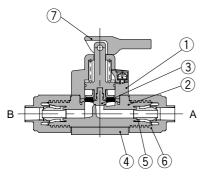

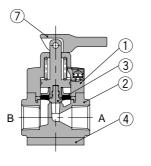

Parts list

. u			
No.	Description	Material	Note
1	Actuator section	PP	
		PFA	Integral fitting type
2	Body	Stainless steel	Three ded turns
		PPS	Threaded type
		PFA	
3	Diaphragm	PTFE	_
4	End plate	PPS	PFA body only
5	Insert bushing	PFA	_
6	Nut	PFA	_
7	Lever	PP	_
8	Collar	PFA	_
			-

LVC

LVA

LVD

LVQ

LQ1

LVN


TL/TIL

LQ3

With reducer



Dimensions/Integral Fitting Type

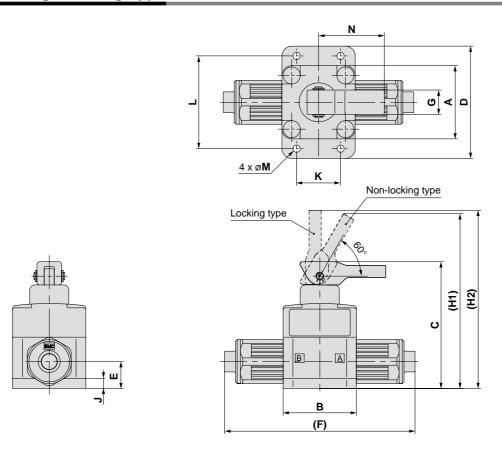



Dimension	าร


Dillicitato	13													(mm)
Model	Α	В	С	D	E	F	G	H1	H2	J	K	L	М	N
LVH20□	30	30	52	44	11	79	10	72.5	74	4	20	37	3.5	27
LVH30□	36	47	81.5	56	16.5	106	19	111	113	7.5	34	46	5.5	37.5
LVH40□	46	60	100	68	22.5	131	20.5	139	143	8	42	57	5.5	50

Series LVH

Dimensions/Threaded Type

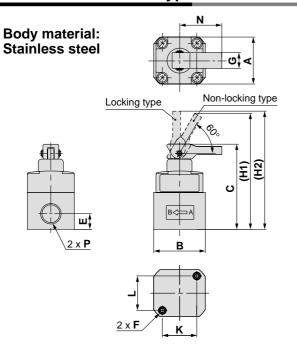

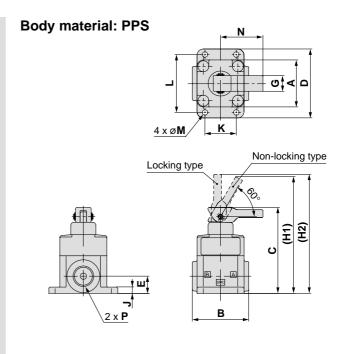

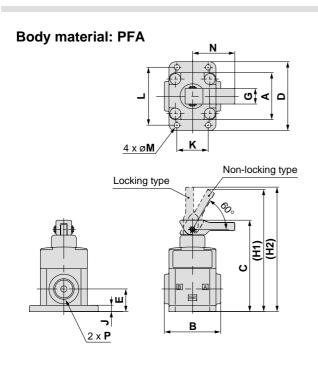

Dimension	Dimensions (mm)															
Body material	Model	Α	В	С	D	Е	F	G	H1	H2	J	K	L	М	N	Р
0	LVH20□	30	33	54.5	l	10	M5 x 0.8	10	75	76.5	_	22	22	l	27	Rc 1/8, 1/4, NPT 1/8, 1/4
Stainless steel (SUS)	LVH30□	36	47	81		13	M6 x 1	19	110.5	112.5	_	37	26		37	Rc 1/4, 3/8, NPT 1/4, 3/8
	LVH40□	46	60	99	_	16	M8 x 1.25	20.5	138	142	_	47.5	33.5	_	50	Rc 3/8, 1/2, NPT 3/8, 1/2
	LVH20□	30	36	55	44	11	_	10	75.5	77	4	20	37	3.5	27	Rc 1/4, NPT 1/4
PPS	LVH30□	36	47	80	56	15	_	19	109.5	111.5	7.5	34	46	5.5	37	Rc 3/8, NPT 3/8
	LVH40□	46	60	99.5	68	22	_	20.5	138.5	142.5	8	42	57	5.5	50	Rc 1/2, NPT 1/2
	LVH20□	30	36	58.5	44	14.5	_	10	79	80.5	4	20	37	3.5	27	Rc 1/4, NPT 1/4
PFA	LVH30□	36	47	84	56	19	_	19	113.5	115.5	7.5	34	46	5.5	37	Rc 3/8, NPT 3/8
	LVH40□	46	60	99.5	68	22	_	20.5	138.5	142.5	8	42	57	5.5	50	Rc 1/2, NPT 1/2

Series LVH/Integral Fitting Type Manifolds




Manifold Specifications


Model	LLH2A	LLH3A	LLH4A					
Manifold type	Stacking type							
P (IN), A (OUT) type	Cor	mmon IN/Individual O	DUT					
Valve stations		2 to 5 stations						
Tubing size (port P)	3/8	1/2	3/4					
Tubing size (port A)	1/4	3/8	1/2					
Valve stations Tubing size (port P)	3/8	2 to 5 stations	3/4					

Note 1) Contact SMC if the manifold will be used with vacuum and $A \rightarrow P$ flow.

How to Order Manifold Base

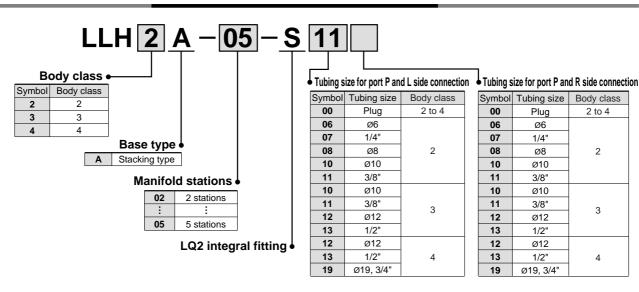

How to Order Valve

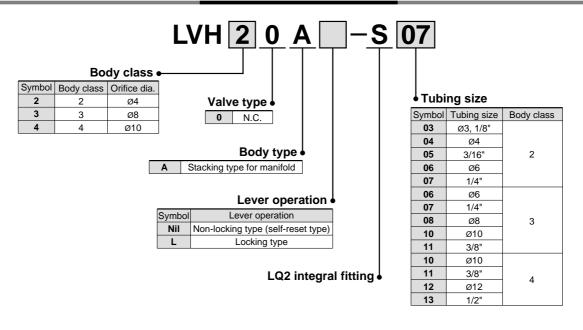

LVC

LVA

LVH

LVD

LVQ

LQ1


LVN

TL/TIL

Series LVH

How to Order Manifold Assembly (Example)

Enter the part number of the valves to be mounted together with the manifold base part number.

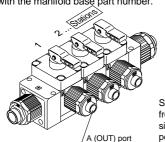

valves, etc. to be mounted.

Stations are counted from station 1 on the left side, with the A (OUT) ports in front.

<Example>

LLH2A-03-SH ····· 1 set 1 set Manifold base part no.

* LVH20A-S07 ····· 2 sets 2 sets Valve part no. (stations 1 & 2)

* LVH20AL-S07 ····· 1 set 1 set Valve part no. (station 3)

Add the * symbol at the beginning of part numbers for


Enter together in order counting from station 1 on the left side, with the A (OUT) ports in front.

Туре

Threaded type manifold/Variations

	M		Model	LVH20	LVH30	LVH40
	IVI	anifold m	aterial		PFA	
		Orifice dia	ig size	1/4	3/8	1/2
Туре	Symbol	Valve typ	meter	Ø4	Ø8	Ø10
Manifold	A P Non-locking	A	N.C.	0	0	0

Dimensions

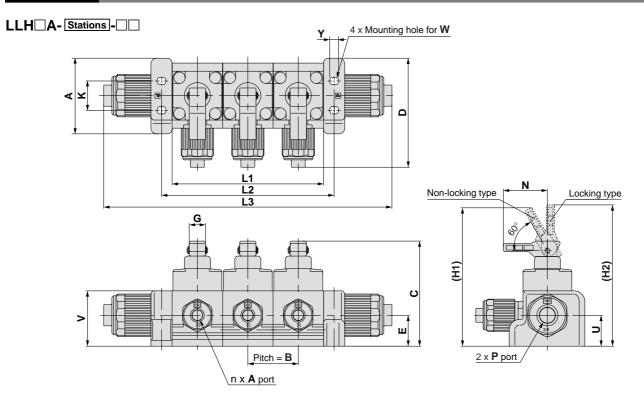

Dimensions (mr													(mm	
Model	Α	В	С	D	Е	G	H1	H2	K	N	U	٧	W	Υ
LLH2A	46.5	31	65	67	19	10	85.5	87	18	27	19	34	M4	5.5
LLH3A	47	36.5	94.5	76	27.5	19	125.5	127.5	39	37	27.5	47	M5	6.5
LLH4A	60	47	115	95	33.5	20.5	154	158	50	50	33.5	56	M6	7.5

					(mm)
Model	Station Symbol	2	3	4	5
	L1	62	93	124	155
LLH2A	L2	75	106	137	168
	L3	146	177	208	239
	L1	73	109.5	146	182.5
LLH3A	L2	84	120.5	157	193.5
	L3	183	219.5	256	292.5
	L1	94	141	188	235
LLH4A	L2	109	156	203	250
	L3	219	266	313	360

Series LVH/Threaded Type Manifolds




Manifold Specifications


.H2A	LLH3A	LLH4A					
Stacking type							
Cor	mmon IN/Individual O	DUT					
	2 to 5 stations						
1/4	3/8	1/2					
1/4	3/8	1/2					
	Cor	Stacking type Common IN/Individual C 2 to 5 stations 1/4 3/8					

Note 1) Contact SMC if the manifold will be used with vacuum and flow A \rightarrow P.

How to Order Manifold Base

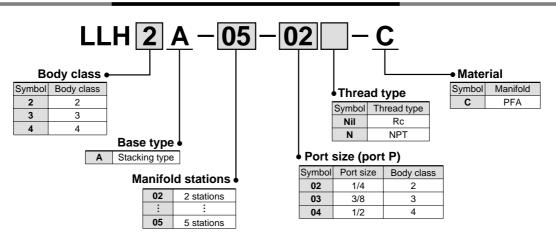

How to Order Valve

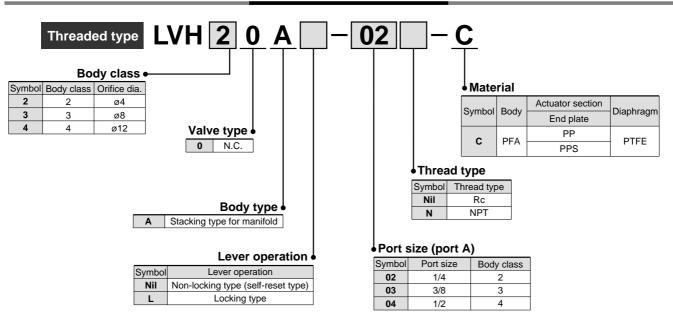

LVC

LVA

LVH

LVD

LVQ

LQ1


LVN

TL/TIL

Series LVH

How to Order Manifold Assembly (Example)

Enter the part number of the valves to be mounted together with the manifold base part number.

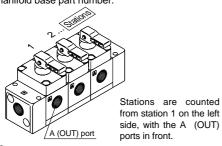

<Example>

LLH2A-03-02-C ····· 1 set

1 set Manifold base part no.

* LVH20A-02-C 2 sets 2 sets Valve part no. (stations 1 & 2) * LVH20AL-02-C 1 set

1 set Valve part no. (station 3)


Add the * symbol at the beginning of part numbers for valves, etc. to be mounted.

Enter together in order counting from station 1 on the left side, with the A (OUT) ports in front.

Threaded type manifold/Variations

Tim GaaGa ty	po mam	• . •	• aa			
	M		Model	LVH20	LVH30	LVH40
	IVIE	anifold m	aterial		PFA	
			rt size	1/4	3/8	1/2
Туре	Symbol	Valve typ	meter	ø4	ø8	ø12
Manifold	Non-locking	Locking	N.C.	0	0	0

Dimensions

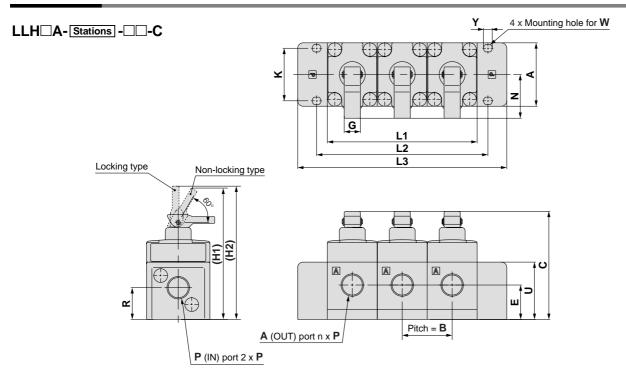

Dimensions

															(111111)
	Model	Α	В	С	Е	G	H1	H2	K	N	Р	R	C	W	Υ
L	LH2A	50	31	65	20.5	10	85.5	87	18	27	Rc1/4, NPT1/4	19	34	M4	5.5
L	LH3A	47	37	90	25.5	19	112.5	114.5	39	37	Rc3/8, NPT3/8	23.5	42.5	M5	6.5
L	LH4A	60	47	107	29	20.5	146	150	50	50	Rc1/2, NPT1/2	24	48	M6	7.5

					(mm)
Model	Station Symbol	2	3	4	5
	L1	62	93	124	155
LLH2A	L2	75	106	137	168
	L3	118	149	180	211
	L1	74	111	148	185
LLH3A	L2	90	127	164	201
	L3	118	155	192	229
	L1	94	141	188	235
LLH4A	L2	112	159	206	253
	L3	144	191	238	285

Series LV

Fittings and Special Tools

Fittings

Changing tubing sizes

Changing the tubing size

The tubing size can be changed within the same body class (body size) by replacing the nut and insert bushing.

	Tubing O.D.														
Body class	Metric sizes						Inch sizes								
Class	3	4	6	8	10	12	19	25	1/8	3/16	1/4	3/8	1/2	3/4	1
2	•	•	0	-	-	_	_	-	•	•	0	_	-	-	_
3	_	_	•	•	0	_	-	-	-	_	•	0	-	-	_
4	_	_	_	-	•	0	_	-	_	_	_	•	0	-	_
5	_	_	_	_	_	•	0	_	_	_	_	_	•	0	_
6	_	_	_	_	_	_	•	0	_	_	_	_	_	•	0


Example) Changing the tubing from an O.D. 1/4" to O.D. 1/8" in body class 2.

Part composition

	Component parts					
	Nut	Insert	Collar (insert assembly)			
O Basic size	Yes	Yes	No			
 Reducer type 	Yes	Yes	Yes			


1. Connect tubing with special tools. Refer to the pamphlet "High-Purity Fluoropolymer Fittings HYPER FITTING®/Series LQ1, 2 Work Procedure Instructions" (M-E05-

1) for connecting tubing and special tools. (Downloadable from our web site.)

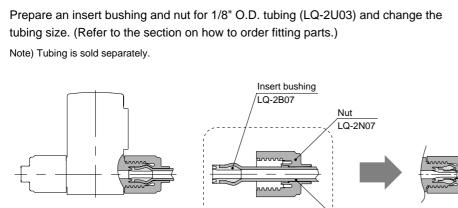


Tubing O.D. 1/4" LQ-2U07

(Basic size)

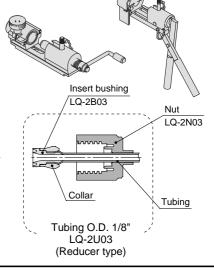

How to order fitting parts

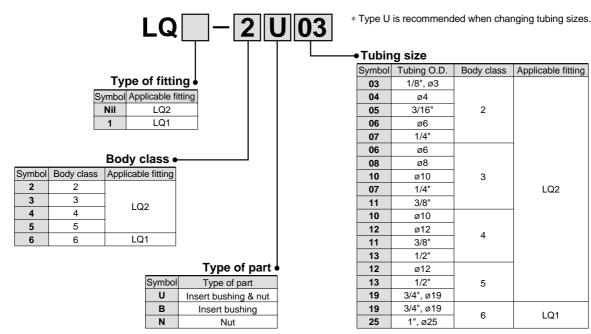

Tubing

LVC

LVH LVD

LVQ

LQ1

LVN

TL/TIL



Applicable Fluids

Material and fluid compatibility check list for air and manually operated high purity valves

Chemical		Body material			Diaphragm material		
		Fluoro resin PFA	Polyphenylene sulfide resin PPS	Fluoro resin PTFE	Nitrile rubber NBR	Ethylene propylene rubber EPR	
Acetone	0	Note 1)	O Note 1)	Note 2)	×	×	
Ammonium hydroxide	0	0	0	Note 2)	×	×	
Isobutyl alcohol	0	Note 1)	O Note 1)	Note 2)	0	0	
Isopropyl alcohol	0	Note 1)	O Note 1)	Note 2)	0	0	
Hydrochloric acid	×	0	0	0	×	×	
Ozone (dry)	0	0	0	0	×	0	
Hydrogen peroxide Concentration 5% or less, 50°C or less	×	0	0	0	×	×	
Ethyl acetate	0	O Note 1)	O Note 1)	Note 2)	×	×	
Butyl acetate	0	O Note 1)	O Note 1)	Note 2)	×	×	
Nitric acid (except fuming nitric acid) Concentration 10% or less	×	0	0	Note 2)	×	×	
DI water	0	0	0	0	×	0	
Sodium hydroxide Concentration 50% or less	0	0	0	0	×	×	
Nitrogen gas	0	0	0	0	0	0	
Super pure water	×	0	0	0	×	×	
Toluene	0	O Note 1)	O Note 1)	Note 2)	×	×	
Hydrofluoric acid	×	0	×	Note 2)	×	×	
Sulfuric acid (except fuming sulfuric acid)	×	0	×	Note 2)	×	×	
Phosphoric acid Concentration 80% or less	×	0	×	0	×	×	

The material and fluid compatibility check list provides reference values as a guide only.

Note 1) Use a stainless steel body, as static electricity may be generated.

Note 2) Use caution as permeation may occur and any permeated fluid could effect other

Table symbols : Can be used

: Can be used in certain conditions

 \times : Cannot be used

- Compatibility is indicated for fluid temperatures of 100°C or less.
- The material and fluid compatibility check list provides reference values as a guide only, therefore we do not guarantee the application to our product.
- The data above is based on the information presented by the material manufacturers.
- SMC is not responsible for its accuracy and any damage happened because of this data



Series LV High Purity Chemical Valve Precautions 1

Be sure to read before handling. Refer to front matters 42 and 43 for Safety Instructions.

Design & Selection

⚠ Warning

1. Confirm the specifications.

Give careful consideration to operating conditions such as the application, fluid and environment, and use within the operating ranges specified in this catalog.

2. Fluids

Operate after confirming the compatibility of the product's component materials with fluids, using the check list on features page 490. Contact SMC regarding fluids other than those in the check list.

Operate within the indicated fluid temperature range.

3. Maintenance space

Ensure the necessary space for maintenance and inspections.

4. Fluid pressure range

Keep the supplied fluid pressure within the operating pressure range shown in the catalog.

5. Ambient environment

Operate within the ambient operating temperature range. After confirming the compatibility of the product's component materials with the ambient environment, operate so that fluid does not adhere to the product's exterior surfaces.

6. Liquid seals

When circulating fluid

Provide a relief valve in the system so that fluid does not get into the liquid seal circuit.

7. Countermeasures for static electricity

Since static electricity may be generated depending on the fluid being used, implement suitable countermeasures.

Mounting

Marning

1. If air leakage increases or equipment does not operate properly, stop operation.

After mounting, perform suitable function and leak tests to confirm that the mounting is correct.

2. Instruction manual

Mount and operate the product after reading the manual carefully and understanding its contents. Also keep the manual where it can be referred to as necessary.

Piping

⚠ Caution

1. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe.

LVC

LVH

LVD

LVQ

|TL/TIL

LQ3

Install piping so that it does not apply pulling, pressing, bending or other forces on the valve body.

2. Use the tightening torques shown below when making connections to the pilot port.

Operating port tightening torque

Operating port	Torque (N⋅m)
M5	1/6 turn with a tightening tool after first tightening by hand
Rc, NPT 1/8	0.8 to 1.0

3. Use of metal fittings

Do not use metal fittings for piping on taper threads made of resin, as this may cause damage to the threads.

LVA PPS body ported tightening torque for fittings.

Size	Breaking torque (N·m)	Tightening torque (N⋅m)	Guideline for tightening torque (Number of turns)		
LVA20	2 to 3	0.5 to 1	2 to 3 turns		
LVA30	6 to 8	2 to 3	3 to 4 turns		
LVA40	11 to 14	5 to 7	3 to 4 turns		
LVA50	18 to 20	8 to 10	3 to 4 turns		

* Guideline for tightening torque

Number of turns when the fitting is screwed into the body with 2 to 3 windings of sealant tape applied to threaded portion of the piping.

The value may differ for types other than sealant type.


4. Use pilot ports and sensor (breathing) ports as indicated below.

	PA Port	PB Port	Sensor (breathing) port
N.C.	Pressure	Breathing	Breathing
N.O.	Breathing	Pressure	Breathing
Double acting	Pressure	Pressure	Breathing

In the case of N.C. and N.O. types, the port which does not receive operating pressure is released to atmosphere. When intake and exhaust directly from the valve is not desired due to problems with the ambient environment or scattering of dust, etc., install piping and perform intake and exhaust at a location which does not present a problem.

5. Connect tubing with special tools.

Refer to the pamphlet "High-Purity Fluoropolymer Fittings HY-PER FITTING®/Series LQ1, 2 Work Procedure Instructions" (M-E05-1) for connecting tubing and special tools. (Downloadable from our web site.)

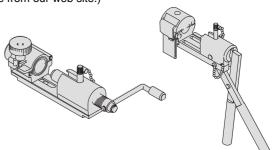



Series LV High Purity Chemical Valve Precautions 2

Be sure to read before handling. Refer to front matters 42 and 43 for Safety Instructions.

Operating Air Supply

⚠ Warning

1. Use clean air.

Do not use compressed air which includes chemicals, synthetic oils containing organic solvents, salt, or corrosive gases, etc., as this may cause damage or malfunction.

Operating Environment

- 1. Do not use in a location having an explosive atmosphere.
- 2. Do not operate in locations where vibration or impact occurs.
- 3. Do not use in locations where radiated heat will be received from nearby heat sources.

Maintenance

⚠ Warning

- - Incorrect handling can cause damage or malfunction of machinery and equipment, etc.
- Before removing equipment or compressed air supply/exhaust devices, shut off the air and power supplies, and exhaust compressed air from the system.
 - Further, when restarting equipment after remounting or replacement, first confirm safety and then check the equipment for normal operation.
- 3. Perform work after removing residual chemicals and carefully replacing them with DI water or air, etc.
- 4. Do not disassemble the product. Products which have been disassembled cannot be guaranteed. If disassembly is necessary, contact SMC.
- 5. In order to obtain optimum performance from valves, perform periodic inspections to confirm that there are no leaks from valves or fittings, etc.

∧ Caution

1. Removal of drainage

Flush drainage from filters regularly.

Precautions on Usage

⚠ Warning

1. Operate within the ranges of the maximum operating pressure and back pressure.

1. When the diaphragm is made of PTFE

Please note that when the product is shipped from the factory, gases such as N_2 and air may leak from the valve at a rate of 1cm^3 /min (when pressurized).

- 2. When operated at a very low flow rate, the series LV with flow rate adjustment may vibrate, etc. depending on the operating conditions. Therefore, operate it after careful examination of the flow rate, pressure and piping conditions.
- 3. In the series LV□, water hammering may occur depending on the fluid pressure conditions. In most cases, improvement is possible by adjusting the pilot pressure with a speed controller, etc., but the flow rate, pressure and piping conditions should be reviewed.
- 4. To adjust the flow rate for the series LV□ with flow rate adjustment, open gradually starting from the fully closed condition.
 - Opening is accomplished by turning the adjustment knob counter clockwise. Additionally, do not apply any unreasonable force to the adjustment knob when nearing a fully opened or closed state. This may result in deformation of the orifice sheet surface or damage to the threaded part of the adjustment knob. It is in the fully closed condition when the product is shipped from the factory.
- 5. After a long period of nonuse, perform a test run before beginning regular operation.
- 6. Since the LVC is packaged in a clean room use sufficient care in handling when opened.
- 7. Take extra care when setting the operating direction and when handling the lever of series LVH.