
Manifold Regulator

ARM1000/2000 Series

■ 4 connection methods

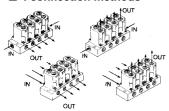

- Small size pressure gauge ø15
- Backflow function available on the standard model

■ Space-saving







ARM2000-4A2-01G

Symbol Common IN	N	Individual IN							
IN 1	1								
*	2 OUT	IN 1 2 OUT	Γ						
	2 OUT	IN 1 2 OUT	Γ						

Note) A standard model is equipped with a backflow function. A main valve opens when the inlet pressure is released, and then an outlet pressure backflows into the inlet side.


Standard Specifications

Fluid	Air					
Proof pressure	1.2 MPa					
Maximum operating pressure	0.8 MPa					
Dogulating processes range	Standard: 0.05 to 0.7 MPa					
Regulating pressure range	0.2 MPa setting 0.05 to 0.2 MPa					
Ambient and fluid temperature	−5 to 60°C (No freezing)					
Fluid	Air					
Cracking pressure (Valve)	0.02 MPa					
Construction	Relieving type					

Port Size/Weight

Model	Dining	Port	size	Weight (g)					
Model	Piping	IN side	OUT side	Total weight (n: stations)	Regulator (Except manifold)				
ARM1000	Common IN	1/8	1/8	(80 x n) + 23					
ARWIOUU	Individual IN	1/8	1/8	(79 x n) + 25	57				
4 D140000	Common IN	1/4	1/8	(188 x n) + 43					
ARM2000	Individual IN	1/8	1/8	(187 x n) + 45	136				

How to Order

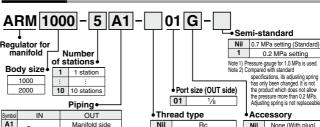


A1	Common	Manifold side						
A2	Common	Body side						
B1	Individual	Manifold side						
B2	individual	Body side						
Vote		of A1 and B1, a						

pressure gauge or a plug is mounted on the body side, while in case of A2 and B2, on the manifold side.

Note 2) When mounting a pressure gauge on the body side, its front faces the adjusting screw.

Option / Pressure Gauge: G15-10-01

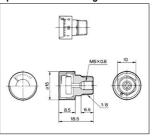

 Precautions—When drain or oil, etc. gets into the gauge, an error may occur for pressure


| Nil | Rc | Nil | None (With plug) | Rote 3) When ordering single unit

Descri	otion	ARM1000	ARM2000			
Regulator r	nain body	ARM1000A	ARM2000A			
Manifold	Common IN	13612-□	13622-□			
	Individual IN	13613-□	13623-□			

 "*" in manifold part no. repersents the number of manifold stations of regulator.

Note 4) When a regulator is not mounted on the manifold, use the following blank plate assembly (with mounting screws and O-ring) For ARM1000: Part no. 136114A For ARM2000: Part no. 136214A

How to Order

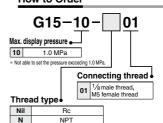

Note) Use caution not to tighten excessively when mounting a pressure gauge, otherwise it may result in a breakdown. For sealing, use a sealant tape. **ARJ**

AR425

ARX
AMR
ARM

IR□-A

IR IRV

VEX

SRH

SRP

SRF

ITV

IC

ITVH

ITVX

PVQ

VY1


VBA

VBAT

AP100

ARM1000/2000 Series

Construction (Individual IN)

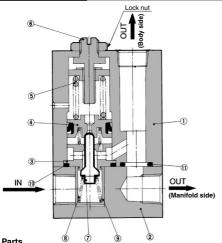

Component Parts

No.	Description	Material	Note				
1	Body	Aluminum die-casted	Chromate treated				
2	Manifold	Aluminum alloy	Chromate treated				
3	Valve guide	Brass					
4	Piston	Brass					
5	Adjusting spring	Steel wire	Zinc chromated				
6	Adjusting screw	Steel	Electroless nickel plated				

Replacement Parts

No.	Description	Material	Part no.						
INO.	Description	ivialeriai	ARM1000	ARM2000					
7	Valve	Brass, HNBR	134819-30#1	13626-30#1					
8	Valve spring	Stainless steel	13615	13625					
9	Valve guide	Polyacetal	13614	13624					
10	O-ring	NBR	KA00347	KA00361					
-10		INDIN	16.5 x 13.5 x 1.5	23 x 20 x 1.5					
11	0	NBR	KA00476	KA00087					
-11	O-ring	INBR	JIS B 2401 P7	JIS B 2401 P8					

Setting

1. Make sure to check the inlet pressure before setting the outlet pressure. Turning the pressure adjustment knob clockwise increases the outlet pressure and turing it counterclockwise decreases the pressure. (To set the pressure, do so in the direction of pressure increase.) 2. Set the outlet pressure to 85% or less of the inlet pressure

∕ Precautions

Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 387 to 391 for Precautions on every series.

Mounting/Adjustment

⚠ Warning

1. In the case of the common IN type, supply pressure from the two IN ports from both ends. Failure to observe this procedure could result in an excessive pressure drop.


- 1. Release the lock to adjust the pressure. After the adjustment, engage the lock. Failure to observe this procedure could damage the knob or cause the outlet pressure to fluctuate. <Lock operating method>
 - Loosen the lock nut to unlock it, and tighten it to lock it.
- 2. This product can be used as a regulator with a check valve by installing it between solenoid valve and actuator.

Maintenance

⚠ Warning


1. Make sure to perform a periodic inspection of the pressure gauge when it is used by installing it between a solenoid valve and an actuator, etc. Sudden pressure changes could happen and the durability of the product could be reduced. Using an electronic type pressure gauge is recommended, depending on the situation.


Flow Rate Characteristics (Representative value) ARM1000 Inlet pressure: 0.7 MPa 0.6 bressure (**Dutlet** 0.1 Flow rate (L/min (ANR))

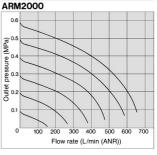

Pressure Characteristics (Representative value)

(Initial setting) Inlet pressure: 0.7 MPa Outlet pressure: 0.2 MPa ARM1000 Flow rate: 10 L/min (ANR)

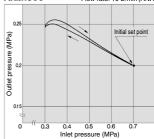


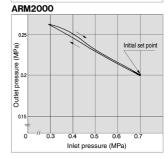

752

Manifold Regulator ARM1000/2000 Series

Dimensions

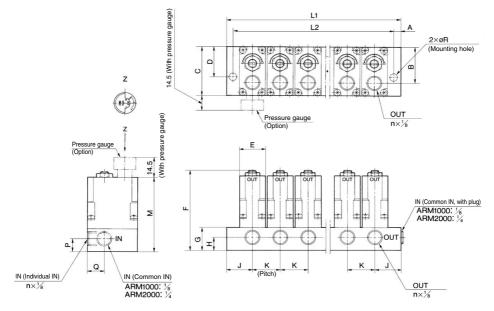

Dimensions

Model Symbol	Α	В	С	D	Е	F	G	Н	J	K	M	Р	Q	R
ARM1000	4.5	25	34	21	18	56	16	9	18	19	52	9	11.5	4.8
ARM2000	4.5	34.5	43	28	27	70	20	11.5	24	28	66	11.5	16.5	4.8

Dimensions by the Number of Stations

	Model	Symbol	Manifold stations (n)										
			1	2	3	4	5	6	7	8	9	10	
	ARM1000	L1	36	55	74	93	112	131	150	169	188	207	
		L2	27	46	65	84	103	122	141	160	179	198	
	ARM2000	L1	48	76	104	132	160	188	216	244	272	300	
	Anivi2000	L2	39	67	95	123	151	179	207	235	263	291	

ARJ AR425

AR425 to 935

AMR

ARM ARP

IR□-A

IR IRV

VEX

SRH SRP

SRF ITV

IC

ITVH

PVQ VY1

VBA VBAT AP100