

# Compact / Lightweight 2 Port Solenoid Valve

VDW30/40-XF Series

### For Air/Water

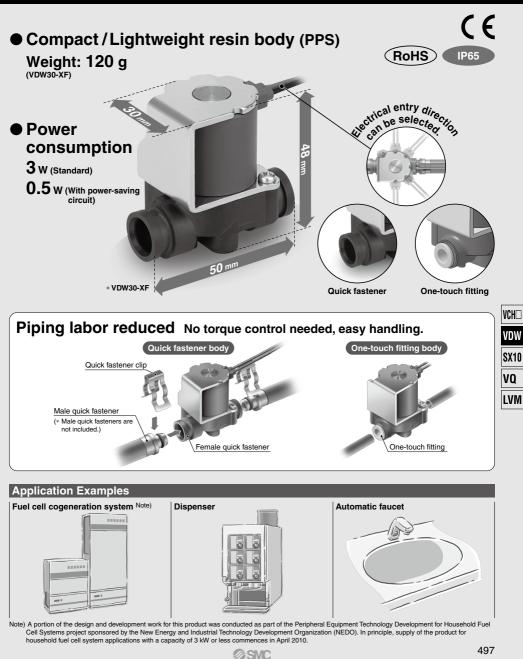

## Compact / Lightweight 2 Port Solenoid Valve VDW30/40-XF Series ( E RoHS

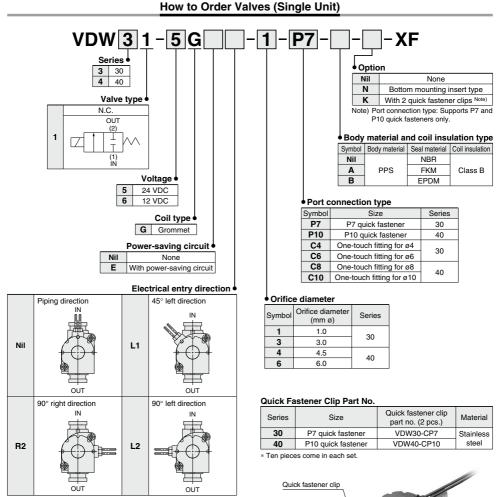

Note) Cannot be reassembled in different combinations.

#### *∕*SMC

Male quick fastener (\* Male quick fasteners ar not included.)

Female guick fastener

Compact / Lightweight 2 Port Solenoid Valve For Air/Water VDW30/40-XF Series



	Valve construction		Direct operated poppet		
	Valve type		Normally closed (N.C.)		
	Fluid	Quick fastener type	Water (1 to 50°C), Air, Heated water (80°C) Note 3), Low vacuum (133 Pa-abs)		
		One-touch fitting type Note 4)	Air, Water (1 to 40°C) Note 5), Low vacuum (133 Pa-abs)		
	Withstand pressure		1.0 MPa		
suo	Ambient temperature		-10 to 50°C		
ati	Fluid	temperature	1 to 50°C (No freezing)		
sific	Ambie	ent humidity	RH85%		
Valve specifications	Enviro	onment	Location without corrosive or explosive gases		
re s	Valve	leakage Note 1)	0.1 cm <sup>3</sup> /min or less (With water pressure), 1 cm <sup>3</sup> /min or less (Air)		
/alv	Exterior leakage		0.1 cm3/min or less (With water pressure), 1 cm3/min or less (Air)		
-	Mounting orientation		Upward coil		
	Vibration/Impact Note 2)		30 m/s <sup>2</sup> / 90 m/s <sup>2</sup>		
	Port size		P7, P10 (Quick fastener)		
			C4, C6, C8, C10 (One-touch fitting)		
	Orifice diameter		ø1, ø3, ø4.5, ø6		
	Rated	voltage	24 VDC, 12 VDC		
	Allowa	able voltage fluctuation	±10% of rated voltage		
s	Coil in	sulation type	Class B		
Coil specifications	Insula	tion resistance	500 VDC, 10 MΩ or more		
fica	Voltage limit		1800 VAC, 1 sec., 3 mA or less		
eci	Noise tolerance Note 3)		Simulation noise: 500 Vp-p		
g			(Based on 1 $\mu$ sec. pulse width, 50 ±10 Hz frequency noise simulation)		
oi			Fast transient noise: IEC61000-4-4: 1 kV		
C	Power	consumption	VDW30: 3 W (With 0.5 W power-saving circuit)		
	rower consumption		VDW40: 6.5 W (With 1 W power-saving circuit)		
	Enclosure		IP65 Note 6)		
	a 1) The amount of leakage from the OUT part when the set pressure is applied to the IN part				

Note 1) The amount of leakage from the OUT port when the set pressure is applied to the IN port. Note 2) Vibration resistance ..... No malfunction when tested with one sweep of 10 to 150 Hz in the axial direction

and at a right angle to the armature, in both energized and deenergized states. Impact resistance ...... No malfunction when tested with a drop tester in the axial direction and at a right

angle to the main armature, one time each in energized and deenergized states.

Note 3) Products with power-saving circuit only.

Note 4) When using One-touch fittings, make sure to employ tubing that is compatible with SMC fittings (KQ2 series).

Note 5) When using One-touch fittings with water, care must be taken when handling tubing and piping conditions to prevent water from leaking when the tubes are inserted. Soft nylon tubing cannot be used with water.

Note 6) When using the product in a place which requires water resistance, please contact SMC.

#### Characteristic Specifications

Model	Port connection Orifice d (mm ø)		Max. operating pressure differential (MPa) Note 1)	Operating Pressure range	Weight (kg)
	type	(11111.0)	Pressure port 1	(MPa) Note 2) Note 3)	(19)
VDW30	P7	1.0	0.6		
VDW30	C4, C6	C4, C6 3.0	0.1		0.1
			0.1 (With power-saving circuit)	-0.1 to 0.6	
VDW40	P10	4.5	0.05 (Without power-saving circuit)	-0.1 10 0.6	0.23
VDW40	C8, C10		0.05 (With power-saving circuit)		0.23
		6.0	0.02 (Without power-saving circuit)		

Note 1) The maximum operating pressure differential changes depending on the flow direction of the fluid. Refer to page 503 for details.

Note 2) For low vacuum specifications, the operating pressure range is 1 Torr (1.33 x 10<sup>2</sup> Pa) to 0.6 MPa. Please consult with SMC if using below 1 Torr (1.33 x 10<sup>2</sup> Pa).

Some leakage is permitted, so avoid use in situations where a vacuum must be maintained, such as in leak testing.

Note 3) The surge pressure must be under the maximum operating pressure.

#### **Flow Rate Characteristics**

	Port	Orifice dia.	Water		Air		
Model	connection type	(mm ø) 1→2 (IN		N→N.C.) 1→2 (IN→N.C.)		1	
		N.C.	Kv	Cv converted	C [dm3/(s·bar)]	b	Cv
VDW30	P7, C4, C6	1.0	0.03	0.04	0.14	0.4	0.09
VDW30		3.0	0.24	0.28	1.0	0.52	0.3
VDW40	P10, C8, C10	4.5	0.54	0.61	2.3	0.46	0.61
VD4V40		6.0	0.86	1.0	4.0	0.4	1.1

VDW SX10 VQ LVM


VCHD

**SMC** 

499

### VDW30/40-XF Series

#### Construction

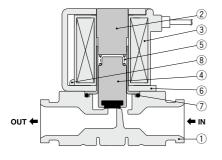



**One-touch fitting** 

#### **Component Parts Materials**


		41011410
No.	Description	Material
1	Body	PPS
2	Tube assembly	Stainless steel
3	Coil assembly	-
4	Armature assembly	Stainless steel, NBR, FKM, EPDM
5	Return spring	Stainless steel
6	Flame	Iron
7	O-ring	NBR, FKM, EPDM
8	Round head combination screw	Iron
9	Cassette	POM, Stainless steel
10	Seal	NBR, FKM, EPDM

#### ▲ Caution

Do not disassemble.


### Dimensions


#### VDW30-DGDD-D-P7 / P7 Quick Fastener

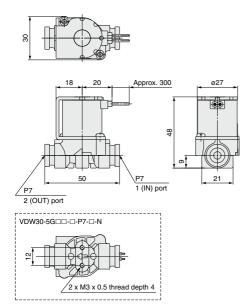


#### **Male Quick Fastener Dimensions**

* Male quick fasteners are not	Male Quick Fastener Dimensions Table			
included. Since they are not available as commercial products, please	Port size (Quick fastener)	P7	P10	
contact SMC when you cannot	Α	ø7_0_05	ø10_0.05	
prepare male quick fasteners.	В	Ø9.9±0.05	Ø12.85±0.05	
2.5±0.1 9 or less	С	ø15	ø20	
1.6 or more	D	2.5 <sup>+0.25</sup>	2.5 <sup>+0.25</sup>	
D	E	ø13	ø17	
O-ring 2 or more	O-ring dimentions* (Nominal no.)	P7	P10	
비 < [ 0	Applicable clip	Clip for P7	Clip for P10	
Rz 3.2 or less for sheet surface	* Conforms to for O-rings for		nensional standa plications.	ard



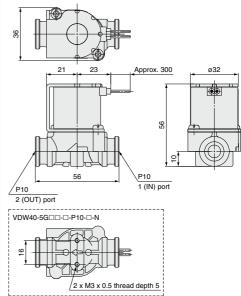


#### **Quick Fastener Clip Dimensions**



Compact / Lightweight 2 Port Solenoid Valve For Air/Water VDW30/40-XF Series

#### Dimensions

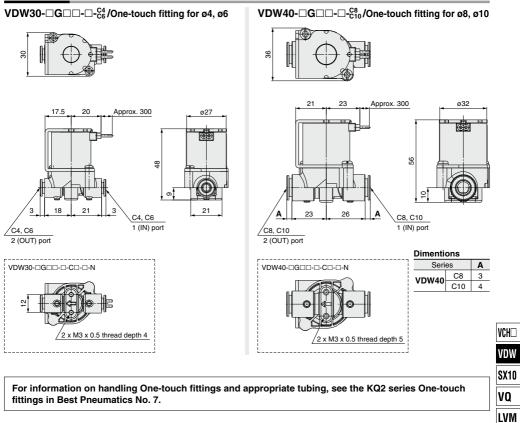



### VDW30/40 Series **Specific Product Precautions 1**

Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions, pages 17 to 19 for Fluids Control 2 Port Valves Precautions, and pages 467 to 470 for VDW Series/Specific Product Precautions.

Selection

### ▲Warning

#### 1. Fluid guality

#### In the case of water

The use of a fluid which contains foreign matter can cause problems such as malfunction and seal failure by promoting wear of the valve seat and armature, and by sticking to the sliding parts of the armature, etc. Install a suitable filter (strainer) immediately upstream from the valve. In general, a mesh of about 50 to 100 is a guideline for the filter.

When using ordinary tap water, scaling and sludge from substances in hard water such as calcium and magnesium can cause solenoid valves to malfunction. It is therefore necessary to install a water softener to remove such substances and a filter (strainer) immediately before the solenoid valve

#### In the case of air


Please use ordinary compressed air where a filter of 40 µm or less is provided on the inlet side piping. (Except dry air)

### ▲ Caution

#### 1. Leakage voltage

When the solenoid valve is operated using the controller, etc., the leakage voltage should be the product allowable leakage voltage or less.

Particularly when using a resistor in parallel with a switching element and using a C-R element (surge voltage suppressor) to protect the switching element, take note that leakage current will flow through the resistor, C-R element, etc., creating a possible danger that the valve may not turn off.



- 1) Take steps to ensure that there are no problems such as abnormal voltage drops or insufficient capacity associated with the signal power supply used to drive the solenoid valve.
- 2) Make sure the leakage current flowing through the solenoid valve when power is not being supplied is 0.1 mA or less. If there the leakage current is larger than this, take appropriate measures such as connecting a bleeder resister (models with power-saving circuit).
- 3) An attenuation function is provided to reduce voltage surges produced by the solenoid valve. However, the controller should be equipped with protection against voltage surges as some residual surge voltage may still reach external components.

#### DC coil

2% or less of rated voltage

#### 2. Low temperature operation

- 1) The valves can be used up to an ambient temperature of -10°C, however take measures to prevent solidification of impurities or freezing, etc.
- 2) When using valves for water application in cold climates, first stop the water supply/discharge of the pump, etc., and then take measures to prevent freezing such as draining water in pipe. When heating by steam, be careful not to expose the coil portion to steam. Also, please take measures to prevent freezing such as heating the body.

Mounting

### ▲Warning

1. When the valve is secured using an insert nut (part number suffix "-N"), handle with care during installation because the application of excessive stress to the body could damage it (appropriate tightening torque: 0.8 to 1.0 N·m).

Pipina

### 🗥 Warning

1. During use, deterioration of the tubing or damage to the fittings could cause tubes to come loose from their fittings and thrash about.

To prevent uncontrolled tube movement, install protective covers or fasten tubes securely in place.


### A Caution

#### 1. Connection of piping to products

- · When connecting piping to a product, refer to its operation manual to avoid mistakes regarding the supply port, etc.
- · Do not apply external force to the coil when holding it to connect piping, as the tube may deform.
- · When attaching fittings to a solenoid valve, do not use fittings that do not conform to the guick fastener standard.
- · Handle with care when attaching fittings because the application of excessive stress to the quick fastener portion could damage the body.

#### **Recommended Piping Conditions**

1. When connecting tubes using One-touch fittings, provide some spare tube length as shown in Fig. 1. recommended piping configuration.



Also, do not apply external force to the fittings when binding tubes with bands, etc. (see Fig. 2.)

				Unit: mm
Tube size	Mounting pitch A			Straight
Tube Size	Nylon tube	Soft nylon tube	Polyurethane tube	portion length
ø4	56 or more	30 or more	26 or more	20 or more
ø6	84 or more	39 or more	39 or more	30 or more
ø8	112 or more	58 or more	52 or more	40 or more
ø10	140 or more	70 or more	69 or more	50 or more




Fig. 2 Binding tubes with bands

502

@SMC



### VDW30/40 Series Specific Product Precautions 2


Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions, pages 17 to 19 for Fluids Control 2 Port Valves Precautions, and pages 467 to 470 for VDW Series/Specific Product Precautions.

#### **Electrical Connections**

### **∆**Caution

 Solenoid valves with power-saving circuits (coil part number "-5GE") have polarity, so follow the wiring diagram below when making connections. Standard coils have no polarity.

The solenoid valve will not switch properly if the polarity is reversed.



#### 2. Apply the correct voltage.

Incorrect voltage could cause shorting of the power-saving circuit, coil burnout, or valve malfunction.

- 3. Do not apply a tension load of 30 N or more to the solenoid valve lead wires.
- 4. Apply voltage which is within  $\pm 10\%$  of the rated voltage.

Also, do not use excessive power supply voltage or superimpose electrical noise such as ripple voltage on the power supply voltage as these could harm the valve.

5. When connecting an induction load such as a circuit protector to the solenoid valve connection, take measures to ensure that the current to the solenoid valve is not reduced too much.

Maintenance

### **A**Warning

- 1. Do not disassemble solenoid valves.
- Disassembling a solenoid valve will void its warranty.

#### 2. Low frequency operation

Switch valves at least once every 30 days to prevent malfunction. Also, in order to use it under the optimum state, conduct a regular inspection once a half year.

### **≜**Caution

- Store indoors in a location away from direct sunlight and where the following conditions are maintained.
  - Temperature: -10 to 50°C
  - Relative humidity: 20% to 85%RH (No condensation)
  - Liquid rings may not be used.

#### 2. Storage

When not using for a long time (more than approx. one month) after use with liquid, thoroughly remove all moisture to prevent rust and deterioration of rubber materials, etc.

#### Fluid Flow Direction

### ▲Caution

The maximum operating pressure differential differs depending on the flow direction of the fluid. If the pressure differential at each port exceeds the values in the table below, valve leakage may occur.



#### 2 Port Valve

Model	Orifice diameter	Max. operating pressure differential (MPa)	
	(mm ø)	Pressure port 1	
VDW30	1.0	0.6	
VDW30	3.0	0.1	
	4.5	0.1 (With power-saving circuit)	
VDW40	4.5	0.05 (Without power-saving circuit)	
VDW40	6.0	0.05 (With power-saving circuit)	
		0.02 (Without power-saving circuit)	

#### **One-touch Fittings**

### ▲Caution

For information on handling One-touch fittings and appropriate tubing, see the KQ2 series One-touch fittings in Best Pneumatics No. 7.

VCHL
VDW
SX10
VQ
LVM

**SMC**