
Circulating Fluid Temperature Controller Thermo-chiller

HRSH Series


Inverter Type

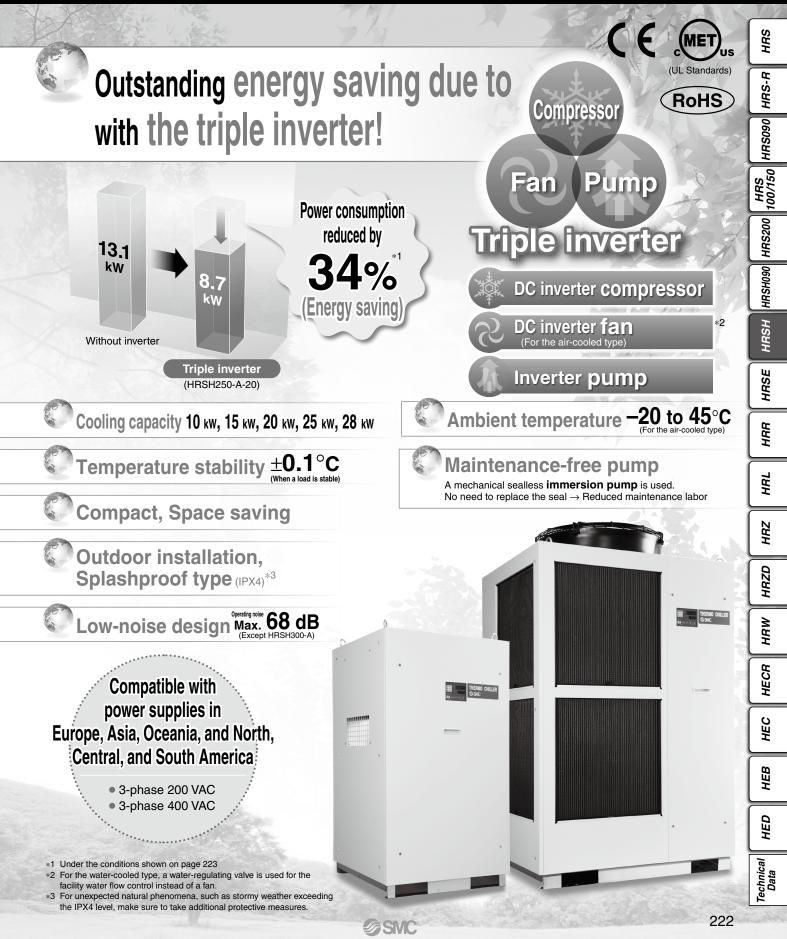


Triple inverter

The inverter respectively controls the number of motor rotations of the compressor, fan and pump depending on the load from the user's equipment.

DC inverter

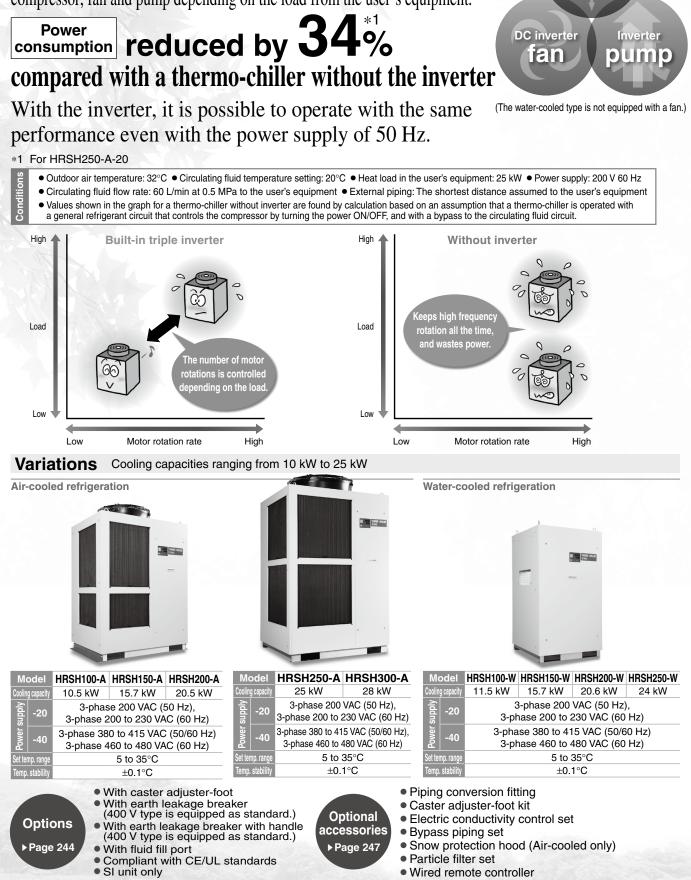

Circulating Fluid Temperature Controller
Thermo-chiller Inverter Type HRSH Series

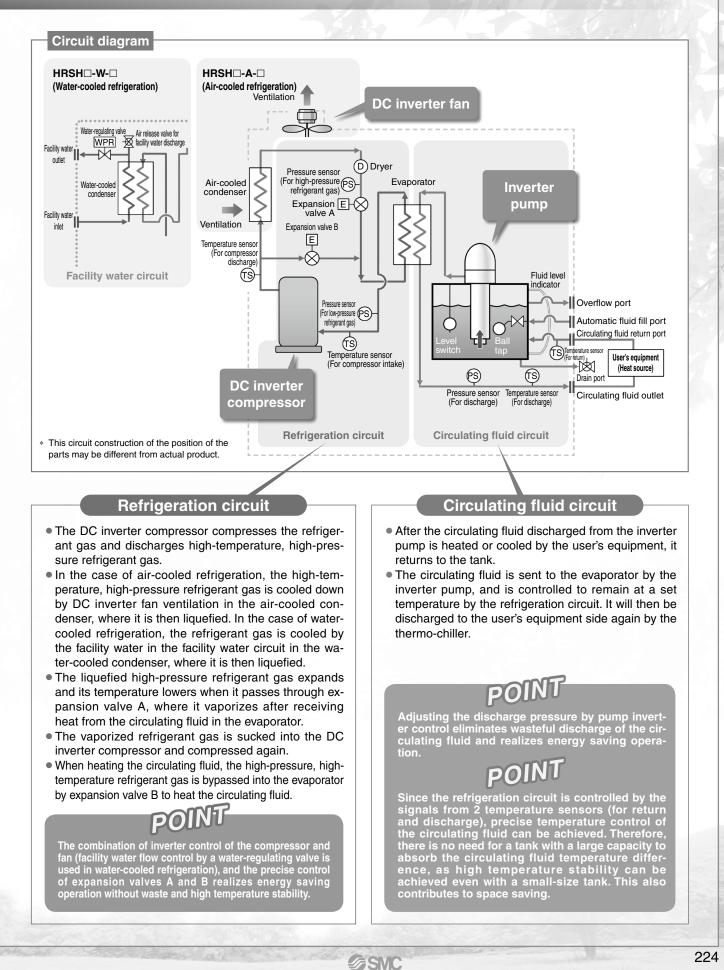


HRS

Circulating fluid pressure adjustable


Inverter pump

Discharge pressure of the circulating fluid can be set with the operation panel. The inverter pump automatically

controls the discharge pressure to the set pressure without adjusting the bypass piping under various piping conditions. Power consumption can be reduced by this control. (Operation to the set pump operating frequency is also possible.)

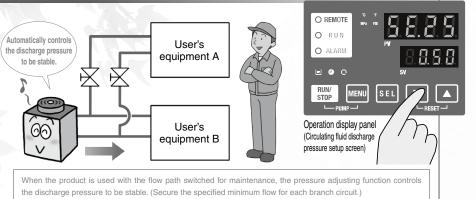


* For HRSH250-A-20

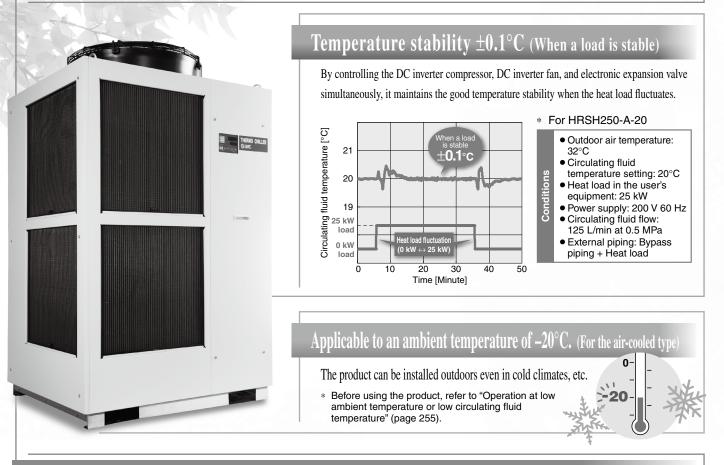


Circulating fluid can be heated without a heater.

As the heating method uses discharged heat, a heater is unnecessary.

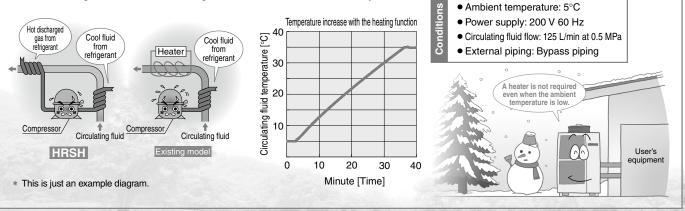


5SMC

Circulating Fluid Temperature Controller Thermo-chiller Inverter Type HRSH Series

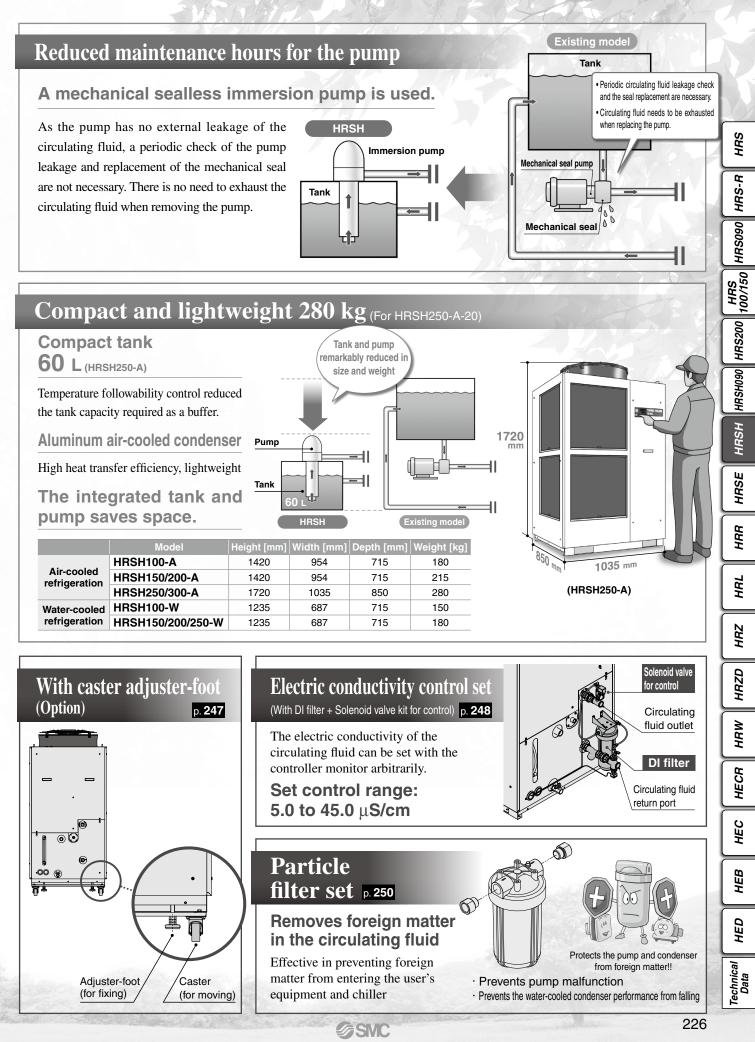


Circulating Fluid Temperature Controller Thermo-chiller Inverter Type HRSH Series

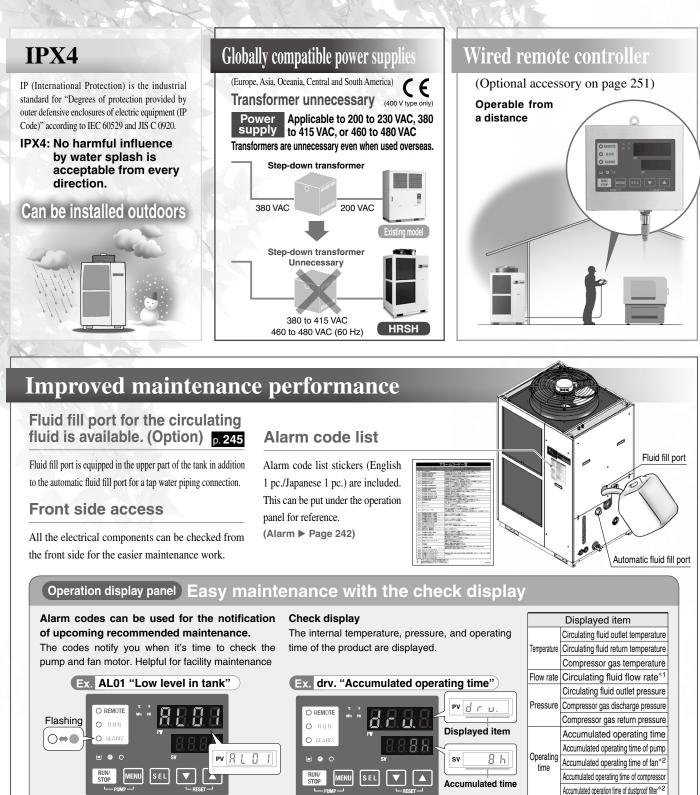

*1 This is not measurement value. Use it for reference. *2 These are displayed only for air-cooled refrigeration.

Convenient functions Details > Page 242) Timer function, Anti-freezing function, Power failure auto-restart function, Warming-up function, Key-lock function, etc.

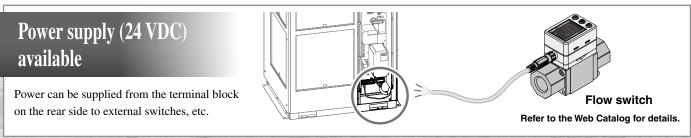

227

HRS

HRS-R

HRS 100/150 HRS090

HRS200

HRSH090

HSHH

HRSE

HRR

HRL

HRZ

HRZD

HRW

HECR

HEC


HEB

HED

Technical Data

Communication function

Serial communication (RS232C/RS485) and contact I/Os (2 inputs and 3 outputs) are equipped as standard. This allows for communication with the user's equipment and system construction, depending on the application. A 24 VDC output can be also provided and is available for use with flow switches (SMC's PF3W, etc.).

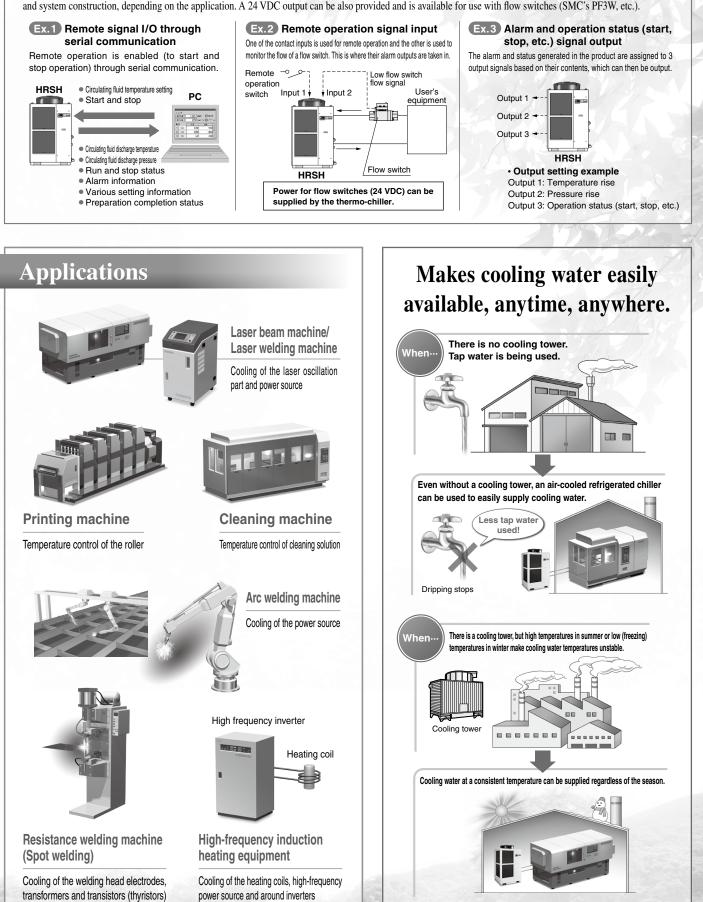

228

Circulating Fluid Temperature Controller Thermo-chiller Inverter Type HRSH Series

Global Supply Network -

SMC has a comprehensive network in the global market.

We now have a presence of more than 560 branch offices and distributors in 83 countries and regions worldwide, such as Asia, Oceania, North/ Central/South America, and Europe. With this global network, we are able to provide a global supply of our substantial range of products and highquality customer service. We also provide full support to local factories, foreign manufacturing companies, and Japanese companies in each country.






SMC Thermo-chiller Variations

Lots of variations are available according to the users' requirements.

Series		Temperature stability	Set temperature	ure Cooling capacity [kW]							Environment	International					
56	Series		range [°C]	1.2	1.8	2.4	3	5	6	9	10	15	20	25	28	Environment	standards
	HRSE Basic type	±2.0	10 to 30	•	•	•										Indoor use	C € (Only 230 VAC type)
	HRS Standard type	±0.1	5 to 40	•	•	•	•	•	•							Indoor use	C € ,@, (Only 60 Hz)
	HRS090 Standard type	±0.5	5 to 35							•						Indoor use	C € (400 V as standard)
	HRS100/150 Standard type	±1.0	5 to 35								•	•				Outdoor installation IPX4	C € (400 V as standard)
	HRSH090 Inverter type	±0.1	5 to 40							•						Indoor use	C E (400 V as standard, 200 V as an option) (Only 200 V as an option)
	HRSH Inverter type	±0.1	5 to 35								•	•	•	•	•	Outdoor installation IPX4	C € (400 V as standard, 200 V as an option) رهاری (Only 200 V as an option. See page 246.)



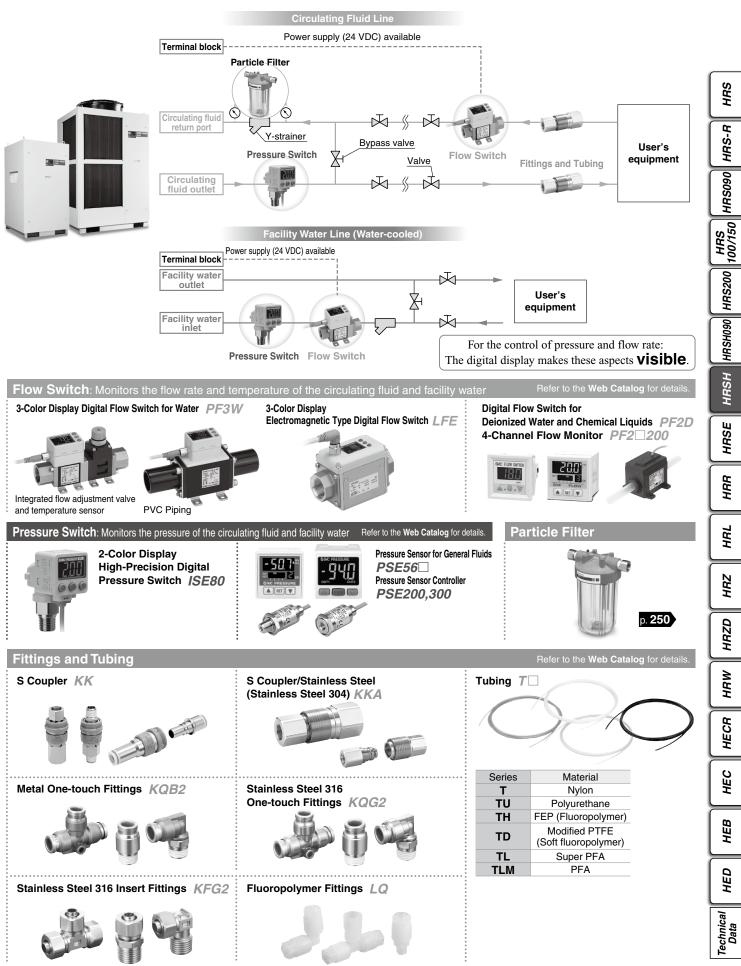

Courtesy of Steven Engineering, Inc - (800) 258-9200 - sales@steveneng.com - www.stevenengineering.com

230

CONTENTS

HRSH Series Inverter Type



Thermo-chiller HRSH Series

How to Order/Specifications

Air-cooled 200 V	Page 233
Water-cooled 200 V	Page 234
Air-cooled 400 V	Page 235
Water-cooled 400 V	Page 236
Cooling Capacity	Page 237
Pump Capacity	Page 238
Dimensions	Page 239
Recommended External Piping Flow	Page 241
Cable Specifications	Page 241
Operation Display Panel	Page 242
List of Function	Page 242
Alarm ·····	Page 242
Communication Functions	Page 243

Options

With Caster Adjuster-foot Page 244
With Earth Leakage Breaker Page 244
With Earth Leakage Breaker with Handle Page 245
With Fluid Fill Port Page 245
Compliant with CE/UL Standards Page 246
SI Unit Only Page 246


Optional Accessories

① Piping Conversion Fitting Page 247
2 Caster Adjuster-foot Kit ····· Page 247
③ Electric Conductivity Control Set Page 248
④ Bypass Piping Set ······ Page 248
5 Snow Protection Hood Page 249
6 Particle Filter Set Page 250
⑦Wired Remote Controller Page 251

Cooling Capacity Calculation

Required Cooling Capacity Calculation Page 252
Precautions on Cooling Capacity Calculation Page 253
Circulating Fluid Typical Physical Property Values ··· Page 253

Specific Product Precautions Page 254

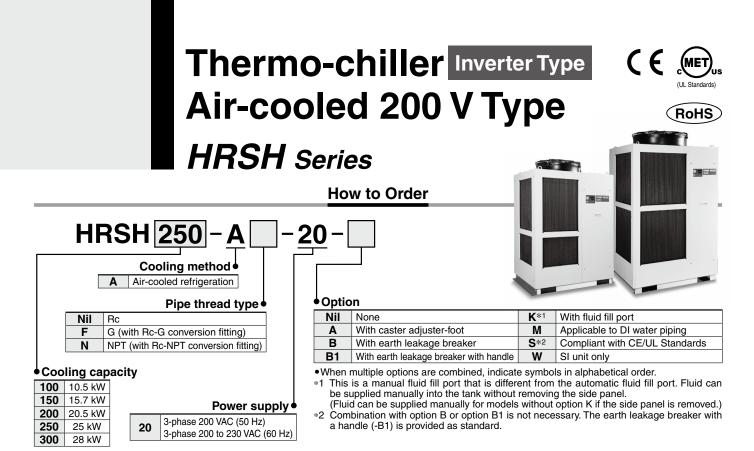

Specifications

					HRSH100-A -20-	HRSH150-A -20-	HRSH200-A -20-	HRSH250-A -20-	HRSH300-A -20-			
Cooling method					Air-cooled refrigeration							
Refrigerant						R410A (HFC)						
Re	frigerant	charge		kg	1.27	2.1	2.1	2.8	2.8			
Co	ntrol metl	hod			PID control							
Ambient temperature/Altitude*1,9 °C						Temperature:	-20 to 45, Altitude: less	s than 3000 m				
Circulating fluid*1, 2					Tap water, 15 to 40% Ethylene glycol aqueous solution, Deionized water							
	Set temperature range*1 °C			5 to 35								
	Cooling capacity ^{*3, 9} kW		10.5 15.7 20.5 25			25	28					
	Heating	capacity*	1	kW	2.5	3	5.5	7	.5			
	Tempera	ature stabi	lity*5	°C			±0.1					
system	Pump	Rated flow	w (Outlet)	L/min	45 (0.43 MPa)	45 (0.4	5 MPa)	125 (0.	.5 MPa)			
ste		Maximun	n flow rate	L/min	120	1:	30		80			
	capacity	Maximum	pump head	m		50		8	80			
fluid	Settable pressure range ^{*6} MPa			MPa	0.1 to 0.5			0.1 t	o 0.8			
j≑ ∣	Minimum operating flow rate ^{*7} L/min			L/min	20	2	5	4	10			
D g	Tank capacity L		25	4	6	60						
ati	Circulating fluid outlet, circulating fluid return port			Rc1 (Symbol F: G1, Symbol N: NPT1)								
E E	Tank dra	ain port			Rc3/4 (Symbol F: G3/4, Symbol N: NPT3/4)							
١.	Participation L Circulating fluid outlet, circulating fluid return port Tank drain port Automatic Supply side pressure range fluid fluid Supply side fluid temperature °C Automatic fluid fill port			0.2 to 0.5								
0				5 to 35								
				Rc1/2 (Symbol F: G1/2, Symbol N: NPT1/2)								
	(Standard)	Overflow	port		Rc1 (Symbol F: G1, Symbol N: NPT1)							
	Elucial e a	Fluid contact material		Metal	Stainless steel, Copper (Heat exchanger brazing), Brass, Bronze							
	Fiuld Co			Resin	PTFE, PU, FKM, EPDM, PVC, NBR, POM, PE, NR							
ε	Damag				3-phase 200 VAC (50 Hz), 3-phase 200 to 230 VAC (60 Hz)							
ste	Power s	ирріу										
Electrical system	Applicabl	e earth*8	Rated curre	nt A	3	80	40	5	50			
<u>i</u> 2	leakage b	reaker	Sensitivity of leak cur				30		-			
SC		perating c		Α	14	17	25	34	36			
Ш	Rated po	ower cons	umption*5	kW (kVA)	4.5 (4.9)	5.8 (6)	8.4 (8.7)	10.4 (11.6)	11.1 (12.2)			
No	Noise level (Front 1 m/Height 1 m)*5 dB (A)					71						
Wa	Waterproof specification				IPX4							
Accessories			Alarm code list stickers 2 pcs. (English 1 pc./Japanese 1 pc.), Operation Manual (for installation/operation) 2 pcs. (English 1 pc./Japanese 1 pc.), Y-strainer (40 meshes) 25A, Barrel nipple 25A, Anchor bolt fixing brackets 2 pcs. (including 6 M8 bolts)* ¹⁰									
We	ight (dry	state)		kg	Approx. 180 Approx. 215 Approx. 280							
	1 When the ambient temperature or circulating fluid temperature is 10°C or below, refer to "Operation at low ambient temperature or low circulating fluid temperature" (page 255 22 Use fluid in condition below as the circulating fluid.								emperature" (page 255).			


Tap water: Standard of The Japan Refrigeration And Air Conditioning Industry Association (JRA GL-02-1994) 15 to 40% ethylene glycol aqueous solution: Diluted with clean water, without any additives such as antiseptics. (Refer to "Operation at low ambient temperature or low circulat-ing fluid temperature" (page 255) for the concentration of the ethylene glycol aqueous solution.) The to 40% ethylene glycol adueous solution: Diluted with clean water, without any adoltives such as antiseptics. (Refer to "Operation at low ambient temperature" of low circulating fluid temperature (page 255) for the concentration of the ethylene glycol aqueous solution.) Deionized water: Electric conductivity 1 μ S/cm or higher (Electric resistivity 1 M Ω -cm or lower) () Ambient temperature: 32°C, (2) Circulating fluid: Tap water, (3) Circulating fluid temperature: 20°C, (4) Circulating fluid flow rate: Rated flow, (5) Power supply: 200 VAC () Ambient temperature: 32°C, (2) Circulating fluid: Tap water, (3) Circulating fluid temperature: 20°C, (4) Cover supply: 200 VAC () Ambient temperature: 32°C, (2) Circulating fluid: Tap water, (3) Circulating fluid temperature: 20°C, (4) Load: Same as the cooling capacity, (5) Circulating fluid flow rate: Rated flow, (6) Power supply: 200 VAC, (7) Piping length: Shortest (1) With the areas unconstructed and a program acented and the areas a program acented and to a program acented and the areas a program acented and the areas an

*4 *5

We rower supply: 200 VAC, O Piping length: Shorest
With the pressure control mode by inverter. When the pressure control mode is not used, the pump power frequency set mode can be used.
Fluid flow rate to maintain the cooling capacity and the temperature stability. If the actual flow rate is lower than this, install a bypass piping.
To be prepared by the user. A specified earth leakage breaker is installed for option B [With earth leakage breaker], B1 [With earth leakage breaker with handle] and S [Compliant with CE/UL Standards].
If the product is used at an altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 254) Item 13 "For altitudes of 1000 m or higher."
The anchor bolt fixing brackets (including 6 M8 bolts) are used for fixing to wooden skids when packaging the thermo-chiller. No anchor bolt is included.

A 233
 A



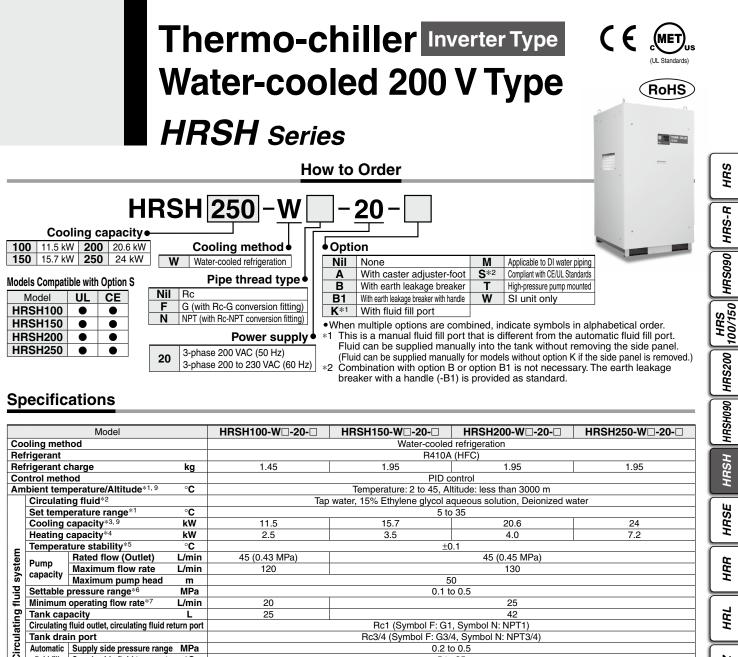

Ć.	Tallk Cap	acity		L	23 42						
atin	Circulating	fluid outlet, o	circulating fluid r	eturn port		Rc1 (Symbol F: G1	· · ·				
in in	Tank drai	in port				Rc3/4 (Symbol F: G3/	4, Symbol N: NPT3/4)				
Circula	Automatic	Supply side	e pressure range	e MPa	0.2 to 0.5						
U U	fluid fill	Supply side	e fluid temperatu	ure °C	5 to 35						
	system		c fluid fill por	rt		Rc1/2 (Symbol F: G1/					
	(Standard)	Overflow	port		Rc1 (Symbol F: G1, Symbol N: NPT1)						
	Eluid con	tact mate	rial	Metal	Sta	inless steel, Copper (Heat ex	changer brazing), Bronze, Bra	ISS			
	Fiuld Coll		iiai	Resin		PTFE, PU, FKM, EPDM,	PVC, NBR, POM, PE, NR				
em	Supply si	ide pressu	ire range	MPa		0.3 t	o 0.5				
syste	Supply si	ide tempe	rature range	°C		5 to	40				
r s)	Required	flow		L/min	25	30	50	55			
water	Facility water pressure differential MPa			MPa	0.3 or more						
	Facility w	/ater inlet/	outlet		Rc1 (Symbol F: G1, Symbol N: NPT1)						
Facility	Fluid contact material Metal		Metal	Stainless steel, Copper (Heat exchanger brazing), Bronze, Brass							
Ъ	Fiuld con	itact mate	riai	Resin	PTFE, EPDM, NBR						
Ę	Power su	ipply			3-phase 200 VAC (50 Hz), 3-phase 200 to 230 VAC (60 Hz), Allowable voltage range ±10% (No continuous voltage fluctuation)						
system	Applicable e	earth*8	Rated currer	nt A	3	0	40	50			
cal	leakage bre	aker	Sensitivity of leak curr	rent mA		0					
Electrical		erating cu		Α	14	17	21	25			
			umption*5	kW (kVA)	X /	5.3 (5.8)	6.6 (7.0)	8.0 (8.4)			
	Noise level (Front 1 m/Height 1 m)*5 dB (A)				61	6	•	61			
Wa	terproof s	pecificatio	on		IPX4						
Accessories					Alarm code list stickers 2 pcs. (English 1 pc./Japanese 1 pc.), Operation Manual (for installation/operation) 2 pcs. (English 1 pc./Japanese 1 pc.), Y-strainer (40 meshes) 25A, Barrel nipple 25A, Anchor bolt fixing brackets 2 pcs. (including 6 M8 bolts)* ¹⁰						
We	ight (dry s	tate)		kg	Approx. 150		Approx. 180				
÷1 I	Les a 15% attyleng dycal aqueous solution if operating in a place where the ambient temperature and/or circulating fluid temperature is 10°C or less										

*1 Use a 15% ethylene glycol aqueous solution if operating in a place where the ambient temperature and/or circulating fluid temperature is 10°C or less.

Use fluid in condition below as the circulating fluid. *2

Tap water: Standard of The Japan Refrigeration And Air Conditioning Industry Association (JRA GL-02-1994)

*4

 The product of the dapart refingeration and an containing fluidustry Association (OFA GL-02-1994)
 15% ethylene glycol aqueous solution: diluted by tap water in condition above without any additives such as antiseptics. Deionized water: Electric conductivity 1 μS/cm or higher (Electric resistivity 1 MΩ-cm or lower)
 Tacility water temperature: 32°C, (2) Circulating fluid: Tap water, (3) Circulating fluid temperature: 20°C, (4) Circulating fluid flow, (5) Power supply: 200 VAC
 Tacility water temperature: 32°C, (2) Circulating fluid: Tap water, (3) Circulating fluid flow rate: Rated flow, (4) Power supply: 200 VAC
 Tacility water temperature: 32°C, (2) Circulating fluid: Tap water, (3) Circulating fluid flow rate: Rated flow, (4) Power supply: 200 VAC
 Tacility water temperature: 32°C, (2) Circulating fluid: Tap water, (3) Circulating fluid temperature: 20°C, (4) Load: Same as the cooling capacity, (5) Circulating fluid flow rate: Rated flow, (6) Power supply: 200 VAC
 With the preserve control mode by inverter When the preserve control mode is not used the preserve control mode and by inverter temperature is and the preserve control mode is not used the preserve control mode as he inverter. *5

Hated flow, @ Power supply: 200 VAC, @ Piping length: Shortest
With the pressure control mode by inverter. When the pressure control mode is not used, the pump power frequency set mode can be used.
Fluid flow rate to maintain the cooling capacity and the temperature stability. If the actual flow rate is lower than this, install a bypass piping.
To be prepared by the user. A specified earth leakage breaker is installed for option B [With earth leakage breaker], B1 [With earth leakage breaker with handle] and S [Compliant with CE/UL Standards].
If the product is used at an altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 254) Item 13 "For altitudes of 1000 m or higher."
The anchor bolt fixing brackets (including 6 M8 bolts) are used for fixing to wooden skids when packaging the thermo-chiller. No anchor bolt is included.



HRS

Ę HRS-I

HRS200

HRSH090

HRSH

HRSE

HRR

HRL

HRZ

HRZD

HRW


HECR

HEC

HEB

HED

Technical Data

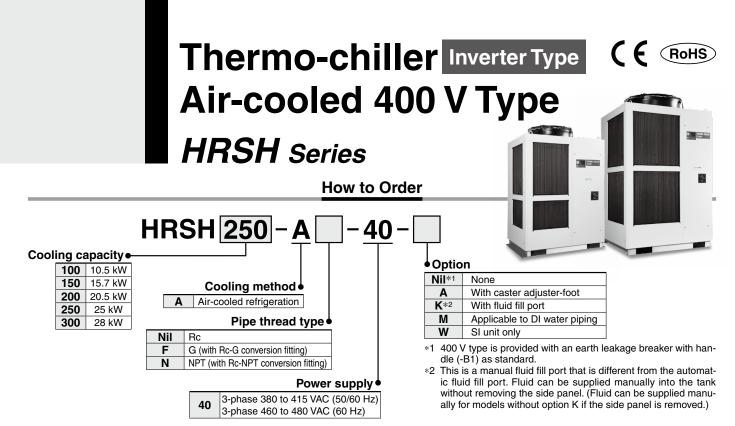

Specifications

Cooling n Refrigera Refrigera Control m Ambient t	method	del									
Refrigera Refrigera Control m					HRSH150-A□-40-□	Air-cooled refrigeration	⊓КЭП2Э0-А⊔-40-⊔	⊓КЭП300-А⊔-40-⊔			
Refrigera Control m	ant			R410A (HFC)							
Control m	ant charge		le a	1.27	2.1	2.1	2.8	2.8			
			kg	1.27	2.1		2.8	2.8			
Amplent			°C	PID control Temperature: -20 to 45. Altitude: less than 3000 m							
Cirou			U	-							
Circulating fluid* ^{1, 2} Set temperature range* ¹ °C				Tap water, 15 to 40% Ethylene glycol aqueous solution, Deionized water 5 to 35							
Cooling capacity ^{*3, 8} kW			10.5	15.7	20.5	25	28				
	ing capacity*		kW	2.5	3	5.5	-	20 7.5			
	perature stab		°C	2.5	5	<u>±0.1</u>	1	.0			
	Rated fl	ow (Outlet)	L/min	45 (0.43 MPa)	45 (0.4		125 (0	.5 MPa)			
🦉 Pump	p Maximu	m flow rate	L/min	120	43 (0.4			80			
E Pump capac		m pump head		120	50			30			
Setta	able pressure		MPa	0.1 to 0.5				to 0.8			
	Minimum operating flow rate ^{*7} L/min			20				10			
© Tank	은 Minimum operating now rate Emini			25	4		60				
E Circulz		circulating fluid r	eturn port	Rc1 (Symbol F: G1, Symbol N: NPT1)							
	drain port			Rc3/4 (Symbol F: G3/4, Symbol N: NPT3/4)							
Autom		de pressure range	e MPa	0.2 to 0.5							
fluid	fluid fill Supply side fluid temperature °C Automatic fluid fill port			5 to 35							
				Rc1/2 (Symbol F: G1/2, Symbol N: NPT1/2)							
	dard) Overflow			Rc1 (Symbol F: G1, Symbol N: NPT1)							
		•	Metal	Stainless steel, Copper (Heat exchanger brazing), Brass, Bronze							
Fluid	I contact mat	erial	Resin	PTFE. PU. FKM. EPDM. PVC. NBR. POM. PE. NR							
-			nesin								
Powe Earth breake Rateo	er supply			3-phase 380 to 415 VAC (50/60 Hz) Allowable voltage range ±10% (No continuous voltage fluctuation)							
sys				3-phase 460 to 480 VAC (60 Hz) Allowable voltage range +4%, -10% (Max. voltage less than 500 V and no continuous voltage fluctuation							
Earth	leakage	Rated curren	-	20 30							
breake	er (Standard)	Sensitivity of leak curr		- /		30	T				
B Rated	d operating c		Α	7.4	9.3	12.8	16	18			
Thatee	d power cons		kW (kVA)	4.6 (5.1)	5.8 (6.4)	8.2 (8.9)	10.1 (11.1)	10.8 (12.3)			
	el (Front 1 m/H		dB (A)		6			71			
waterpro	oof specificat	ion				IPX4					
Accessories				-		kers 2 pcs. (English 1 p					
				ation Manual (for installa							
					shes) 25A, Barrel nippl			· · ·			
Weight (d	dry state)		kg	Approx. 180	Appro		Appro	ox. 280			
CE marki	ina	EMC Directiv				2004/108/EC					
	Machinery Directive			2006/42/EC							


2 Use fluid in condition below as the circulating fluid. Tap water: Standard of The Japan Refrigeration And Air Conditioning Industry Association (JRA GL-02-1994)

Tap water: Standard of The Japan Refrigeration And Air Conditioning Industry Association (JRA GL-02-1994)
15 to 40% ethylene glycol aqueous solution: Diluted with clean water, without any additives such as antiseptics. (Refer to "Operation at low ambient temperature or low circulating fluid temperature" (page 255) for the concentration of the ethylene glycol aqueous solution.)
Deionized water: Electric conductivity 1 µS/cm or higher (Electric resistivity 1 MΩ-cm or lower)
3 ① Ambient temperature: 32°C, ② Circulating fluid: Tap water, ③ Circulating fluid temperature: 20°C, ④ Circulating fluid to water, ③ Circulating fluid: Tap water, ③ Circulating fluid temperature: 20°C, ④ Circulating fluid tap water, ④ Circulating fluid tap water, ③ Circulating fluid temperature: 20°C, ④ Circulating fluid flow rate: Rated flow, ④ Power supply: 400 VAC
*4 ① Ambient temperature: 32°C, ② Circulating fluid: Tap water, ③ Circulating fluid temperature: 20°C, ④ Load: Same as the cooling capacity, ⑤ Circulating fluid flow rate: Rated flow, ⑥ Power supply: 400 VAC
*5 ① Ambient temperature: valor (△ Piping length: Shortest
*6 With the pressure control mode by inverter. When the pressure control mode is not used, the pump power frequency set mode can be used.
*7 Fluid flow rate to maintain the cooling capacity and the temperature stability. If the actual flow rate is lower than this, install a bypass piping.
*8 If the product is used at an altitude of 1000 m or higher, refer to "Operating Environment" (page 254) Item 13 "For altitudes of 1000 m or higher."
*9 The anchor bot fixing brackets (including 6 M8 boits) are used for fixing to wooden skids when packagaing the thermo-chiller. No anchor bot is included.

*9 The anchor bolt fixing brackets (including 6 M8 bolts) are used for fixing to wooden skids when packaging the thermo-chiller. No anchor bolt is included.

[®] 235



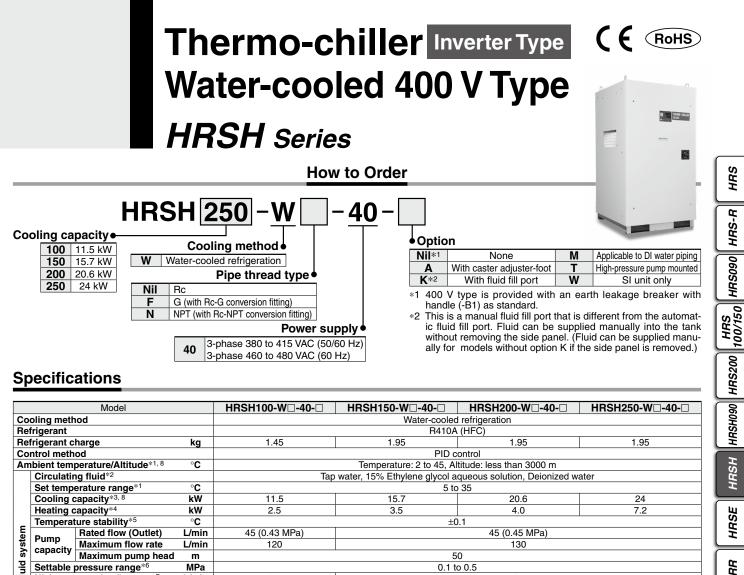

/ste	Pump	Maximum flow	w rate	L/min	120		130			
sy	capacity	Maximum pun	np head	m		5	0			
fluid	Settable pressure range ^{*6} MPa					0.1 t	o 0.5			
				L/min	20		25			
ng	Tank cap	acity		L	25		42			
ati	Circulating	fluid outlet, circulat	ting fluid re	turn port	Rc1 (Symbol F: G1, Symbol N: NPT1)					
5 C	Tank drai	in port				Rc3/4 (Symbol F: G3/4, Symbol N: NPT3/4)				
Circulating	Automatic	Supply side press	sure range	MPa		0.2 t	o 0.5			
•	fluid fill	Supply side fluid	temperatu	re °C		5 to	35			
	system	Automatic flui	id fill por	t		Rc1/2 (Symbol F: G1/	2, Symbol N: NPT1/2)			
	(Standard)	Overflow port				Rc1 (Symbol F: G1	, Symbol N: NPT1)			
	Eluid con	tact material		Metal	Sta	ainless steel, Copper (Heat ex		nze		
	Fiuld Coll			Resin		PTFE, PU, FKM, EPDM,	PVC, NBR, POM, PE, NR			
B	Temperat	ture range		°C		5 to	o 40			
system	Pressure	range		MPa		0.3 t	o 0.5			
ŝ	Required			L/min	25	30	50	55		
Facility water		ater pressure dif		MPa		0.3 or				
ž	Facility w	ater inlet/outle	et			Rc1 (Symbol F: G1	, Symbol N: NPT1)			
Gili	Fluid contact material				Sta	ainless steel, Copper (Heat ex		ass		
цц				Resin	PTFE, NBR, EPDM					
Electrical system	Power su	ipply			3-phase 380 to 415 VAC (50/60 Hz) Allowable voltage range ±10% (No continuous voltage fluctuation) 3-phase 460 to 480 VAC (60 Hz) Allowable voltage range +4%, -10% (Max. voltage less than 500 V and no continuous voltage fluctuation)					
sys	Applicable ea	arth leakage Bate	d current	t A						
ca	breaker (Star	•	rity of leak curre	-	30					
ectr		erating current	1	Α	7.3	8.8	10.6	12.8		
Ē		wer consumpti		kW (kVA)	4.4 (5.0)	5.3 (6.1)	6.6 (7.4)	8.2 (8.9)		
Noi	se level (Fr	ont 1 m/Height 1	m) *5	dB (A)	61					
		pecification	/		IPX4					
Accessories					Alarm code list stickers 2 pcs. (English 1 pc./Japanese 1 pc.), Operation Manual (for installation/operation) 2 pcs. (English 1 pc./Japanese 1 pc.), Y-strainer (40 meshes) 25A, Barrel nipple 25A, Anchor bolt fixing brackets 2 pcs. (including 6 M8 bolts)*9					
	ight (dry s			kg	Approx. 150		Approx. 180			
	mpliant	CE marking	MC Directi				08/EC			
sta	ndards		Nachinery D	Directive	2006/42/EC					
*2 L T	1 Use a 15% ethylene glycol aqueous solution if operating in a place where the ambient temperature and/or circulating fluid temperature is 10°C or less. 2 Use fluid in condition below as the circulating fluid. Tap water: Standard of The Japan Refrigeration And Air Conditioning Industry Association (JRA GL-02-1994) 15% ethylene glycol aqueous equitions divided by the water in prodition operating redditives output of anticopties									

 Tap Water: Standard of The Japan Herrigeration And Air Conditioning Industry Association (JHA GL-02-1994)
 T5% ethylene glycol solution: diluted by tap water in condition above without any additives such as antiseptics.
 Deionized water: Electric conductivity 1 µS/cm or higher (Electric resistivity 1 MΩ·cm or lower)
 TFacility water temperature: 32°C, ② Circulating fluid: Tap water, ③ Circulating fluid flow rate: Rated flow, ④ Power supply: 400 VAC
 TFacility water temperature: 32°C, ② Circulating fluid: Tap water, ③ Circulating fluid flow rate: Rated flow, ④ Power supply: 400 VAC
 TFacility water temperature: 32°C, ② Circulating fluid: Tap water, ③ Circulating fluid temperature: 20°C, ④ Load: Same as the cooling capacity, ⑤ Circulating fluid flow rate: Rated flow, ⑥ Power supply: 400 VAC ∗4 *5

*6 With the pressure control mode by inverter. When the pressure control mode is not used, the pump power frequency set mode can be used.
*7 Fluid flow rate to maintain the cooling capacity and the temperature stability. If the actual flow rate is lower than this, install a bypass piping.
*8 If the product is used at an altitude of 1000 m or higher, refer to "Operating Environment/Storage Environment" (page 254) Item 13 "For altitudes of 1000 m or higher."
*9 The anchor bolt fixing brackets (including 6 M8 bolts) are used for fixing to wooden skids when packaging the thermo-chiller. No anchor bolt is included.



HRS

Ę HRS-I

HRS090

HRS200

HRSH090

HRSH

HRSE

HRR

HRI

HRZ

HRZD

HRW

HECR

HEC


HEB

HED


Technical Data

HRSH Series Inverter Type


Cooling Capacity

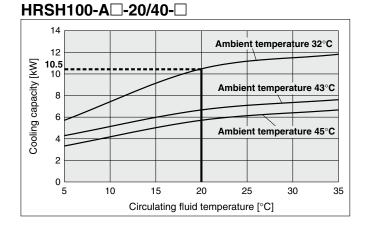


HRSH150-A -20/40-

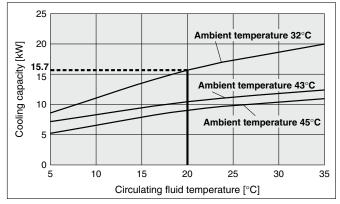

HRSH200-A - 20/40-

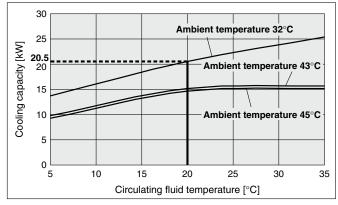


HRSH250-A -20/40-

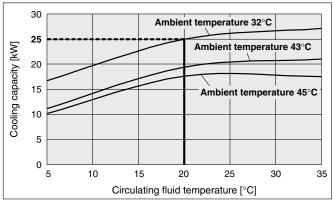


* If the product is used at an altitude of 1000 m or higher, refer to "Operating Environment/ Storage Environment" (page 254) Item 13 "For altitudes of 1000 m or higher."


HRSH100-W -20/40-

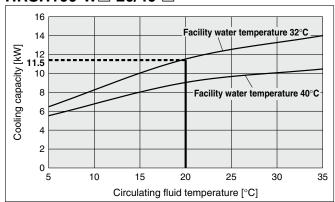


HRSH150-W -20/40-

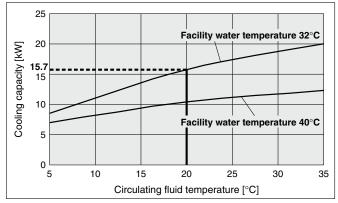

HRSH200-W -20/40-

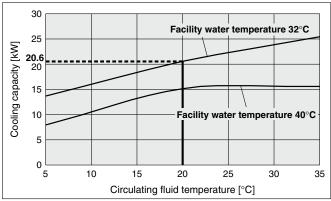

HRSH250-W -20/40-

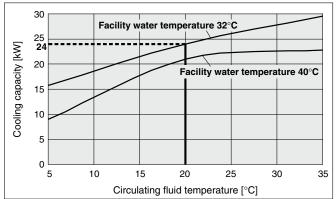


SMC

Thermo-chiller Inverter Type HRSH Series


Cooling Capacity


* If the product is used at an altitude of 1000 m or higher, refer to "Operating Environment/ Storage Environment" (page 254) Item 13 "For altitudes of 1000 m or higher."

HRSH300-A -20/40-

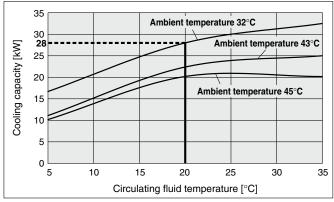


Pump Capacity




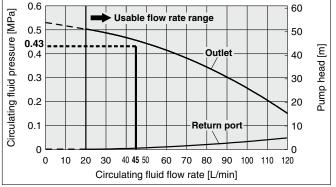

HRSH250/300-A -20/40-

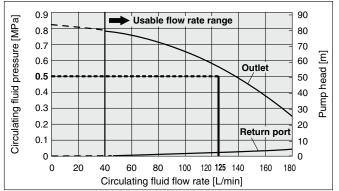


HRSH150/200-A□-20/40-□

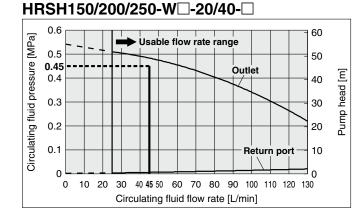

HRSH Series Inverter Type


Dimensions

HRSH100/150/200-A-20 (Air-cooled 200 V type) HRSH100/150/200-A-40 (Air-cooled 400 V type)

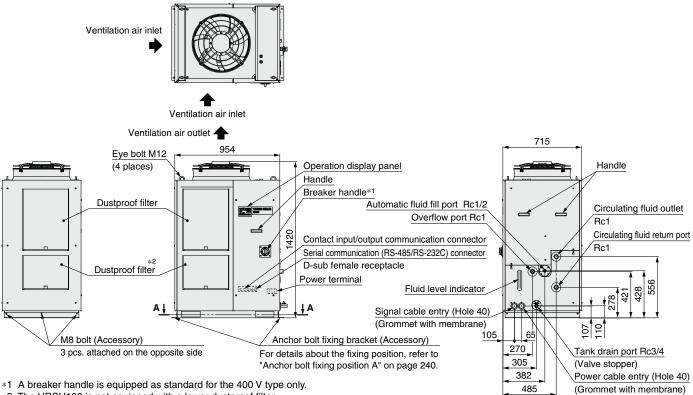

*2 The HRSH100 is not equipped with a lower dustproof filter.

HRSH250/300-A-20 (Air-cooled 200 V type) HRSH250/300-A-40 (Air-cooled 400 V type)

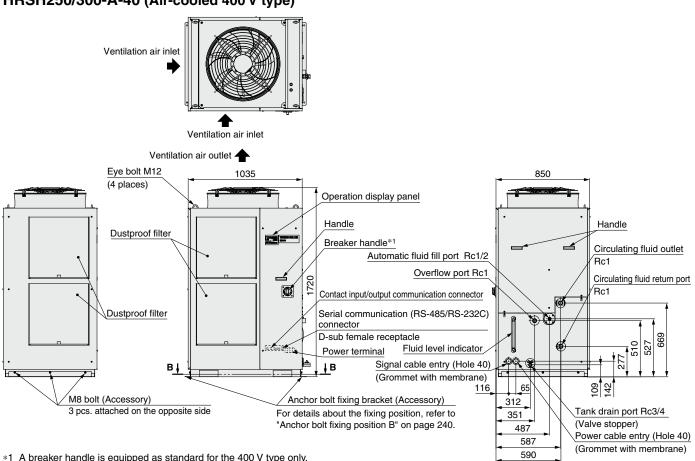


*1 A breaker handle is equipped as standard for the 400 V type only. 239

∕⁄∂SMC


Dimensions

HRSH100/150/200/250-W-20 (Water-cooled 200 V type) HRSH100/150/200/250-W-40 (Water-cooled 400 V type)

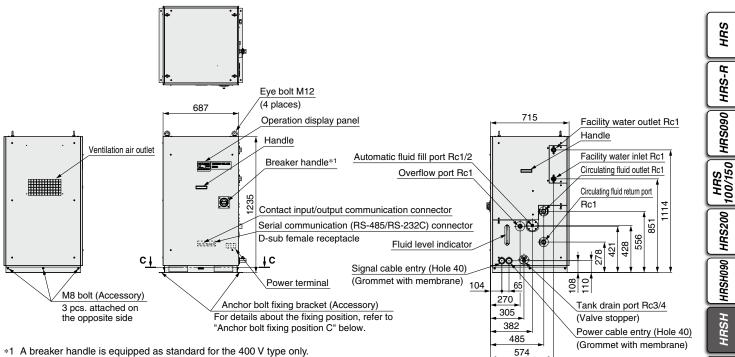


*1 A breaker handle is equipped as standard for the 400 V type only.

Anchor bolt fixing position A

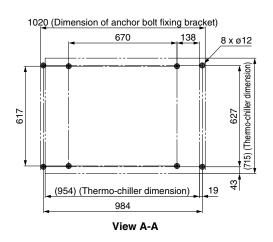

Anchor bolt fixing position C

Anchor bolt fixing position B

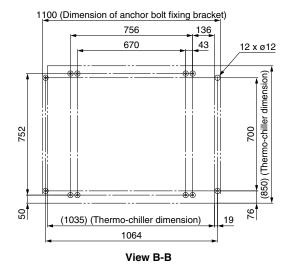

HRSE

HRR


HRL

HRZ

HRZD


HRW

Accessory: Y-strainer mounting view

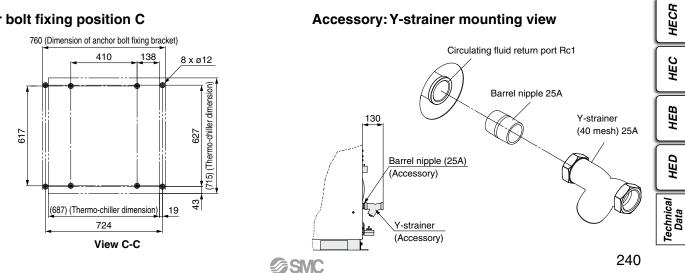

Recommended External Piping Flow

External piping circuit is recommended as shown below.

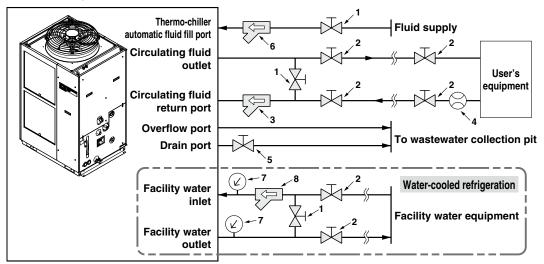

* Ensure that the overflow port is connected to the wastewater collection pit in order to avoid damage to the tank of the thermo-chiller.

re likely to enter, install
re likely to enter, install
re likely to enter, install
RS-PF005 (page 250).
of 20 µm or more
m or more are likely
the table below (*1).
n

*1 Recommended filters for facility water inlet

Applicable model	Recommended filter
HRSH100/150	FQ1012N-10-T020-B-X61
HRSH200/250	FGESA-10-T020A-G2


*2 The filter shown above cannot be directly connected to the thermo-chiller. Install it in the user's piping system.

Cable Specifications

Power supply and signal cable should be prepared by user.

Power Cable Specifications

	Rated value for thermo-chiller			Power cable examples						
Applicable model	Power supply	Applicable breaker rated current	Terminal block thread size	Cable size	Crimped terminal on the thermo-chiller side					
HRSH100-□□-20 HRSH150-□□-20		30 A		4 cores x 5.5 mm ² (4 cores x AWG10) (Including grounding cable)	R5.5-5					
HRSH100-W□-20-T HRSH150-W□-20-T HRSH200-□□-20 HRSH200-W□-20-T	3-phase 200 VAC (50 Hz) 3-phase 200 to 230	40 A		4 cores x 8 mm ² (4 cores x AWG8) (Including grounding cable)	R8-5					
HRSH250-□□-20 HRSH250-W□-20-T HRSH300-A□-20	VAO (00 HZ)	50 A	M5	4 cores x 8 mm ² (4 cores x AWG8) (Including grounding cable)	R8-5					
HRSH100-0-40		20 A	CIVI							
HRSH100-W -40-T HRSH15040 HRSH150-W -40-T HRSH20040 HRSH200-W -40-T HRSH25040 HRSH250-W -40-T HRSH300-A -40	3-phase 380 to 415 VAC (50/60 Hz) 3-phase 460 to 480 VAC (60 Hz)	30 A		3 x 5.5 mm ² (3 x AWG10) (Power supply) 1 x 14 mm ² (1 x AWG6) (Grounding cable)	R5.5-5 (Power supply) R14-5 (Grounding cable)					

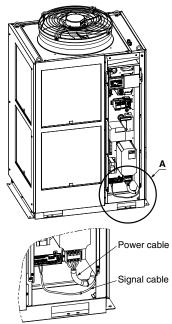

An example of the cable specifications is when two kinds of vinyl insulated wires with a continuous allowable operating temperature of 70°C at 600 V, are used at an ambient temperature of 30°C. Select the proper size of cable according to an actual condition.

Signal Cable Specifications

Terminal specifications		Cable specifications	
Terminal block screw diameter Recommended crimped terminal		0.75 mm ² (AWG18)	
M3 Y-shape crimped terminal 1.25Y-3		Shielded cable	


Partially enlarged view A



Operation Display Panel

The basic operation of this unit is controlled through the operation display panel on the front of the product.

(1)

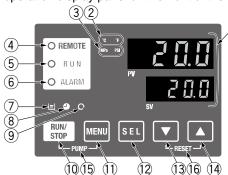

No.	Description	Function				
	Digital display (1) (7-segment,		Displays the circulating fluid current discharge temperature and pressure and alarm codes and other menu items (codes).			
	4 digits)	sv	Displays the circulating fluid discharge temperature and the set values of other menus.			
2	[°C] [°F] lamp		upped with a unit conversion function. Displays the of displayed temperature (default setting: °C).			
3	[MPa] [PSI] lamp		upped with a unit conversion function. Displays the of displayed pressure (default setting: MPa).			
4	[REMOTE] lamp		ables remote operation (start and stop) by muunication. Lights up during remote operation.			
5	[RUN] lamp	it is	Lights up when the product is started, and goes off when it is stopped. Flashes during stand-by for stop or anti- freezing function, or independent operation of the pump.			
6	[ALARM] lamp	Flashes with buzzer when alarm occurs.				
\bigcirc	[🖃] lamp	Light	Lights up when the surface of the fluid level indicator falls below the L level.			
8	[🕘] lamp	Equipped with a timer for start and stop. Lights up when this function is operated.				
9	[O] lamp	Equipped with a power failure auto-restart function, which restarts the product automatically after stopped due to a power failure. Lights up when this function is operated.				
10	[RUN/STOP] key	Ма	kes the product start or stop.			
1	[MENU] key	Shifts the main menu (display screen of circulating fluid discharge temperature and pressure) and other menus (for monitoring and entry of set values).				
12	[SEL] key	Cha	anges the item in menu and enters the set value.			
(13)	[▼] key	Decreases the set value.				
14)	[▲] key	Increases the set value.				
15	[PUMP] key	Press the [MENU] and [RUN/STOP] keys simultaneously. The pump starts running independently to make the product ready for start-up (release the air).				
16	[RESET] key		Press the $[\Psi]$ and $[\blacktriangle]$ keys simultaneously. The alarm buzzer is stopped and the [ALARM] lamp is reset.			

List of Function

	_	
No.	Function	Outline
1	Main display	Displays the current and set temperature of the circulating fluid, discharge pressure of the circulating fluid. Changes the circulating fluid set temperature.
2	Alarm display menu	Indicates alarm number when an alarm occurs.
3	Inspection monitor menu	Product temperature, pressure and accumulated operating time can be checked as daily inspection. Use these for daily inspection.
4	Key-lock	Keys can be locked so that set values cannot be changed by operator error.
5	Timer for operation start/stop	Timer is used to set the operation start/stop.
6	Signal for the completion of preparation	A signal is output when the circulating fluid temperature reaches the set temperature, when using contact input/output and serial communication.
7	Offset function	Use this function when there is a temperature offset between the discharge temperature of the thermo-chiller and user's equipment.
8	Reset after power failure	Start operation automatically after the power supply is turned on.
9	Key click sound setting	Operation panel key sound can be set on/off.
10	Changing temp. unit	Temperature unit can be changed. Centigrade (°C) \Leftrightarrow Fahrenheit (°F)
11	Changing pressure unit	Pressure unit can be changed. MPa $\Leftrightarrow PSI$
12	Data reset	Functions can be reset to the default settings (settings when shipped from the factory).
13	Accumulation time reset	Reset function when the pump, the fan or the compressor is replaced. Reset the accumulated time here.
14	Pump operation mode set	The fluid supply mode of the pump can be changed Pressure control mode \Leftrightarrow Frequency set mode
15	Anti-freezing function	Circulating fluid is protected from freezing during winter or at night. Set beforehand if there is a risk of freezing.
16	Warming-up function	When circulating fluid temperature rising time at starting needs shortening during winter or at night, set beforehand.
17	Anti-snow coverage function	If there will be a possibility of the snow coverage due to the change of the installation environment (season, weather), set beforehand.
18	Alarm buzzer sound setting	Alarm sound can be set to on/off.
19	Alarm customizing	Operation during alarm condition and threshold values can be changed depending on the alarm type.
20	Communication	This function is used for contact input/output or serial communication.

Alarm

This unit has 42 types of alarms as standard, and displays each of them by its alarm code on the PV screen with the [ALARM] lamp ([LOW LEVEL] lamp) lit up on the operation display panel. The alarm can be read out through communication.

Code	Alarm message	Code	Alarm message	Code	Alarm message
AL01	Low level in tank	AL19	Communication error	AL38	Compressor discharge temp. rise
AL02	High circulating fluid discharge temp.	AL20	Memory error	AL39	Internal unit fan stoppage
AL03	Circulating fluid discharge temp. rise	AL21	DC line fuse cut	AL40	Dustproof filter maintenance*1
AL04	Circulating fluid discharge temp. drop	AL22	Circulating fluid discharge temp. sensor failure	AL41	Power stoppage
AL05	High circulating fluid return temp.	AL23	Circulating fluid return temp. sensor failure	AL42	Compressor waiting
AL08	Circulating fluid discharge pressure rise	AL24	Compressor intake temp. sensor failure	AL43	Fan breaker trip*1
AL09	Circulating fluid discharge pressure drop	AL25	Circulating fluid discharge pressure sensor failure	AL44	Fan inverter error*1
AL10	High compressor intake temp.	AL26	Compressor discharge pressure sensor failure	AL45	Compressor breaker trip*2
AL11	Low compressor intake temp.	AL27	Compressor intake pressure sensor failure	AL46 Compressor inverter error	
AL12	Low super heat temp.	AL28	Pump maintenance	AL47	Pump breaker trip*2
AL13	High compressor discharge pressure	AL29	Fan maintenance*1	AL48	Pump inverter error
AL15	Refrigeration circuit pressure (high pressure side) drop	AL30	Compressor maintenance	AL49	Air exhaust fan stoppage*3
AL16	Refrigeration circuit pressure (low pressure side) rise	AL31	Contact input 1 signal detection	*1 Does not occur on the product of water-cooled refrigeration type.	
AL17	Refrigeration circuit pressure (low pressure side) drop	AL32	Contact input 2 signal detection	*2 Does not occur on the product of power supply specification '-20'	
AL18	Compressor running failure	AL37	Compressor discharge temp. sensor failure	 *3 Does not occur on the product of air-cooled refrigeration type. * For details, read the Operation Manual. 	

For details, refer to the Operation Manual. Please download it via our website, https://www.smcworld.com

HRSH Series Inverter Type

Communication Functions

Contact Input/Output

	Item Specifications			
Co	nnector type	M3 terminal block		
Insulation method		Photocoupler		
	Rated input voltage	24 VDC		
Input signal	Operating voltage range	21.6 to 26.4 VDC		
	Rated input current	5 mA TYP		
	Input impedance	4.7 kΩ		
Contract autmut	Rated load voltage	48 VAC or less/30 VDC or less		
Contact output signal	Maximum load current	500 mA AC/DC (Resistance load)		
Signal	Minimum load current	5 VDC 10 mA		
0	utput voltage	24 VDC \pm 10% 500 mA MAX (No inductive load)		
Circuit diagram		24 VDC output (500 mA MAX)*2 4 VCOM 4 VCOM output 24 VCOM output 24 VCOM output 24 VCOM output 3 4.7 KΩ 10 10 10 10 10 10 10 10 10 10		

*1 The pin numbers and output signals can be set by user. For details, refer to the Operation Manual for communication.

*2 When using with optional accessories, depending on the accessory, the allowable current of 24 VDC devices will be reduced. Refer to the operation manual of the optional accessories for details.

Serial Communication

The serial communication (RS-485/RS-232C) enables the following items to be written and read out. For details, refer to the Operation Manual for communication.

Writing	Readout
Run/Stop	Circulating fluid present temperature
Circulating fluid temperature	Circulating fluid discharge pressure
setting (SV)	Status information
	Alarm occurrence information
Li	Li

Item	Specifications			
Connector type	D-sub 9-pin, Female connector (Mounting screw: M2.6 x 0.45)			
Protocol	Modicon Modbus compliant/Simple communication protocol			
Standards	EIA standard RS-485	EIA standard RS-232C		
Circuit diagram	To the thermo-chiller User's equipment side	To the thermo-chiller User's equipment side		

* The terminal resistance of RS-485 (120 Ω) can be switched by the operation display panel. For details, refer to the Operation Manual for communication. Do not connect other than in the way shown above, as it can result in failure.

Please download the Operation Manual via our website, https://www.smcworld.com



HRSH Series Options

 Options have to be selected when ordering the thermo-chiller.
 It is not possible to add them after purchasing the unit.

HRS

HRS 100/150 HRS090 HRS-R

HRS200

HRSH090

HRSH

HRSE

HRR

HRL

HRZ

HRZD

HRW

HECR

HEC

HEB

HED

Technical Data

Option symbol

With Caster Adjuster-foot


HRSH - A


• With caster adjuster-foot

Unfixed casters and adjuster feet stops are mounted.

Applieshis medal	Di	Additional weight*1		
Applicable model	Α	В	С	[kg]
HRSH250/300-A□-□□-A	916	536	1838	Approx. 24
HRSH100/150/200-A□-□□-A	830	401	1538	Approv 19
HRSH100/150/200/250-W□-□□-A	570	401	1353	Approx. 18

*1 Refers to the amount of increase from the standard weight

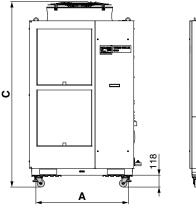



Option symbol

With Earth Leakage Breaker

HRSH_-___20-<u>B</u>

• With earth leakage breaker

A leakage breaker is built in to automatically stop the supply power when it has short-circuit, over current or electrical leakage. (It is not necessary to select this option since an earth leakage breaker is installed for the models with power supply specification '-40' as standard equipment.)


Applicable model	Rated current [A]	Sensitivity of leak current [mA]	Short circuit display method
HRSH100-□□-20-B	30		Mechanical button
HRSH150-□□-20-B		30	
HRSH200-□□-20-B	40		
HRSH250-□□-20-B	50		
HRSH300-□□-20-B	50		

* 400 V type is equipped as standard.


(Refer to the specifications on pages 235, 236 and the dimensions on pages 239, 240 for details.)

* Cannot be selected together with option B1.


* Cannot be selected together with option S.

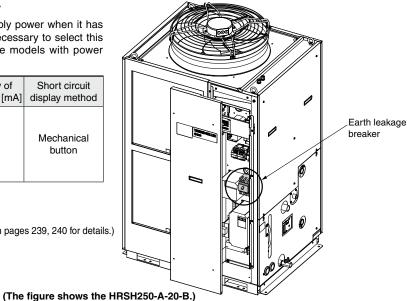

HRSH Series

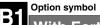

With Earth Leakage Breaker with Handle

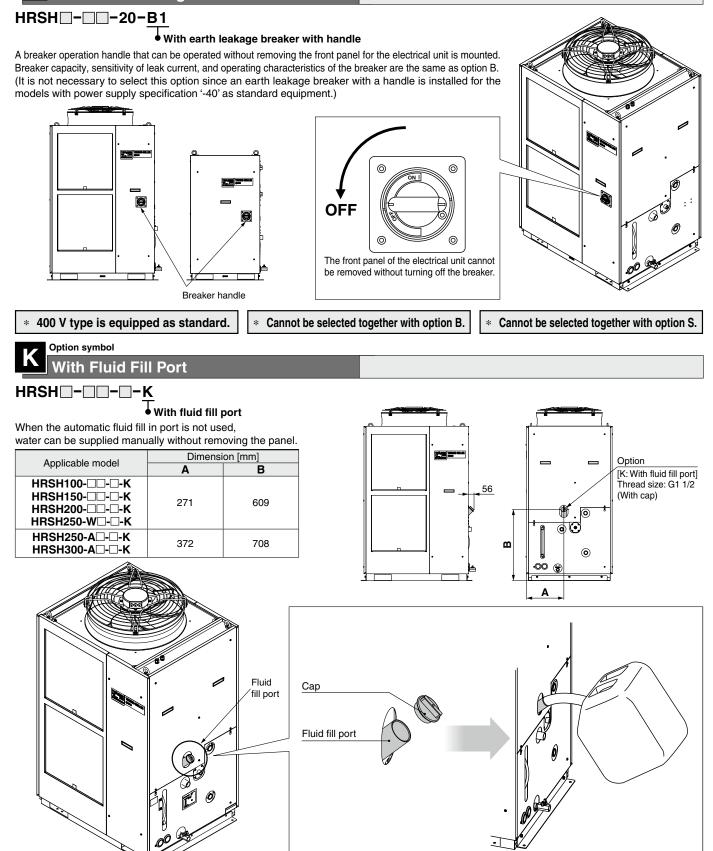

(The figure shows the HRSH250-A-20-K.)

Applicable to DI Water Piping

HRSH _____M

• Applicable to DI water piping

Contact material of the circulating fluid circuit is made from non-copper materials.

Applicable model	HRSH□-□□- □ - M
Contact material for	Stainless steel (including heat exchanger brazing), PTFE, PU, FKM,
circulating fluid	EPDM, PVC, NBR, POM

* No change in external dimensions

Option symbol

Compliant with CE/UL Standards

• Compliant with CE/UL Standards

Products compliant with CE/UL Standards. The following standards are applicable.

Applicable standard				
CE marking	EMC directive	2004/108/EC		
CE marking	Machinery directive 2006/42/EC			
UL standard	E112803 (UL61010-1)			

When selecting this option,

An earth leakage breaker with a breaker handle is equipped.
(The breaker are the same as those for option B1.)
A caution label is added.

• The CE/UL certification mark is added to the model number label.


* Cannot be selected for 400 V type.

* Cannot be selected together with option B.

* Cannot be selected together with option B1.

* For the operation in accordance with the UL Standard, the product should be used in an environment at a pollution degree of 2 or less. Prepare a power supply of overvoltage category I or less.

Image: Constraint of the second se

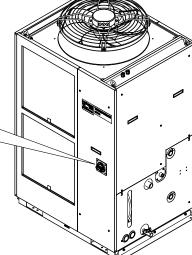

Models Compatible with Option S

	•	
Applicable model	-A□	-W□
HRSH100-□□-20-S	•	•
HRSH150-□□-20-S	•	•
HRSH200-□□-20-S	•	•
HRSH250-□□-20-S	•	•
HRSH300-A□-20-S	•	_

HRS

SMC

HRSH Series

Option symbol

High-Pressure Pump Mounted

HRSH -W ----

• High-pressure pump mounted

Possible to choose a high-pressure pump in accordance with user's piping resistance.

* Cannot be selected for air-cooled type

Model			HRSH100-W□-20-T	HRSH150-W□-20-T	HRSH200-W□-20-T	HRSH250-W -20-T			
Circulating	Pump capacity	Rated flow (Outlet)*1, 2	L/min		125 (0.50 MPa)				
		Max. flow rate	L/min		180				
fluid		Max. pump head	m		8	0			
system	system Settable pressure range		MPa		0.1 to 0.8				
Min. operating flow rate		L/min	40						
	Applicable earth Rated current		Α	40 50		50			
	leakage breaker	Sensitivity of leak current	mA	30		0			
Electrical system	Rated operating current		Α	2	6	30	34		
System	Datad no	Rated power consumption		6	.6	8.2	8.9		
	патей ро			(9.	.0)	(10.4)	(11.8)		
Weight (dry state) kg		Approx. 202							

*1 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20°C


*2 The required min. flow rate for maintaining the cooling capacity or temperature stability

Model			HRSH100-W□-40-T	HRSH150-W□-40-T	HRSH200-W□-40-T	HRSH250-W□-40-T				
	Pump	Rated flow (Outlet)*1, 2	L/min		125 (0.50 MPa)					
		Max. flow rate	L/min		180					
fluid capacity Max. now rate			m		80					
system	system Settable pressure range		MPa		0.1 to 0.8					
Min. operating flow rate		L/min	40							
	Applicable earth Rated current		Α		30					
	leakage breaker	Sensitivity of leak current	mA	30						
system	Rated operating current A		Α	11.8	13.2	15.2	19.2			
system		Rated power consumption kW (kVA)		6.5	7.5	9.0	11.9			
	naleu po			(8.2)	(9.1)	(10.5)	(13.3)			
Weight (dry state) kg		Approx. 202								

weight (ury state)

*1 The capacity at the thermo-chiller outlet when the circulating fluid temperature is 20°C

*2 The required min. flow rate for maintaining the cooling capacity or temperature stability

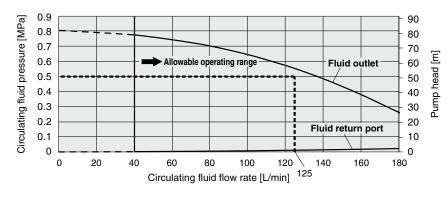



SI unit only

The circulating fluid temperature and pressure are displayed in SI units [MPa/°C] only.

If this option is not selected, a product with a unit selection function will be provided by default.

* No change in external dimensions

HRSH Series Optional Accessories

1) Piping Conversion Fitting

This is a fitting to change the port from Rc to G or NPT.

 \cdot Circulating fluid outlet, Circulating fluid return port, Overflow port Rc1 \rightarrow NPT1 or G1


- \cdot Drain port Rc3/4 \rightarrow NPT3/4 or G3/4
- \cdot Automatic fluid fill port Rc1/2 \rightarrow NPT1/2 or G1/2

· Facility water inlet, Facility water outlet Rc1 \rightarrow NPT1 or G1 (for HRS-EP015 or HRS-EP016)

(It is not necessary to purchase this when pipe thread type F or N is selected in "How to Order" since it is included in the product.)

Approx. 35 mm

Part no.	Contents	Applicable model
HRS-EP013	NPT thread conversion fitting set	HRSH□-A-□
HRS-EP014	G thread conversion fitting set	
HRS-EP015	NPT thread conversion fitting set	HRSH□-W-□
HRS-EP016	G thread conversion fitting set	

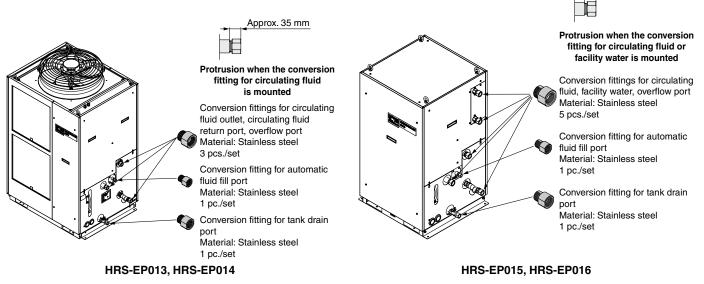

2 Caster Adjuster-foot Kit

This is a set of unfixed casters and adjuster feet stop. When installed by user, it is necessary to lift the thermo-chiller by a forklift or sling work. Carefully read the procedure manual included with this kit before performing the installation.


···· , ····	- F				3		
.		Dimens	ion [mm]	Weight			
Part no.	Applicable model	Α	B	[kg]			
HRS-KS001	HRSH250-A□-□ HRSH300-A□-□	916	536	Approx. 24			
	HRSH100-A□-□ HRSH150-A□-□ HRSH200-A□-□	830					
HRS-KS002	HRSH100-W□-□ HRSH150-W□-□ HRSH200-W□-□ HRSH250-W□-□	570	401	Approx. 18			
					Fig	. 1 Mounting vie	Fixing bo
Parts List					l		
	Description			<	. 1		
Procedure mar	nual				Adjuster foot		
Caster adjuster	r-foot bracket (2 pcs.)				Unfixed caster		
Fixing bolt (M8)) (8 pcs.)				(Caster O.D.: ø75)	 ! (0)	
				Fig.	2 Caster adjuster-foot bra	acket (2 pcs.)	Fig. 3 Fixing bolt (8

247

Optional Accessories HRSH Series

③ Electric Conductivity Control Set


The set indicates and controls the electric conductivity of the circulating fluid. Refer to the Operation Manual for details.

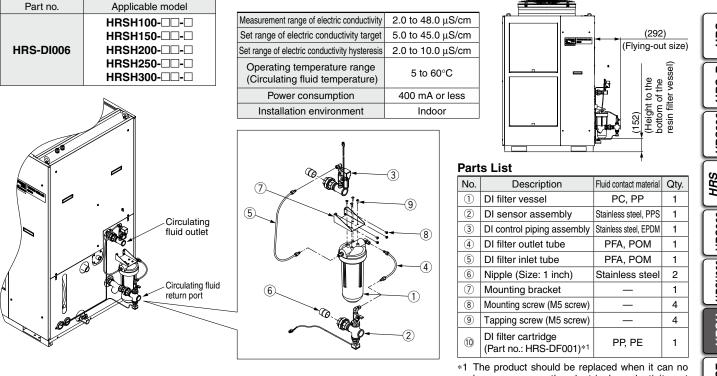

 The product should be replaced when it can no longer preserve the electrical conductivity set value.

(4) Bypass Piping Set

When the circulating fluid goes below the minimum operating flow rate (as shown below), cooling capacity will be reduced and the temperature stability will be badly affected. Use the bypass piping set to ensure a circulating fluid flow rate of the minimum operating flow rate or more.

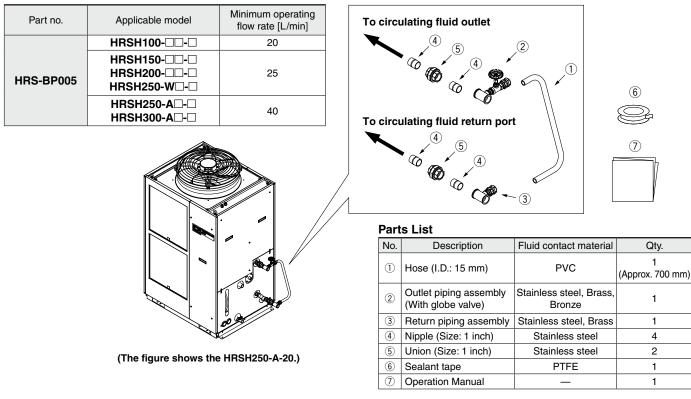


HRSH Series

(5) Snow Protection Hood

Stainless steel snow protection hood for air-cooled chiller.

According to the mounting direction of the snow protection hood, the ventilation from the fan can be selected from four directions, front, rear, left and right.

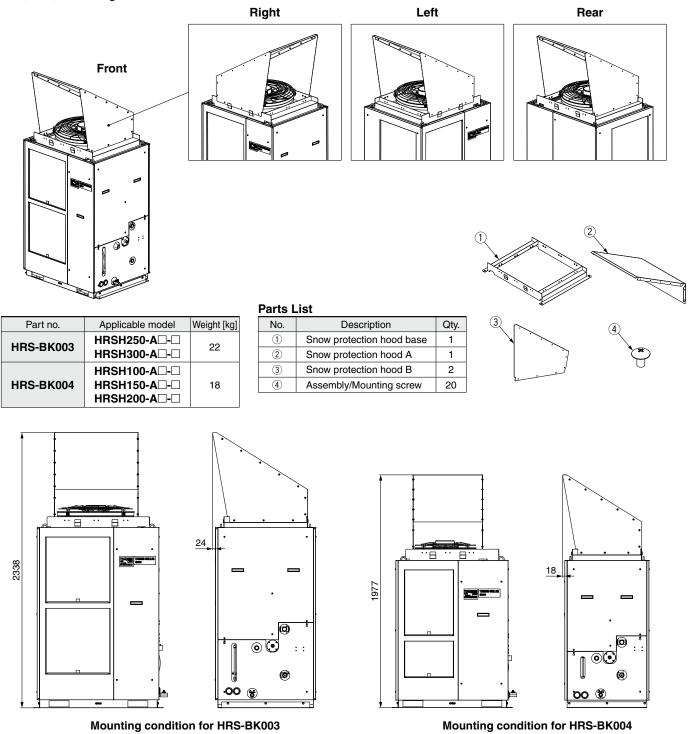

* This hood does not completely prevent snow from entering the inside of the chiller.

Optional Accessories HRSH Series

6 Particle Filter Set

Removes foreign matter in the circulating fluid. This set cannot be directly connected to the thermo-chiller. Install it in the user's piping system. Refer to the Operation Manual for details.

Particle Filter Set

HRS-PF005-H

Accessory		
Symbol	Accessory	
Nil	None	
Н	With handle	

Fluid	Tap water
Max. operating pressure	0.65 MPa
Operating temperature range	5 to 35°C
Nominal filtration accuracy	5 µm
Installation environment	Indoors

Parts List


No.	Description	Material	Qty.	Note		
1	Body	PC, PP	1	—		
2	Element*1	PP	1	—		
3	Extension piece	Stainless steel	2	Conversion from NPT to Rc		
(4)	Handle	_	1	When -H is selected		
5	Sealant tape	PTFE	1	—		


Replacement Element

HRS-PF006

The product should be replaced when the pressure drop reaches 0.1 MPa.

*1 The product should be replaced when the pressure drop reaches 0.1 MPa.

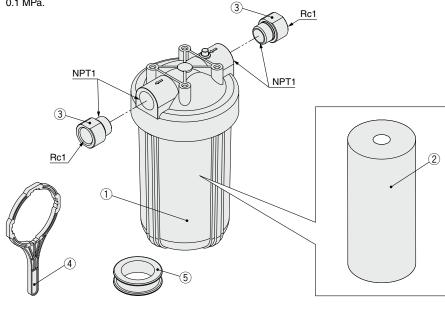

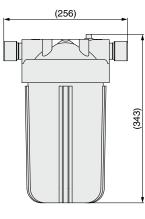

HRSH Series

Wired Remote Controller


When the wired remote controller is connected to the thermo-chiller, the operation start/stop setting or the set temperature can be changed from a place apart from the thermo-chiller. For details, refer to the Operation Manual.

Wired Remote Controller

HRS-CV004-1

Accessories				
Symbol	Accessories			
Nil	None			
1	With cable (Approx. 20 m) With cable (Approx. 50 m)			
2				
3	With cable (Approx. 100 m)			



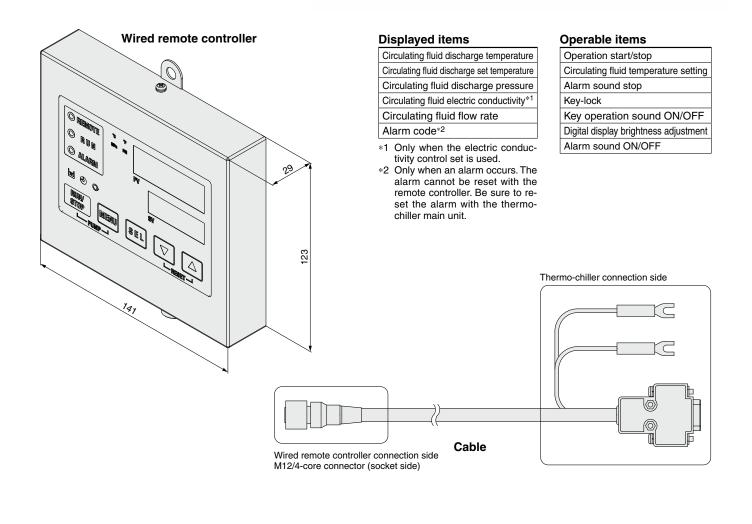


* To use the wired remote controller, the thermo-chiller main unit setting is needed.

- * Use the wired remote controller indoors.
- * Pass the cable through the duct, etc. so that it is not exposed to rain water or direct sunlight.

HRSH Series Cooling Capacity Calculation

Required Cooling Capacity Calculation

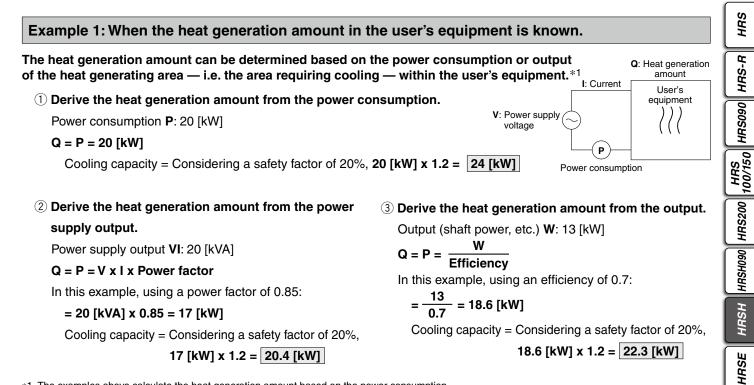

*1 The examples above calculate the heat generation amount based on the power consumption. The actual heat generation amount may differ due to the structure of the user's equipment. Be sure to check it carefully.

Example 2: When the heat generation amount in the user's equipment is not known.

Obtain the temperature difference between inlet and outlet by circulating the circulating fluid inside the user's equipment.

Heat generation amount by user's equipment Q					
Circulating fluid Circulating fluid mass flow rate qm Circulating fluid density p Circulating fluid (volume) flow rate qv Circulating fluid specific heat C Circulating fluid outlet temperature T1 Circulating fluid return temperature T2 Circulating fluid temperature difference ΔT	: Tap water ^{*1} : (= $\rho \times qv \neq 60$) [kg/s] : 1 [kg/L] : 70 [L/min] : 4.186 x 10 ³ [J/(kg·K)] : 293 [K] (20 [°C]) : 297 [K] (24 [°C]) : 4 [K] (= T2-T1)				
Conversion factor: minutes to seconds (SI units)	: 60 [s/min]				
*1 Refer to page 253 for the typical physical property value	of tap water or other circulating fluids.				
$\mathbf{Q} = \mathbf{qm} \mathbf{x} \mathbf{C} \mathbf{x} (\mathbf{T}_2 - \mathbf{T}_1)$					
$= \frac{\rho x q v x C x \Delta T}{1 x 70 x 4.186 x}$	10 ³ x 4.0				
= = 60					
= 19535 [J/s] ≈ 19535 [W] = 19.5 [kW]				
Cooling capacity = Considering a safety factor of 20%, 19.5 [kW] x 1.2 = 23.4 [kW]					

qv: Circulating fluid flow

2: Return

HRSH250-A

Example of conventional units (Reference)
Heat generation amount by user's equipment \mathbf{Q} : Unknown [cal/h] \rightarrow [W] Circulating fluid : Tap water*1 Circulating fluid weight flow rate \mathbf{qm} : (= $\rho \times \mathbf{qv} \times 60$) [kgf/h] Circulating fluid weight volume ratio γ : 1 [kgf/L] Circulating fluid (volume) flow rate \mathbf{qv} : 70 [L/min] Circulating fluid specific heat \mathbf{C} : 1.0 x 10 ³ [cal/(kgf.°C)] Circulating fluid outlet temperature $\mathbf{T1}$: 20 [°C] Circulating fluid return temperature $\mathbf{T2}$: 24 [°C] Circulating fluid temperature difference $\Delta \mathbf{T}$: 4 [°C] (= $\mathbf{T2} - \mathbf{T1}$) Conversion factor: hours to minutes : 60 [min/h] Conversion factor: kcal/h to kW : 860 [(cal/h)/W]
$Q = \frac{qm \ x \ C \ x \ (T_2 - T_1)}{860}$
$= \frac{\gamma \mathbf{x} \mathbf{q} \mathbf{v} \mathbf{x} 60 \mathbf{x} \mathbf{C} \mathbf{x} \Delta \mathbf{T}}{860}$
$=\frac{1 \times 70 \times 60 \times 1.0 \times 10^3 \times 4.0}{860}$
= <u>16800000 [cal/h]</u> 860
≈ 19534 [W] = 19.5 [kW]
Cooling capacity = Considering a safety factor of 20%, 19.5 [kW] x 1.2 = 23.4 [kW]

HRR

HRL

HRZ

HRZD

HRW

HECR

HEC

HEB

HED

echnical Data

252

Courtesy of Steven Engineering, Inc - (800) 258-9200 - sales@steveneng.com - www.stevenengineering.com

多SMC


HRSH Series


Required Cooling Capacity Calculation

Example 3: When there is no heat generation, and when cooling the object below a certain temperature and period of time.

Heat quantity by cooled substance (per unit time)	Q : Unknown [W] ([J/s])
Cooled substance	: Water
Cooled substance mass m	: (= ρ x V) [kg]
Cooled substance density ρ	: 1 [kg/L]
Cooled substance total volume V	: 300 [L]
Cooled substance specific heat C	: 4.186 x 10³ [J/(kg·K)]
Cooled substance temperature when cooling begins	To : 305 [K] (32 [°C])
Cooled substance temperature after t hour Tt	: 293 [K] (20 [°C])
Cooling temperature difference ΔT	: 12 [K] (= To – T t)
Cooling time $\Delta \mathbf{t}$: 900 [s] (= 15 [min])

* Refer to the following for the typical physical property values by circulating fluid.



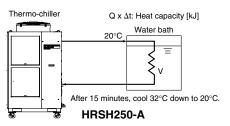

Example of conventional unit	ts (Reference)			
Heat quantity by cooled substance (per unit time)	$\mathbf{i}: Unknown [cal/h] \rightarrow [W]$			
Cooled substance	:Water			
Cooled substance weight m	: (= ρ x V) [kgf]			
Cooled substance weight volume ratio γ	: 1 [kgf/L]			
Cooled substance total volume V	: 300 [L]			
Cooled substance specific heat C	: 1.0 x 10 ³ [cal/(kgf·°C)]			
Cooled substance temperature when cooling begins T	o:32 [°C]			
Cooled substance temperature after t hour T	t : 20 [°C]			
Cooling temperature difference ΔT	: 12 [°C] (= T 0 − T t)			
Cooling time $\Delta \mathbf{t}$: 15 [min]			
Conversion factor: hours to minutes	: 60 [min/h]			
Conversion factor: kcal/h to kW	: 860 [(cal/h)/W]			
$\mathbf{Q} = \frac{\mathbf{m} \mathbf{x} \mathbf{C} \mathbf{x} (\mathbf{T}_0 - \mathbf{T}_t)}{\Delta t \mathbf{x} 860} = \frac{\gamma \mathbf{x} \mathbf{V} \mathbf{x} \mathbf{e}}{\Delta t}$	60 x C x ∆T x 860			
1 x 300 x 60 x 1.0 x 10 ³ x 12				
= <u>15 x 860</u>	_			
≈ 16744 [W] = 16.7 [kW]				
Cooling capacity = Considering a	safety factor of 20%,			
16.7 [kW] x 1.2 = 20 [kW]				

This is the calculated value by changing the fluid temperature only. Thus, it varies substantially depending on the water bath or piping shape.

Precautions on Cooling Capacity Calculation

1. Heating capacity

When the circulating fluid temperature is set above room temperature, it needs to be heated by the thermo-chiller. The heating capacity depends on the circulating fluid temperature. Consider the radiation rate and heat capacity of the user's equipment and check beforehand if the required heating capacity is provided.

2. Pump capacity

<Circulating fluid flow rate>

Circulating fluid flow rate varies depending on the circulating fluid discharge pressure. Consider the installation height difference between the thermo-chiller and the user's equipment, and the piping resistance such as circulating fluid pipings, or piping size, or piping curves in the machine. Check beforehand if the required flow is achieved, using the pump capacity curves.

<Circulating fluid discharge pressure>

Circulating fluid discharge pressure has the possibility to increase up to the maximum pressure in the pump capacity curves. Check beforehand if the circulating fluid pipings or circulating fluid circuit of the user's equipment are fully durable against this pressure.

Circulating Fluid Typical Physical Property Values

1. This catalog uses the following values for density and specific heat in calculating the required cooling capacity. Density ρ : 1 [kg/L] (or, using conventional units, weight volume ratio $\gamma = 1$ [kg/L])

Specific heat C: 4.19 x 103 [J/(kg·K)] (or, using conventional units, 1 x 103 [cal/(kgf·°C)])

2. Values for density and specific heat change slightly according to temperature shown below. Use this as a reference.

water					
Physical property		Specific heat C	Conventie	onal units	
Temperature	[kg/L]	[J/(kg·K)]	Weight volume ratio γ [kgf/L]	Specific heat C [cal/(kgf.°C)]	
5°C	1.00	4.2 x 10 ³	1.00	1 x 10 ³	
10°C	1.00	4.19 x 10 ³	1.00	1 x 10 ³	
15°C	1.00	4.19 x 10 ³	1.00	1 x 10 ³	
20°C	1.00	4.18 x 10 ³	1.00	1 x 10 ³	
25°C	1.00	4.18 x 10 ³	1.00	1 x 10 ³	
30°C	1.00	4.18 x 10 ³	1.00	1 x 10 ³	
35°C	0.99	4.18 x 10 ³	0.99	1 x 10 ³	
40°C	0.99	4.18 x 10 ³	0.99	1 x 10 ³	

15% Ethylene Glycol Aqueous Solution

		/ /			
Physical property		Specific heat C	Conventional units		
Temperature	[kg/L]	[J/(kg·K)]	Weight volume ratio γ [kgf/L]	Specific heat C [cal/(kgf.°C)]	
5°C	1.02	3.91 x 10 ³	1.02	0.93 x 10 ³	
10°C	1.02	3.91 x 10 ³	1.02	0.93 x 10 ³	
15°C	1.02	3.91 x 10 ³	1.02	0.93 x 10 ³	
20°C	1.01	3.91 x 10 ³	1.01	0.93 x 10 ³	
25°C	1.01	3.91 x 10 ³	1.01	0.93 x 10 ³	
30°C	1.01	3.91 x 10 ³	1.01	0.94 x 10 ³	
35°C	1.01	3.91 x 10 ³	1.01	0.94 x 10 ³	
40°C	1.01	3.92 x 10 ³	1.01	0.94 x 10 ³	

* Shown above are reference values. Contact circulating fluid supplier for details.





Be sure to read this before handling the products. Refer to page 513 for safety instructions and pages 514 to 517 for temperature control equipment precautions.

Design

\land Warning

1. This catalog shows the specifications of a single unit.

- 1) Check the specifications of the single unit (contents of this catalog) and thoroughly consider the adaptability between the user's system and this unit.
- 2) Although a protection circuit as a single unit is installed, prepare a drain pan, water leakage sensor, discharge air facility, and emergency stop equipment, depending on the user's operating conditions. Also, the user is requested to carry out a safety design for the whole system.
- 2. When attempting to cool areas that are open to the atmosphere (tanks, pipes), plan your piping system accordingly.

When cooling open-air external tanks, arrange the piping so that there are coil pipes for cooling inside the tanks and to carry back the entire flow volume of circulating fluid that is released.

3. Use non-corrosive material for circulating fluid and facility water contact parts.

Using corrosive materials such as aluminum or iron for fluid contact parts such as piping may cause clogging or leakage in the circulating fluid and facility water circuits. Provide protection against corrosion when you use the product.

4. The facility water outlet temperature (water-cooled type) may increase up to around 60°C. When selecting the facility water pipings, consider the suitabili-

When selecting the facility water pipings, consider the suitability for temperature.

Selection

\land Warning

Model selection

When selecting a thermo-chiller model, the amount of heat generation from the user's equipment must be known. Obtain this value, referring to "Cooling Capacity Calculation" on pages 252 and 253 before selecting a model.

Handling

\land Warning

Thoroughly read the operation manual.

Read the operation manual completely before operation, and keep the manual where it can be referred to as necessary.

Operating Environment/Storage Environment

\land Warning

1. Do not use in the following environment as it will lead to a breakdown.

- 1) In locations where water vapor, salt water, and oil may splash on the product.
- 2) In locations where there are dust and particles.
- 3) In locations where corrosive gases, organic solvents, chemical fluids, or flammable gases are present. (This product is not explosion proof.)

Operating Environment/Storage Environment

🗥 Warning

4) In locations where the ambient temperature exceeds the limits as mentioned below.

During transportation/storage: -15°C to 50°C (But as long as water or circulating fluid are not left inside the pipings) During operation: Air cooling type: -20 to 45°C Water cooling type: 2 to 45°C * When the ambient temperature or circulating fluid temperature is 10°C or below, use the circulating fluid specified in "Operation at low ambient temperature".

- 5) In locations where condensation may occur.
- 6) In locations which receive direct sunlight or radiated heat.
- 7) In locations where there is a heat source nearby and the
- ventilation is poor. 8) In locations where temperature substantially changes.
- 9) In locations where strong magnetic noise occurs.
- (In locations where strong electric fields, strong magnetic fields and surge voltage occur.)
- 10) In locations where static electricity occurs, or conditions which make the product discharge static electricity.
- 11) In locations where high frequency occurs.
- 12) In locations where damage is likely to occur due to lightning.13) In locations at an altitude of 3000 m or higher (Except
 - during storage and transportation)
 - For altitudes of 1000 m or higher Because of lower air density, the heat radiation efficiencies of the devices in the product will be lower in the location at an altitude of 1000 m or higher. Therefore, the maximum ambient temperature to use and the cooling capacity will lower according to the descriptions in the table below. Select the thermo-chiller considering the descriptions.
 - Upper limit of ambient temperature: Use the product in ambient temperature of the described value or lower at each altitude.
 - ② Cooling capacity coefficient: The product's cooling capacity will lower to one that multiplied by the described value at each altitude.

Altitude [m]	1) Upper limit of ambient temperature [°C]	② Cooling capacity coefficient
Less than 1000 m	45	1.00
Less than 1500 m	42	0.85
Less than 2000 m	38	0.80
Less than 2500 m	35	0.75
Less than 3000 m	32	0.70

If heat from the product cannot be sufficiently radiated due to a rise in the ambient temperature, a lack of ventilation, high elevation, etc., the refrigerant circuit pressure on the high pressure side will rise. As a result, the compressor will overload, affecting product performance and life, so be sure to check the value of the refrigerant circuit pressure on the high pressure side. Refer to the operation manual for details on how to check the value of the refrigerant circuit pressure on the high pressure side.

- 14) In locations where strong impacts or vibrations occur.
- 15) In locations where a massive force strong enough to deform the product is applied or a weight from a heavy object is applied.
- 16) In locations where there is not sufficient space for maintenance.
- 17) In locations where liquid that exceeds the conditions required for the degrees of protection IPX4 may splash on the product.18) Insects or plants may enter the unit.
- 2. The product is not designed for clean room usage. It generates particles internally.

HRS HRS-R HRS 100/150 HRS090 HRS200 HRSH090 HRSH HRSE HRR HRL HRZ HRZD HRW HECR HEC HEB HED Technical Data



Be sure to read this before handling the products. Refer to page 513 for safety instructions and pages 514 to 517 for temperature control equipment precautions.

Operation at Low Ambient Temperature or Low Circulating Fluid Temperature

A Caution

1. Circulating fluid

In order to avoid freezing of the circulating fluid, use aqueous solution of ethylene glycol.

-5 to 10 Ethylene glycol aqueous solution 15 (wt)%	Ambient temperature [°C]	Recommended circulating fluids
	10 to 45	Tap water, ethylene glycol aqueous solution 15 (wt)%
20 to E Ethylopo glyppi gyuppy polytion 40 (ut)%	-5 to 10	Ethylene glycol aqueous solution 15 (wt)%
=20 to =5 Einviene giveor aqueous solution 40 (wt)%	-20 to -5	Ethylene glycol aqueous solution 40 (wt)%

Circulating fluid temperature[°C]	Recommended circulating fluids
10 to 35	Tap water, ethylene glycol aqueous solution 15 (wt)%
5 to 10	Ethylene glycol aqueous solution 15 (wt)%

- * Concentration has to be 40 (wt)% or less. If the concentration is higher than 40 (wt)%, pump could be overloaded and Thermo-chiller makes alarm.
- * When 40% ethylene glycol aqueous solution is used, cooling capacity decreases by 20%.

2. And following instructions must be executed. If following instructions are not executed, not only Thermo-chiller alarm will be generated, but also damage of the product can result.

- Power has to be supplied to the Thermo-chiller all the time.
- Turn on anti-freezing function (set parameter: SE.10) all the time.
- When the power supply to the Thermo-chiller is stopped for a long period of time, discharge all the circulating fluid in the Thermo-chiller and user's device and piping. When the Thermo-chiller is refilled with the circulating fluid, supply the fluid at normal temperature.

Operation at High Ambient Temperature

A Caution

Check the value of the refrigerant circuit pressure on the high pressure side.

If heat from the product cannot be sufficiently radiated due to a rise in the ambient temperature, a lack of ventilation, high elevation, etc., the refrigerant circuit pressure on the high pressure side will rise. As a result, the compressor will overload, affecting product performance and life.


Refer to the operation manual for details on how to check the value of the refrigerant circuit pressure on the high pressure side.

Transportation/Carriage/Movement

\land Warning

1. This product will require an acceptance with the product not unloaded from the truck, and the user will need to unload the product by himself. Prepare a forklift.

The product will be delivered in the packaging shown below.

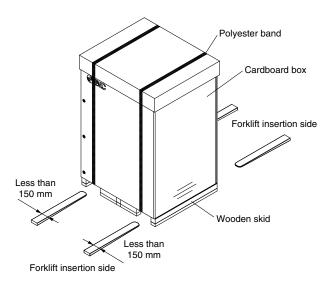

<When packaged>

Model	Weight [kg]	Dimensions [mm]
HRSH100-A□-□	221	
HRSH150-A□-□	256	Height 1585 x Width 1185 x Depth 955
HRSH200-A□-□	200	
HRSH250-A□-□	330	Height 1895 x Width 1230 x Depth 1040
HRSH100-W	185	
HRSH150-W		Height 1485 x Width 925 x Depth 955
HRSH200-W	215	neight 1465 x whath 925 x Depth 955
HRSH250-W□-□		
HRSH100-A□-A	240	
HRSH150-A□-A	275	Height 1710 x Width 1185 x Depth 955
HRSH200-A□-A	275	
HRSH250-A□-A HRSH300-A□-A	355	Height 2020 x Width 1230 x Depth 1040
	004	
HRSH100-WD-A	204	
HRSH150-W□-A		Height 1610 x Width 925 x Depth 955
HRSH200-W□-A	234	
HRSH250-W□-A		

2. Transporting with forklift

- 1) A licensed driver should drive the forklift.
- 2) The proper place to insert the tines of the forklift differs depending on the model of cooler. Check the insert position, and be sure to drive the fork in far enough for it to come out the other side.
- 3) Be careful not to bump the fork to the cover panel or piping ports.




Be sure to read this before handling the products. Refer to page 513 for safety instructions and pages 514 to 517 for temperature control equipment precautions.

Transportation/Carriage/Movement

\land Warning

3. Hanging transportation

- 1) Crane manipulation and slinging work should be done by an eligible person.
- 2) Do not grip the piping on the right side or the handles of the panel.
- 3) When hanging by the eye bolts, be sure to use a 4-point hanging method. For the hanging angle, use caution regarding the position of the center of gravity and hold it within 60°.

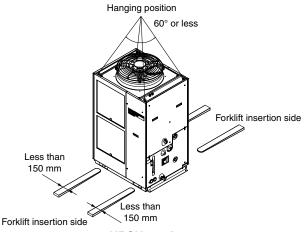

HRSH250-A-20

(When using option A/With caster adjuster-foot and optional accessories/Caster adjuster-foot kit HRS-KS001 or KS002) 4. Transporting with casters

- 1) This product is heavy and should be moved by at least two people.
- 2) Do not grip the piping port on the right side or the handles of the panel.
- 3) When transporting using a forklift, be sure not to let it hit the casters or adjusters, and drive the fork all the way through until it comes out the other side.
- 4) Do not get across steps with casters.

A Caution

If this product is to be transported after delivery, please use the original packaging the product was delivered in. If other packaging is to be used, carefully package the product so as to prevent the product from incurring any damage during transport.

Mounting/Installation

\land Warning

Do not place heavy objects on top of this product, or step on it.

The external panel can be deformed and danger can result.

A Caution

- 1. Install on a rigid floor which can withstand this product's weight.
- 2. Secure with bolts, anchor bolts, etc.


Mounting/Installation

A Caution

3. Refer to the operation manual for this product, and secure an installation space that is necessary for the maintenance and ventilation.

<Air-cooled refrigeration>

- 1. The air-cooled type product exhausts heat using the fan that is mounted to the product. If the product is operated with insufficient ventilation, ambient temperature may exceed 45°C, and this will affect the performance and life of the product. To prevent this ensure that suitable ventilation is available (see below).
- 2. For installation indoors, ventilation ports and a ventilation fan should be equipped as needed.

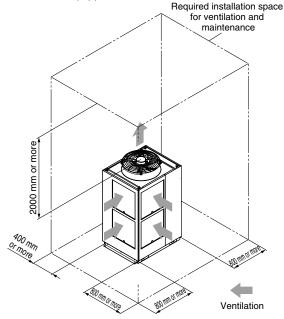

HRSH250-A

3. If it is impossible to exhaust heat from the installation area indoors, or when the installation area is conditioned, provide a duct for heat exhaustion to the air outlet port of this product for ventilation. Do not mount the inlet of the duct (flange) directly to the air vent of the product, and keep a space larger than the diameter of the duct. Additionally, consider the resistance of the duct when making the air vent port for the duct.

<Heat radiation amount/Required ventilation rate>

	Heat		Required ventilation rate [m3/min]		
Model	radiation	Differential temp. of 3°C	Differential temp. of 6°C		
Moder	amount	between inside and	between inside and		
[kW]		outside of installation area	outside of installation area		
HRSH100-A	Approx. 18	305	155		
HRSH150-A	Approx. 29	490	245		
HRSH200-A	Approx. 35	590	295		
HRSH250-A	Approx. 44	730	365		
HRSH300-A	Approx. 45	760	380		

4. If heat from the product cannot be sufficiently radiated due to a rise in the ambient temperature, a lack of ventilation, high elevation, etc., the refrigerant circuit pressure on the high pressure side will rise. As a result, the compressor will overload, affecting product performance and life, so be sure to check the value of the refrigerant circuit pressure on the high pressure side. Refer to the operation manual for details on how to check the value of the refrigerant circuit pressure on the high pressure side.




Be sure to read this before handling the products. Refer to page 513 for safety instructions and pages 514 to 517 for temperature control equipment precautions.

Mounting/Installation

A Caution

<Water-cooled refrigeration>

When installing the product, keep the space for maintenance as shown below.

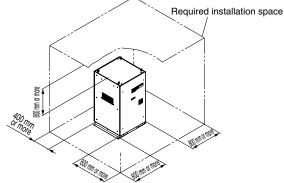

4. When using the product at a low ambient temperature (10°C or less), refer to "Operation at low ambient temperature or low circulating fluid temperature" (page 255).

Piping

▲ Caution

1. The circulating fluid and facility water piping should be prepared by the customer with consideration of the operating pressure, temperature, and circulating fluid/facility compatibility.

If the operating performance is not sufficient, the pipings may burst during operation. Also, the use of corrosive materials such as aluminum or iron for fluid contact parts, such as piping, may not only lead to clogging or leakage in the circulating fluid and facility water circuits but also refrigerant leakage and other unexpected problems. Provide protection against corrosion when you use the product.

- **2. Select the piping port size which can exceed the rated flow.** For the rated flow, refer to the pump capacity table.
- 3. When tightening at the drain port of this product, use a pipe wrench to clamp the connection ports.
- 4. Supply water pressure to the automatic fluid fill port of this product should be 0.2 to 0.5 MPa. This product has a built in ball (float) tap. If you attach it to the

This product has a built-in ball (float) tap. If you attach it to the faucet of a sink, etc. it will automatically supply water to the rated fluid level of the tank (halfway between HIGH and LOW.) If the water supply pressure is too high, the pipes may burst during use. Proceed with caution.

- 5. Ensure that piping is connected to the overflow port so that the circulating fluid can be exhausted to the drainage pit when the fluid level in the tank increases.
- 6. For the circulating fluid piping connection, install a drain pan and wastewater collection pit just in case the circulating fluid may leak.
- 7. This product series are constant-temperature fluid circulating machines with built-in tanks.

Do not install equipment on your system side such as pumps that forcibly return the circulating fluid to the unit. Also, if you attach an external tank that is open to the air, it may become impossible to circulate the circulating fluid. Proceed with caution.

 The facility water flow rate is adjusted automatically according to the operating conditions.

In addition, the facility water return temperature is 60°C at maximum. @ 257

Electrical Wiring


\land Warning

Grounding should never be connected to a water line, gas line or lightning rod.

\land Caution

- 1. Power supply and communication cables should be prepared by user.
- 2. Provide a stable power supply which is not affected by surge or distortion.


If the voltage increase ratio (dV/dt) at the zero cross should exceed 40 V/200 $\mu sec.,$ it may result in malfunction.

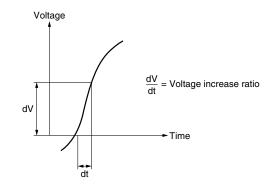

<For 400 V type and option B [With earth leakage breaker]>

3. This product is installed with a breaker with the following operating characteristics.

For the user's equipment (inlet side), use a breaker whose operating time is equal to or longer than the breaker of this product. If a breaker with shorter operating time is connected, the user's equipment could be cut off due to the inrush current of the motor of this product.

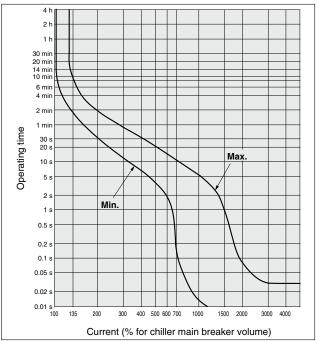



Be sure to read this before handling the products. Refer to page 513 for safety instructions and pages 514 to 517 for temperature control equipment precautions.

Circulating Fluid

▲ Caution

- 1. Avoid oil or other foreign matter entering the circulating fluid.
- 2. When water is used as a circulating fluid, use tap water that conforms to the appropriate water quality standards.

Use tap water that conforms to the standards shown below (including water used for dilution of ethylene glycol aqueous solution).

Tap Water (as a Circulating Fluid) Quality Standards

The Japan Refrigeration and Air Conditioning Industry Association

JRA	A GL-02-1994 "Cooling water system – Circulation type – Make-up water"				
		Unit		Influence	
	Item		Standard value	Corrosion	Scale
					generation
	pH (at 25°C)	—	6.0 to 8.0	0	0
Ē	Electric conductivity (25°C)	[µS/cm]	100*1 to 300*1	0	0
item	Chloride ion (CI⁻)	[mg/L]	50 or less	0	
	Sulfuric acid ion (SO ₄ ^{2–})	[mg/L]	50 or less	0	
Standard	Acid consumption amount (at pH4.8)	[mg/L]	50 or less		0
itar	Total hardness	[mg/L]	70 or less		0
05	Calcium hardness (CaCO ₃)	[mg/L]	50 or less		0
	Ionic state silica (SiO ₂)	[mg/L]	30 or less		0
E	Iron (Fe)	[mg/L]	0.3 or less	0	0
item	Copper (Cu)	[mg/L]	0.1 or less	0	
ce	Sulfide ion (S ₂ ⁻)	[mg/L]	Should not be detected.	0	
Reference	Ammonium ion (NH ₄ +)	[mg/L]	0.1 or less	0	
efe	Residual chlorine (CI)	[mg/L]	0.3 or less	0	
Ē	Free carbon (CO ₂)	[mg/L]	4.0 or less	0	

*1 In the case of [M Ω ·cm], it will be 0.003 to 0.01.

• O: Factors that have an effect on corrosion or scale generation.

• Even if the water quality standards are met, complete prevention of corrosion is not guaranteed.

- 3. Use an ethylene glycol aqueous solution that does not contain additives such as preservatives.
- 4. Refer to "Operation at low ambient temperature or low circulating fluid temperature" (page 255) for the concentration of the ethylene glycol aqueous solution.
- 5. When deionized water is used, the electric conductivity should be 1 μ S/cm or higher (Electric resistivity: 1 M Ω ·cm or lower).

Facility Water Supply

\land Warning

<Water-cooled refrigeration>

- 1. The water-cooled refrigeration type thermo-chiller radiates heat to the facility water.
 - Prepare the facility water system that satisfies the heat radiation and the facility water specifications below.

Required facility water system

<Heat radiation amount/Facility water specifications>

Model	Heat radiation [kW]	Facility water specifications
HRSH100-W□-□	Approx. 20	
HRSH150-W□-□	Approx. 27	Refer to "Facility water system" in the specifications on pages
HRSH200-W□-□	Approx. 34	234 and 236.
HRSH250-W□-□	Approx. 40	204 and 200.

Facility Water Supply

\land Warning

2. When using tap water as facility water, use tap water that conforms to the appropriate water quality standards. Use water that conforms to the standards shown below. If the water quality standards are not met, clogging or leakage in the facility water piping, or other problems such as refrigerant leakage, etc., may result.

Tap Water (as Facility Water) Quality Standards The Japan Refrigeration and Air Conditioning Industry Association

JRA GL-02-1994 "Cooling water system – Circulation type – Make-up water"

	Itom	Unit	Standard value	Influence	
	Item Un		Standard value	Corrosion	Scale generation
	pH (at 25°C)	_	6.5 to 8.2	0	0
_	Electric conductivity (25°C)	[µS/cm]	100*1 to 800*1	0	0
item	Chloride ion (CI-)	[mg/L]	200 or less	0	
	Sulfuric acid ion (SO42-)	[mg/L]	200 or less	0	
Standard	Acid consumption amount (at pH4.8)	[mg/L]	100 or less		0
star	Total hardness	[mg/L]	200 or less		0
0	Calcium hardness (CaCO ₃)	[mg/L]	150 or less		0
	Ionic state silica (SiO ₂)	[mg/L]	50 or less		0
E	Iron (Fe)	[mg/L]	1.0 or less	0	0
item	Copper (Cu)	[mg/L]	0.3 or less	0	
Ce	Sulfide ion (S2 ⁻)	[mg/L]	Should not be detected.	0	
rer	Ammonium ion (NH ₄ +)	[mg/L]	1.0 or less	0	
Reference	Residual chlorine (CI)	[mg/L]	0.3 or less	0	
æ	Free carbon (CO ₂)	[mg/L]	4.0 or less	0	

*1 In the case of [M Ω ·cm], it will be 0.001 to 0.01.

O: Factors that have an effect on corrosion or scale generation.
Even if the water quality standards are met, complete prevention of corrosion

• Even if the water quality standards are met, complete prevention of corrosion is not guaranteed.

3. Set the supply pressure between 0.3 to 0.5 MPa. Ensure a pressure difference at the facility water inlet/outlet of 0.3 MPa or more.

If the supply pressure is high, it will cause water leakage. If the supply pressure and pressure difference at the facility water inlet/outlet is low, it will cause an insufficient flow rate of the facility water, and poor temperature control.

Operation

🗥 Warning

1. Confirmation before operation

1) The fluid level of a tank should be within the specified range of "HIGH" and "LOW."

When exceeding the specified level, the circulating fluid will overflow. 2) Remove the air.

Conduct a trial operation, looking at the fluid level. Since the fluid level will go down when the air is removed from the user's piping system, supply water once again when the fluid level is reduced. When there is no reduction in the fluid level, the job of removing the air is completed. Pump can be operated independently.

2. Confirmation during operation

• Check the circulating fluid temperature.

The operating temperature range of the circulating fluid is between 5 and 35°C.

When the amount of heat generated from the user's equipment is greater than the product's capability, the circulating fluid temperature may exceed this range. Use caution regarding this matter.

3. Emergency stop method

• When an abnormality is confirmed, stop the machine immediately. After the machine has stopped, make sure to turn off the breaker of the user's equipment (on the upstream side). 258



Be sure to read this before handling the products. Refer to page 513 for safety instructions and pages 514 to 517 for temperature control equipment precautions.

Operation Restart Time/Operation and Suspension Frequency

A Caution

- 1. Wait five minutes or more before restarting operation after it has been stopped. If the operation is restarted within five minutes, the protection circuit may activate and the operation may not start properly.
- 2. Operation and suspension frequency should not exceed 10 times per day. Frequently switching between operation and suspension may result in the malfunction of the refrigeration circuit.

Protection Circuit

▲ Caution

If operating in the below conditions, the protection circuit will activate and an operation may not be performed or will stop.

- · Power supply voltage is not within the rated voltage range of ±10%.
- In case the water level inside the tank is reduced abnormally.
- · Circulating fluid temperature is too high.
- · Compared to the cooling capacity, the heat generation amount of the user's equipment is too high.
- Ambient temperature is over 45°C.
- Ventilation hole is clogged with dust or dirt.

Maintenance

∧ Caution

<Periodical inspection every one month> Clean the ventilation hole.

If the dustproof filter of water-cooled type product becomes clogged with dust or debris, a decline in cooling performance can result. In order to avoid deforming or damaging the dustproof filter, clean it with a long-haired brush or air gun.

<Periodical inspection every three months> Inspect the circulating fluid.

- 1. When using tap water or deionized water
- · Replacement of circulating fluid
- Failure to replace the circulating fluid can lead to the development of bacteria or algae. Replace it regularly depending on your usage conditions.
- 2. When using ethylene glycol aqueous solution Use a concentration meter to confirm that the concentration does not exceed 15%.

Dilute or add as needed to adjust the concentration.

<Periodical inspection during the winter season>

1. Make water-removal arrangements beforehand.

If there is a risk of the circulating fluid and facility water freezing when the product is stopped, release the circulating fluid and facility water in advance.

2. Consult a professional.

This product has an "anti-freezing function", "warming-up function", and "anti-snow coverage function." Read the operation manual carefully, and if any additional anti-freezing function (e.g. tape heater) is needed, ask for it from the vendor.

Maintenance

A Caution

<Periodical inspection during the summer season> Check the value of the refrigerant circuit pressure on the high pressure side.

If heat from the product cannot be sufficiently radiated due to a rise in the ambient temperature, a lack of ventilation, high elevation, etc., the refrigerant circuit pressure on the high pressure side will rise. As a result, the compressor will overload, affecting product performance and life.

Refer to the operation manual for details on how to check the value of the refrigerant circuit pressure on the high pressure side.

Refrigerant with GWP reference

	Global warming pote	Global warming potential (GWP)			
Refrigerant	Regulation (EU) No 517/2014 (Based on the IPCC AR4)	Revised Fluorocarbons Recovery and Destruction Law (Japanese law)			
R134a	1,430	1,430			
R404A	3,922	3,920			
R407C	1,774	1,770			
R410A	2,088	2,090			

* This product is hermetically sealed and contains fluorinated greenhouse gases (HFC). When this product is sold on the market in the EU after January 1, 2017, it needs to be compliant with the quota system of the F-Gas Regulation in the EU. See specification table for refrigerant used in the product.

